

YAMAHA

PARTS CATALOGUE

G8-AF (JF21)

YMMC (U.S.A.) PRODUCTION MODEL

19JF2-100E1

FOREWORD

This Parts Catalogue is related to the parts in use for the Yamaha GB-AN9 (JF21). When you are ordering replacement parts for the GB-AN9 (JF21), refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News. It is advisable that according to the Yamaha Parts News you make necessary corrections to the Parts Catalogue on hand to keep it up-to-date.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

- U.R. Use size (thickness) and/or number as required.
- U.N. Use as many as you need.
- A.P. Alternate Parts
- L.M. Local Made
- F# Frame No. (Applicable machine No.)

3. The parts marked with (*) in the parts number column of this Catalogue are not supplied with by Yamaha, those have to be found locally.

4. Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot (.) is put against the name of each part.

EXAMPLE

CARBURETOR ASS'Y

.JET, pilot

.NOZZLE, main

5. Indication of No. of constituent parts for assembly



The numeral appearing to the right of each constituent part under the description indicates the quantity of such parts for each individual assembly unit.

EXAMPLE

Part No.	Description	Q'ty	Remarks
2F5-83310-60	FRONT FLASHER LIGHT ASS'Y	2	
115-83311-60	.BULB (6V-18W)	1	
1M1-83309-60	.REFLECTOR	1	

6. Initial Serial No. and Color Code

(A) Frame Serial No.	JF2-000101 and following
(E) Engine Serial No.	_____

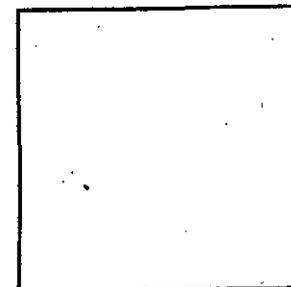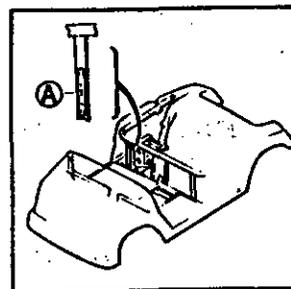

7. Applicable colors of graphics are represented in the "Remarks" column by the letter(s) appropriately picked out of the full word(s) showing such colors.

EXAMPLE

Part No.	Description	Q'ty	Remarks
2N4-24110-00-X5	FUEL TANK COMP.	1	MAXIM RED
3J1-24240-10	.GRAPHIC, fuel tank set	1	for MXR

CONTENTS

ENGINE

FIG. 1	Cylinder	1
FIG. 2	Crankshaft - Piston	2
FIG. 3	Camshaft - Valve	3
FIG. 4	Air Shroud - Fan	4
FIG. 5	Intake	5
FIG. 6	Carburetor	7
FIG. 7	Exhaust	8
FIG. 8	Crankcase	9
FIG. 9	Engine Bracket	11
FIG. 10	Rear Arm - Suspension	12

CHASSIS

FIG. 11	Frame	13
FIG. 12	Front Suspension - Wheel	14
FIG. 13	Steering	16
FIG. 14	Fuel Tank	18
FIG. 15	Brake	19
FIG. 16	Brake 2.....	22

FIG. 17	Accelerator	24
FIG. 18	Governor	25
FIG. 19	Primary Sheave	26
FIG. 20	Secondary Sheave	27
FIG. 21	Transmission 1	28
FIG. 22	Rear Axle - Wheel	31
FIG. 23	Bumper	32
FIG. 24	Body	33
FIG. 25	Body 2	35
FIG. 26	Body Fitting	36
FIG. 27	Carrier	37
FIG. 28	Seat	39
FIG. 29	Starting Motor	40
FIG. 30	Electrical 1	42
FIG. 31	Electrical 2	43
FIG. 32	Regular Hitch (Optional Parts)	44

INDEX

NUMERICAL INDEX


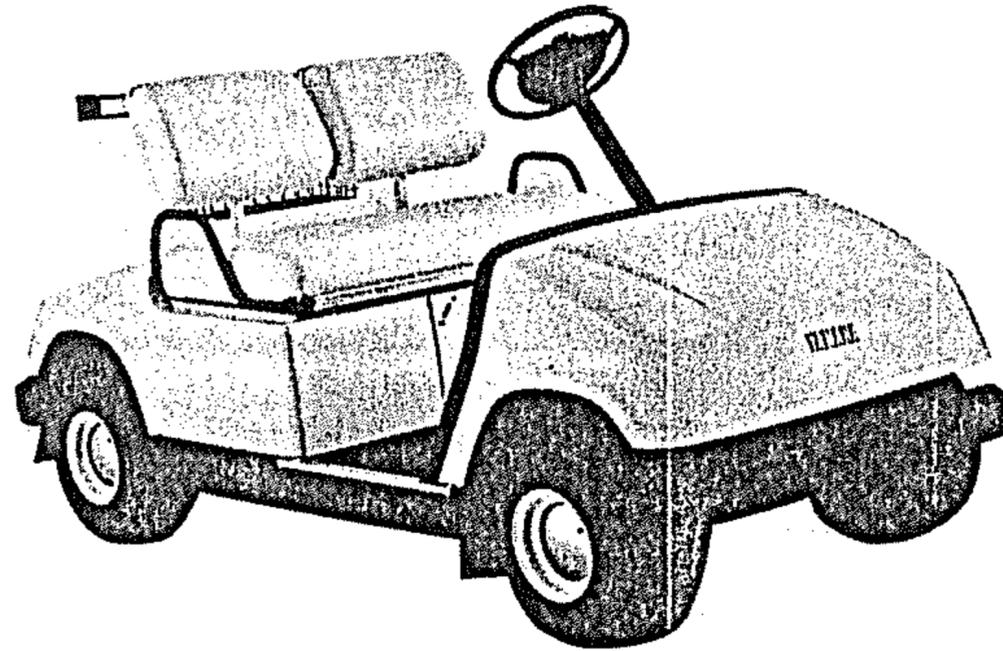


FIG. 1 CYLINDER




REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	J38-11102-00	CYLINDER HEAD ASSY	1	
2	J38-11133-09	.GUIDE, intake valve	2	
3	99510-12016	PIN, dowel	2	
4	95811-08070	BOLT, flange	3	
5	95812-08045	BOLT, flange	3	
6	J38-11181-00	GASKET, cylinder head 1	1	
7	95612-08618	BOLT, stud	2	
8	94702-00343	PLUG, spark	1	
9	J38-11191-00	COVER, cylinder head 1	1	
10	J38-11116-00	.JOINT, breather	2	
11	J38-24461-00	.PIPE, joint	1	
12	J38-11193-00	GASKET, head cover 1	1	
13	91316-06025	BOLT	4	
14	92990-08600	WASHER, plate	4	
15	90445-130F8	HOSE	1	
16	90467-12052	CLIP	2	

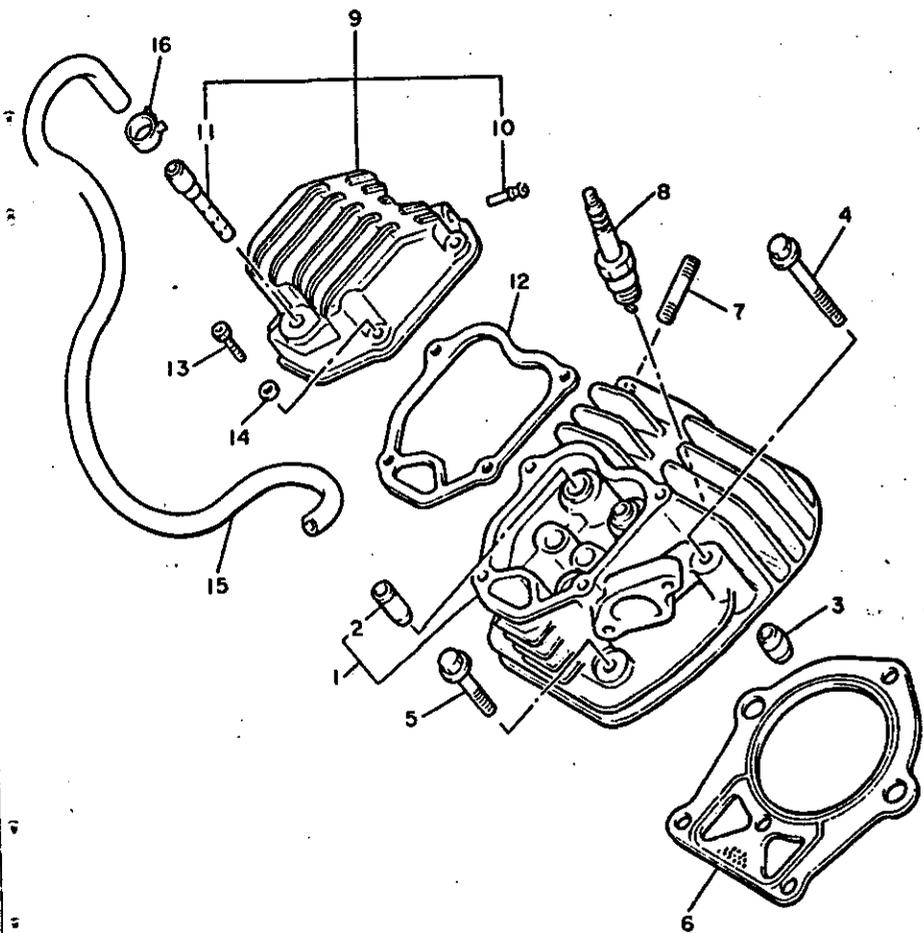

J50100-9010


FIG. 2 CRANKSHAFT, PISTON

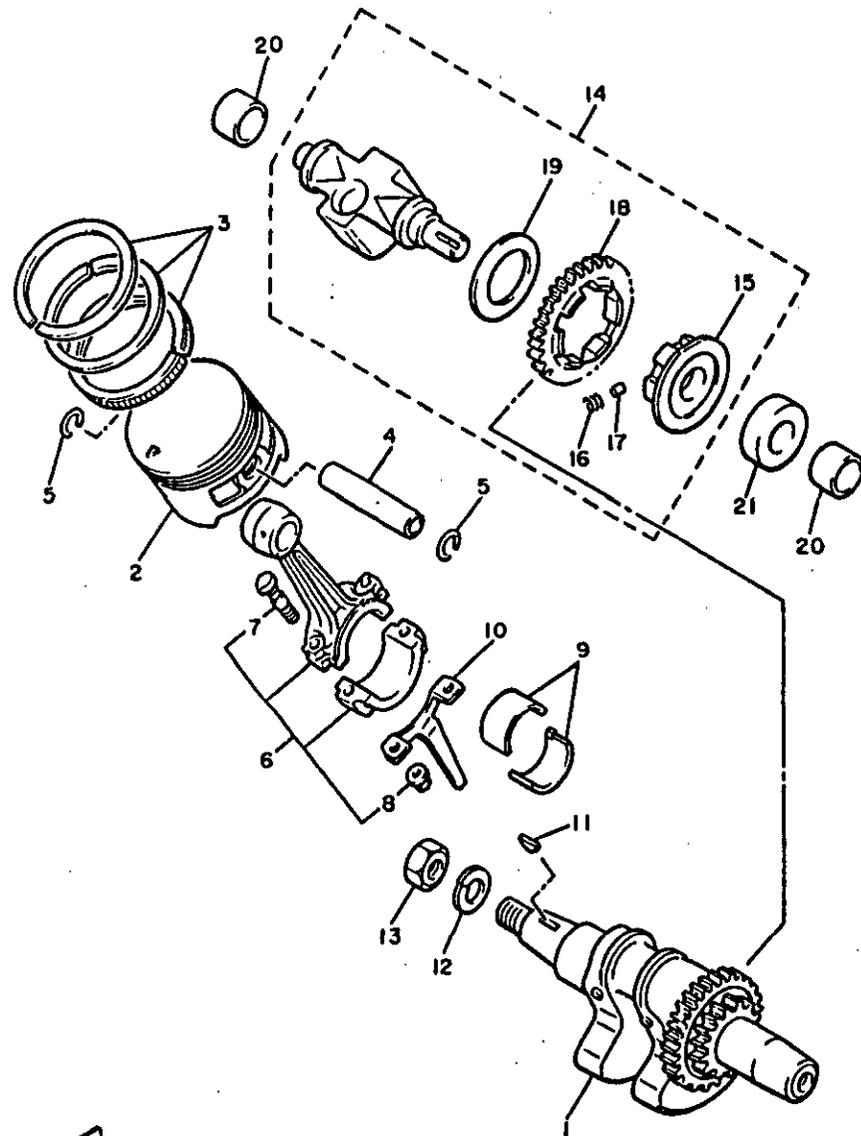

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	J38-11400-00	CRANKSHAFT ASSY	1	
2	J38-11631-01-A0	PISTON (STD)	1	
	J38-11635-01	PISTON (0.25MM O/S)	1	AP
	J38-11636-01	PISTON (0.50MM O/S)	1	AP
3	J38-11610-00	PISTON RING SET (STD)	1	
	J38-11610-10	PISTON RING SET (0.25MM O/S)	1	AP
	J38-11610-20	PISTON RING SET (0.50MM O/S)	1	AP
4	7A9-11633-00	PIN, piston	1	
5	93450-19047	CIRCLIP	2	
6	J38-11650-00	CONNECTING ROD ASSY	1	
7	J38-11654-00	.BOLT, connecting rod	2	
8	90179-08327	.NUT	2	
9	J38-11656-00	BEARING, con-rod (BROWN)	2	UR
	J38-11656-10	BEARING, con-rod (BRACK)	2	UR
	J38-11656-20	BEARING, con-rod (BLUE)	2	UR
10	J38-11657-00	SPLASHER, oil	1	
11	90280-05013	KEY, woodruff	1	
12	92901-16100	WASHER, spring	1	
13	90170-16182	NUT	1	
14	J38-11500-00	BALANCER ASSY	1	
15	J38-11496-00	.BOSS, buffer	1	
16	90501-21133	.SPRING, compression	6	
17	93805-10090	.PIN, dowel	3	
18	J38-11531-00	.GEAR, balance wt	1	
19	90201-201G9	.WASHER, plate	1	
20	90387-155R3	COLLAR	2	
21	90387-152M7	COLLAR	1	




FIG. 3 CAMSHAFT • VALVE

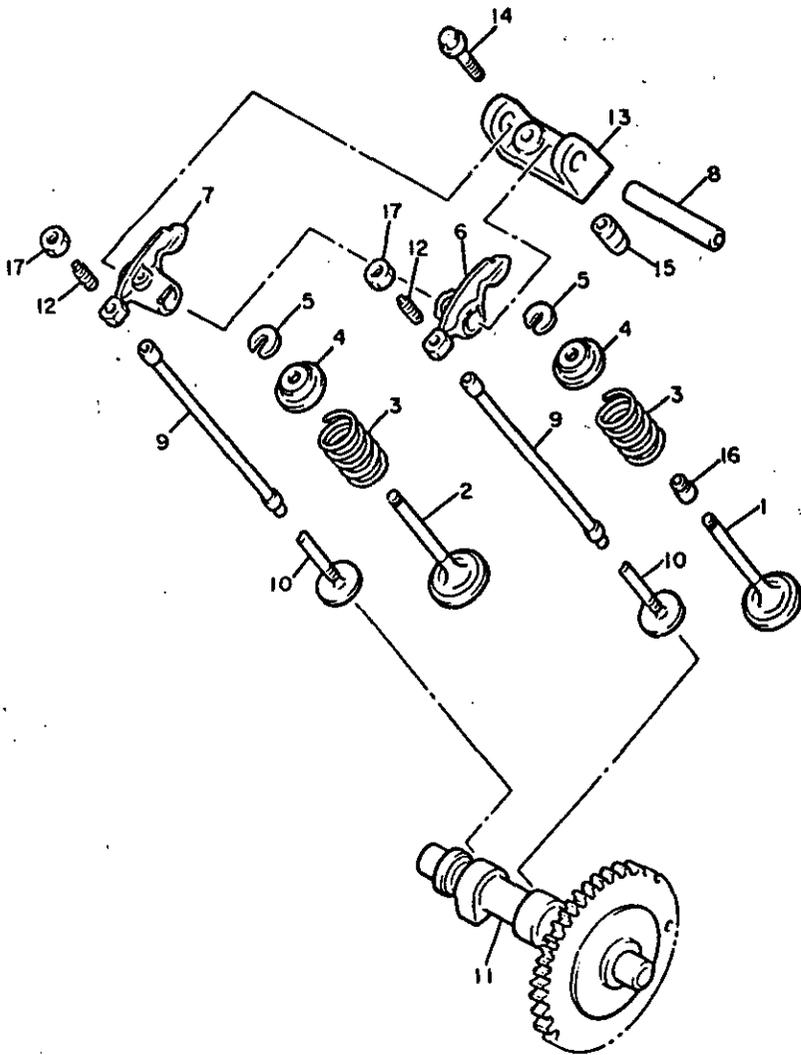

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-12111-01	VALVE, intake	1	
2	J38-12121-01	VALVE, exhaust	1	
3	90501-264A9	SPRING, compression	2	
4	J38-12117-01	RETAINER, valve spring	2	
5	J38-12118-00	COTTER, valve	2	
6	J38-12151-01	ARM, valve rocker	1	
7	J38-12181-01	ARM, valve rocker 2	1	
8	J38-12156-00	SHAFT, rocker 2	1	
9	J38-12154-00	ROD, valve push	2	
10	J38-12153-00	LIFTER, valve	2	
11	J38-12171-00	CAMSHAFT 1	1	
12	J38-12159-00	SCREW, valve adjusting	2	
13	J38-12152-00	SUPPORT, rocker arm	1	
14	95811-06030	BOLT, flange	2	
15	91810-09014	PIN, dowel	2	
16	5H0-12119-00	SEAL, valve stem	1	
17	90170-06128	NUT	2	


FIG. 4 AIR SHROUD • FAN

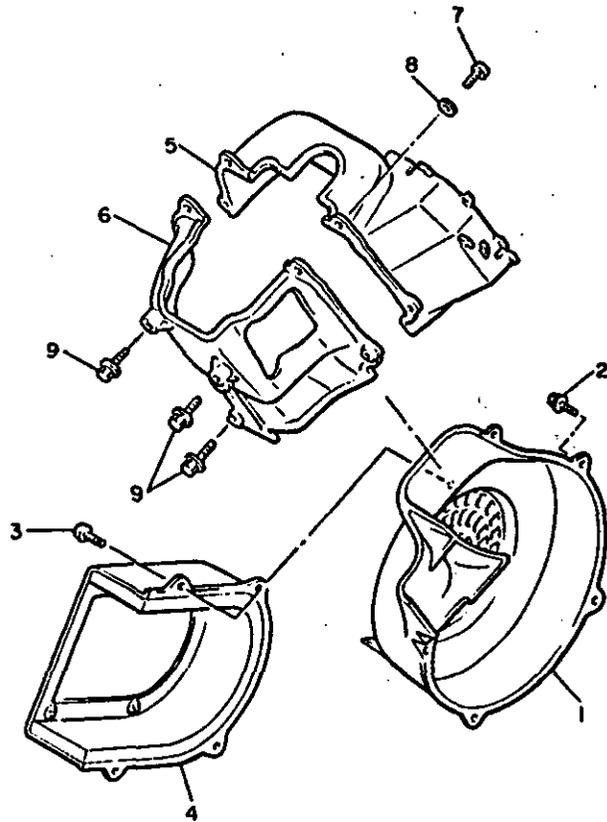

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-12621-01	CASE, fan	1	
2	95801-06020	BOLT, flange	5	
3	97780-60516	SCREW, tapping	4	
4	J38-12640-00	FAN CASE COVER COMP.	1	
5	J38-12651-01	AIR SHROUD, cylinder 1	1	
6	J38-12652-00	AIR SHROUD, cylinder 2	1	
7	98502-06016	SCREW, pan head	4	
8	92990-06600	WASHER, plate	4	
9	90109-06513	BOLT	4	




FIG. 5 INTAKE

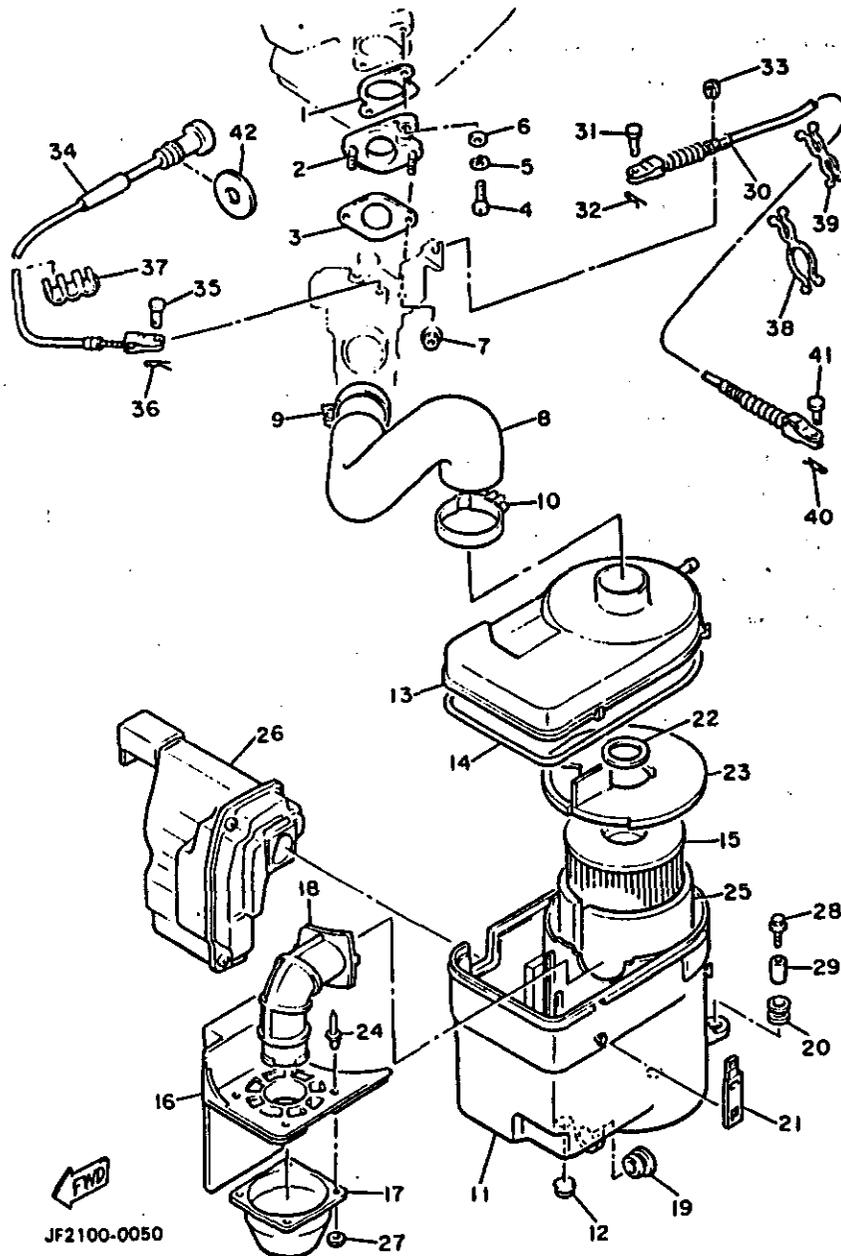

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-13556-00	GASKET, manifold	1	
2	J38-13596-00	JOINT, carburetor 2	1	
3	J38-13557-00	GASKET	1	
4	92501-06030	SCREW, pan head	2	
5	92990-06100	WASHER, spring	2	
6	92990-06600	WASHER, plate	2	
7	95601-06200	NUT, self-locking	2	
8	J38-14453-00	JOINT, air cleaner 1	1	
9	90460-43279	CLAMP, hose	1	
10	90460-53239	CLAMP, hose	1	
11	J38-14411-00	CASE, air cleaner 1	1	
12	90480-14100	GROMMET	2	
13	J38-14412-00	CAP, cleaner case 1	1	
14	55K-14476-00	SEAL	1	
15	J38-14450-00	ELEMENT ASSY, air cleaner	1	
16	J38-14484-00	PLATE, cleaner case fitting	1	
17	J38-14479-00	FUNNEL	1	
18	J38-14419-00	PIPE	1	
19	90480-18277	GROMMET	1	
20	90480-13238	GROMMET	2	
21	J10-14436-00	HOOK	4	
22	J38-14416-00	GASKET, air cleaner	1	
23	J38-1441F-00	PARTITION, air cleaner case	1	
24	90267-40073	RIVET, blind	4	
25	J10-14417-00	COVER 1	1	
26	J38-1446A-00	SURGE TANK ASSY	1	
27	90201-114E6	WASHER, plate	4	
28	90119-06097	BOLT, with washer	2	


FIG. 5 INTAKE

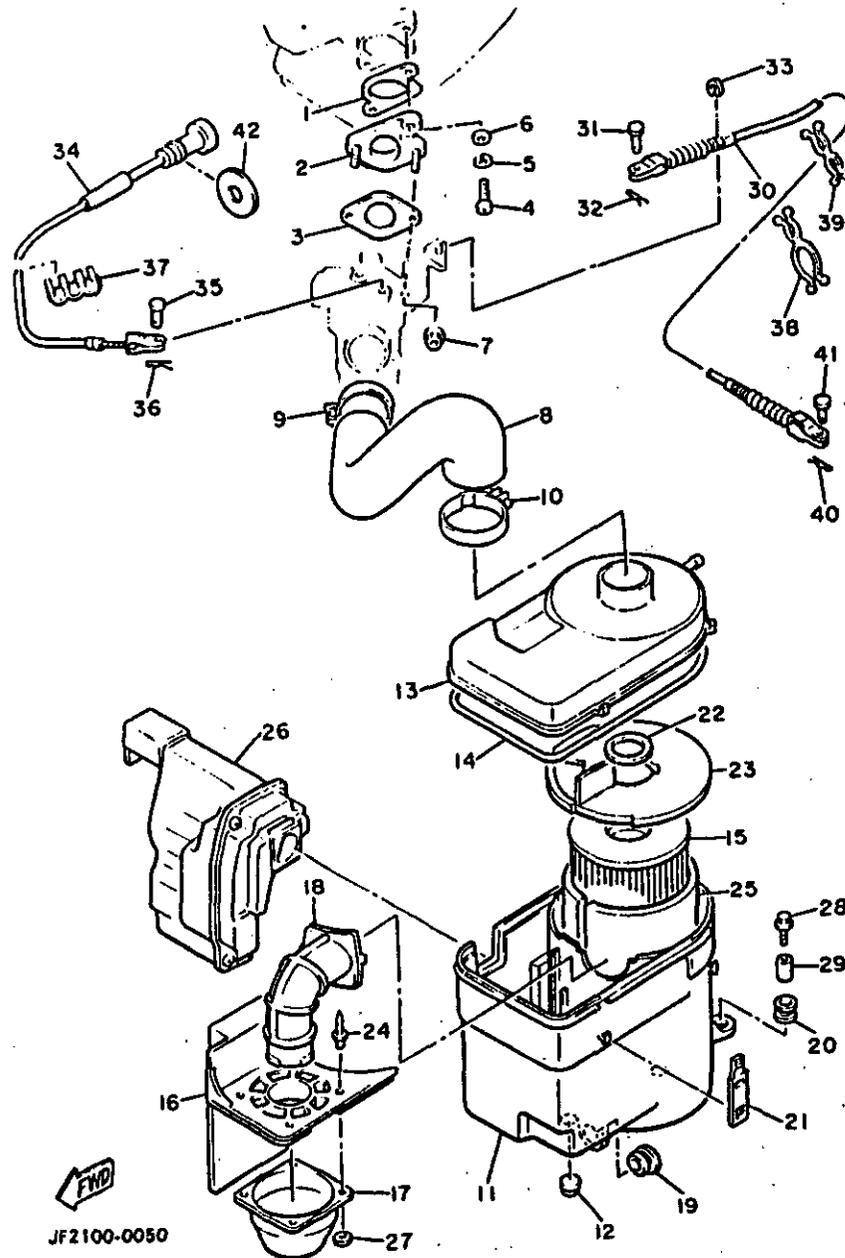

JF2100-0050

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90387-07390	COLLAR	2	
30	J38-26312-00	CABLE, throttle 2	1	
31	91701-05010	PIN, clevis	1	
32	90468-10049	CLIP	1	
33	99080-07600	CIRCLIP	1	
34	JF2-F6331-00	CABLE, starter 1	1	
35	91701-05010	PIN, clevis	1	
36	90468-10049	CLIP	1	
37	90468-07179	CLIP	1	
38	90464-26114	CLAMP	1	
39	90464-16115	CLAMP	2	
40	90468-10049	CLIP	1	
41	91701-05010	PIN, clevis	1	
42	90201-114E6	WASHER, plain	1	


FIG. 6 CARBURETOR

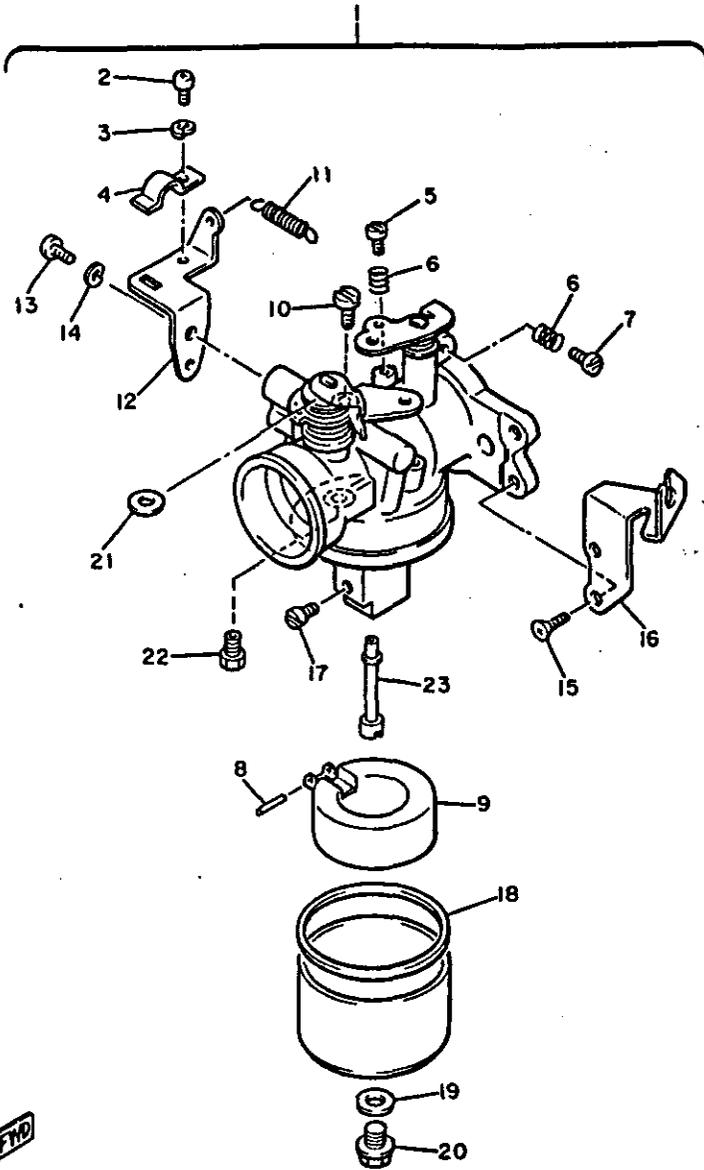

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-14101-00	CARBURETOR ASSY 1	1	
2	98501-05008	.SCREW, pan head	1	
3	92990-05100	.WASHER, spring	1	
4	J38-14243-00	.PLATE	1	
5	75G-14211-00	.SCREW, pilot adjusting	1	
6	620-14212-00	.SPRING, pilot adjusting	2	
7	J10-14122-00	.SCREW, throttle	1	
8	J38-14186-00	.PIN, float	1	
9	J38-14185-00	.FLOAT	1	
10	620-14142-72	.JET, pilot (# 72.5)	1	UR STD
	620-14142-67	.JET, pilot (# 67.5)	1	AP
11	J38-14133-00	.SPRING, throttle stop	1	
12	J38-14581-00	.BRACKET	1	
13	98501-08010	.SCREW, pan head	1	
14	92990-08100	.WASHER, spring	1	
15	98701-05008	.SCREW, flat head	2	
16	J38-14291-00	.BRACKET 1	1	
17	3G2-1423E-42	.JET, main (#106.3)	1	UR STD
	3G2-1423E-41	.JET, main (#103.8)	1	AP FOR HIGH LANDS
18	796-14184-00	.GASKET, float chamber	1	
19	127-14198-00	.GASKET	1	
20	7R1-14182-00	.BOLT, holding	1	
21	J10-14597-00	.WASHER	1	
22	J38-14150-00	.NEEDLE ASSY	1	
23	J38-14141-00	.NOZZLE, main	1	


FIG. 7 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	J55-E4710-00	MUFFLER ASSY 1	1	J38-14710-01
2	J38-14613-00	GASKET, exhaust pipe	1	
3	95380-08600	NUT	2	
4	92990-08100	WASHER, spring	2	
5	J38-14771-00	STAY, muffler 1	1	
6	95026-10020	BOLT, flange	2	
7	90119-08119	BOLT, with washer	2	

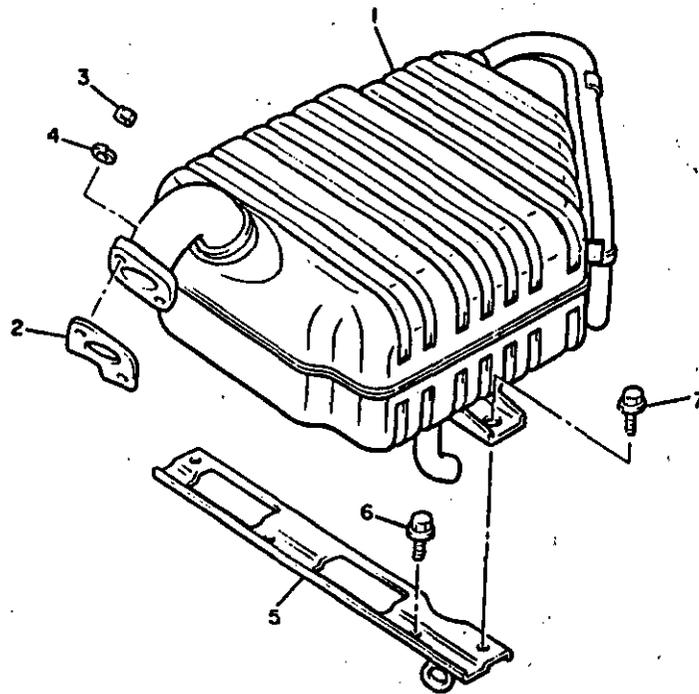

J55100-9070

FIG. 8 CRANKCASE

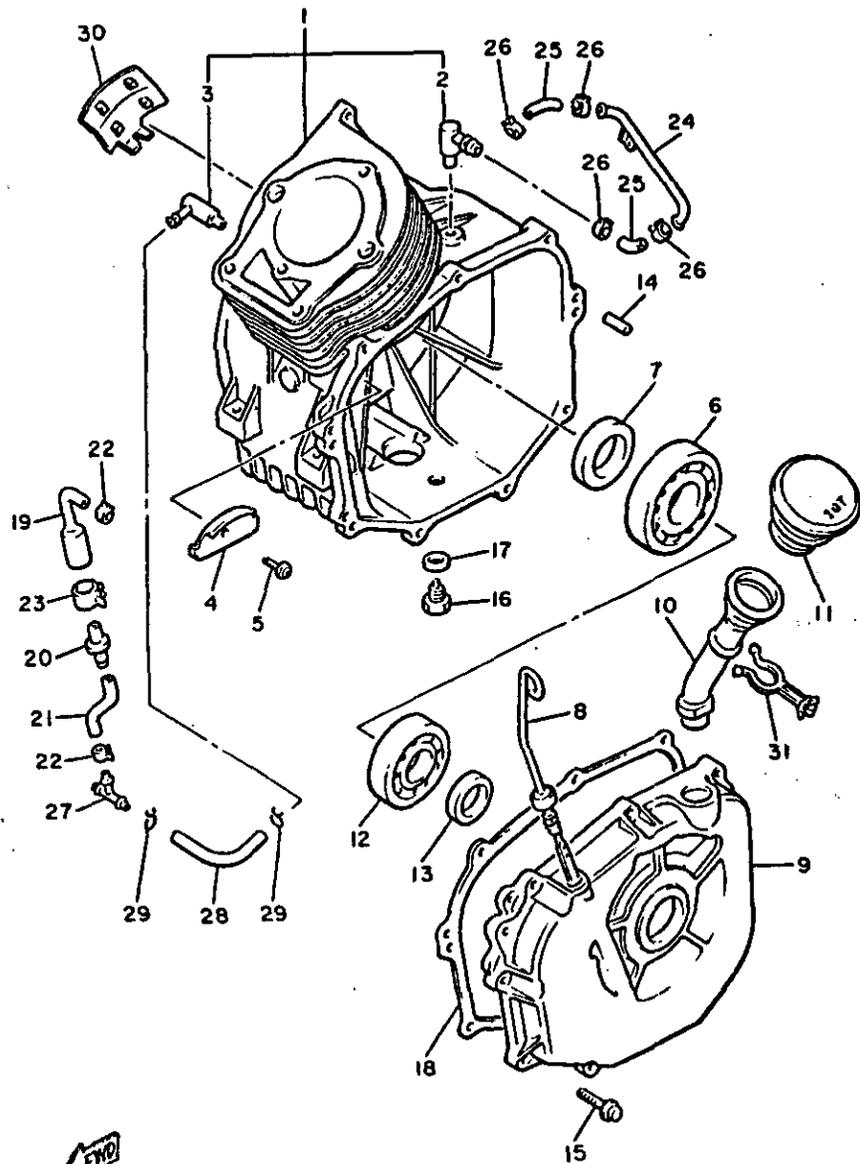


J50100-9080

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-15100-02	CRANKCASE ASSY	1	
2	J38-15148-00	NOZZLE 2	1	
3	J38-15155-00	NOZZLE 3	1	
4	J38-15123-00	PLATE, baffle 1	1	
5	90159-05117	SCREW, with washer	1	
6	93306-30709	BEARING	1	
7	93102-35191	OIL SEAL	1	
8	J38-15361-00	GAUGE, level	1	
9	J38-15411-01	COVER, crankcase 1	1	
10	J38-15112-00	PIPE, oil	1	
11	J38-15363-00	PLUG, oil	1	
12	93306-30621	BEARING (B6306)	1	
13	93102-30195	OIL SEAL	1	
14	93608-12063	PIN, dowel	2	
15	95811-08035	BOLT, flange	9	
16	97001-12020	BOLT	1	
17	812-11198-00	GASKET	1	
18	J38-15451-00	GASKET, crankcase cover 1	1	
19	J38-14388-00	VALVE, vacuum control	1	
20	J38-13115-00	CONNECTOR, suction pipe	1	
21	90445-113E4	HOSE	1	
22	90467-10008	CLIP	2	
23	90468-08104	CLIP	1	
24	J38-13161-00	PIPE, delivery 1	1	
25	90445-110E8	HOSE	2	
26	90467-10008	CLIP	4	
27	807-24376-00	PIPE, joint 1	1	
28	90445-09073	HOSE	1	

FIG. 8 CRANKCASE


REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
29	90467-08017	CLIP	2	
30	J38-11355-00	SEAL, cylinder 1	1	
31	90464-15093	CLAMP	1	

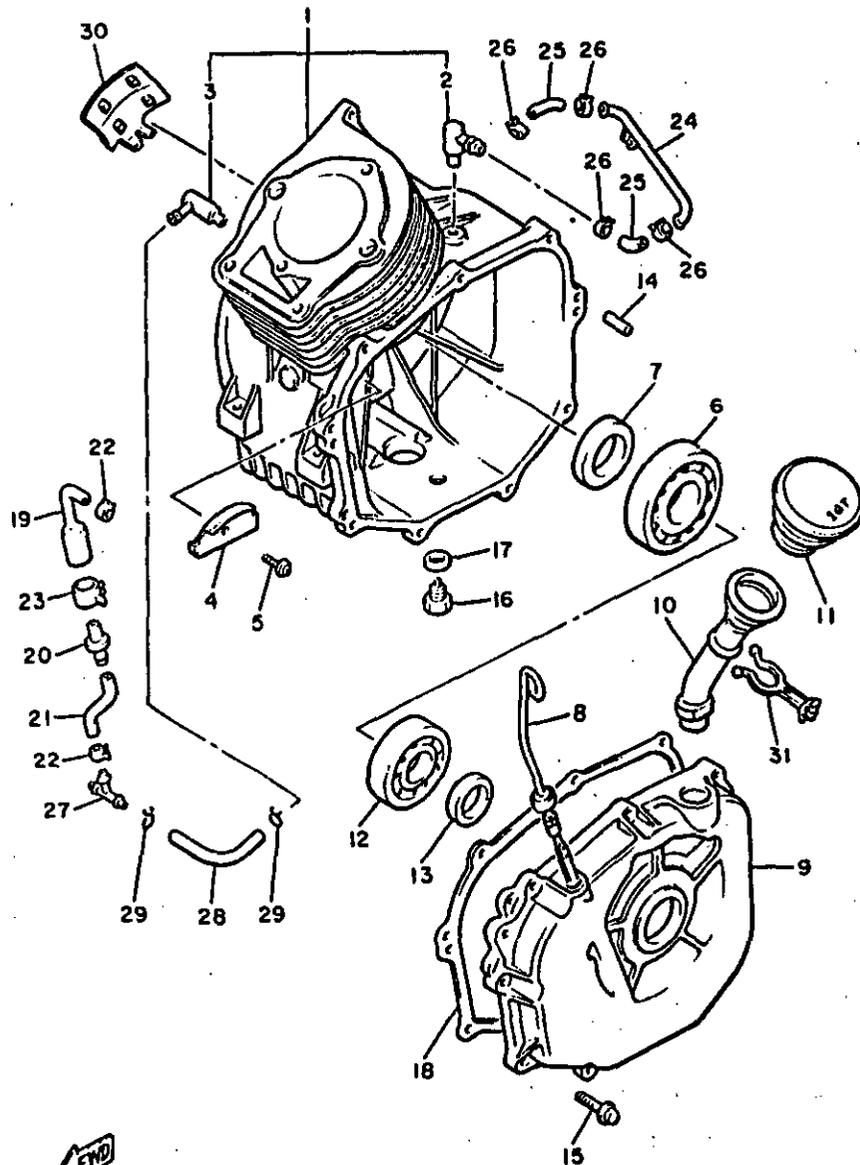

FWD

J60100-9080


FIG. 9 ENGINE BRACKET

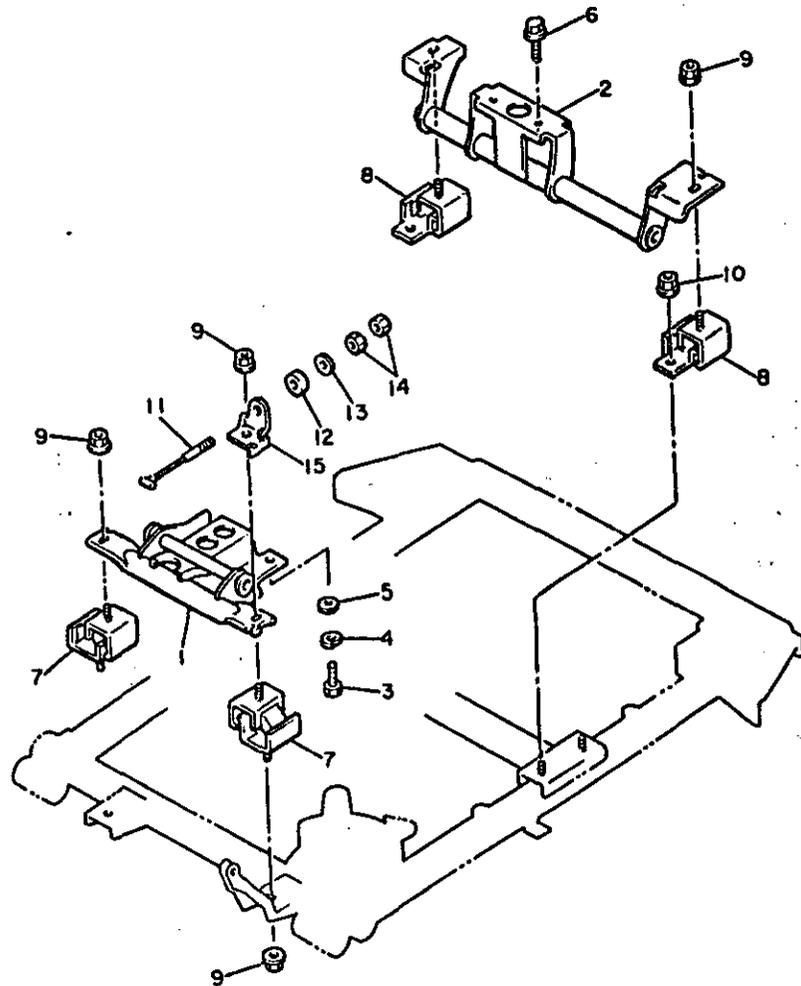

J38100-7090

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-21411-02	BRACKET, engine 1	1	
2	J55-F1419-00	BRACKET, engine 2	1	J38-21419-02
3	97011-10025	BOLT	2	
4	92901-10100	WASHER, spring	2	
5	92990-10600	WASHER, plate	2	
6	95021-10040	BOLT, flange	2	
7	J38-21486-00	DAMPER 2	2	
8	J38-21488-00	DAMPER	2	
9	95702-10500	NUT, flange	6	
10	95701-08500	NUT, flange	4	
11	J31-2217J-01	TENSIONER 1	1	
12	J17-2214F-00	DAMPER 1	1	
13	90201-06778	WASHER, plate	1	
14	95303-06600	NUT	2	
15	J38-2141A-00	BRACKET 1	1	

FIG. 10 REAR ARM • SUSPENSION

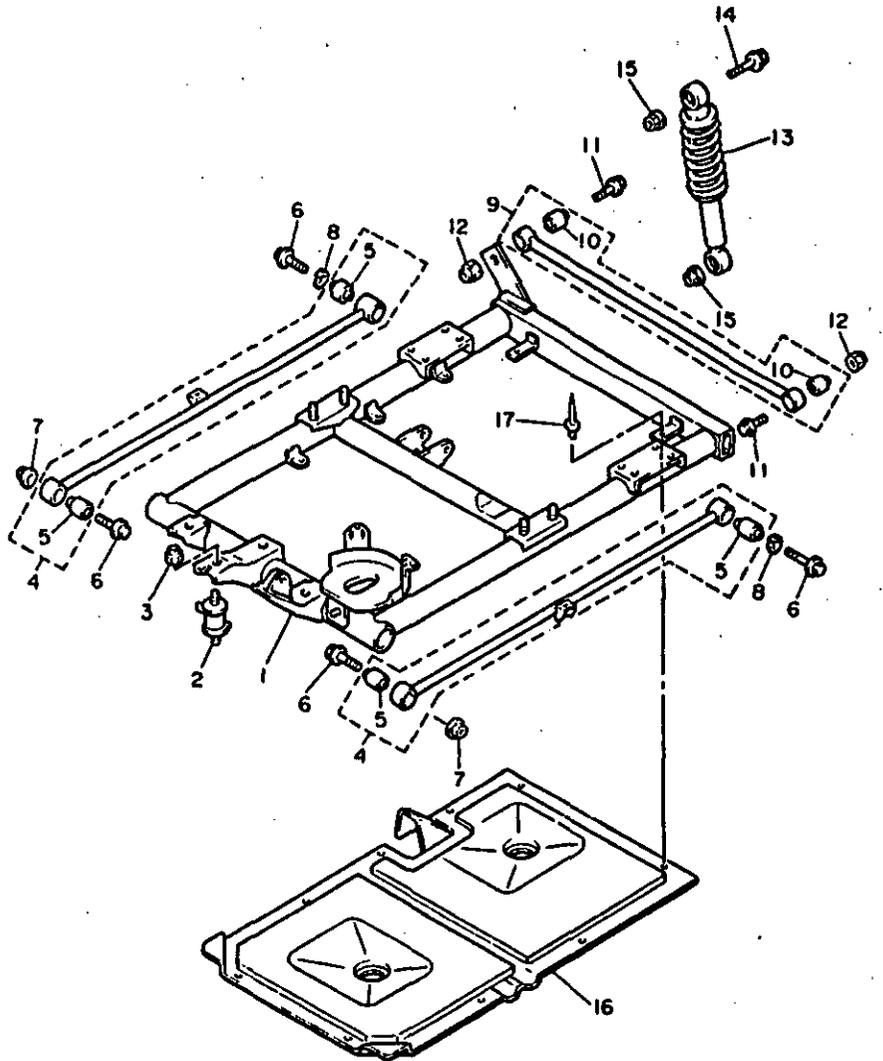


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-F2110-00	REAR ARM COMP.	1	
2	J50-22123-00	BUSH 1	1	
3	90185-10115	NUT, self-locking	2	
4	J50-22171-00	ARM, rear 1	2	
5	J50-22124-00	.BUSH 2	2	
6	95812-12065	BOLT, flange	4	
7	90185-12072	NUT, self-locking	2	
8	92901-12100	WASHER, spring	2	
9	JF2-22172-00	ARM, rear 2	1	
10	J50-22124-00	.BUSH 2	2	
11	95812-12065	BOLT, flange	2	
12	90185-12072	NUT, self-locking	2	
13	JF2-22210-00	SHOCK ABSORBER ASSY, rear	2	
14	95812-12085	BOLT, flange	2	
15	90185-12072	NUT, self-locking	4	
16	J55-F2130-00	ARM SUB-COMP.,1	1	
17	90267-40127	RIVET, blind	9	



JF2100-0100


FIG. 11 FRAME

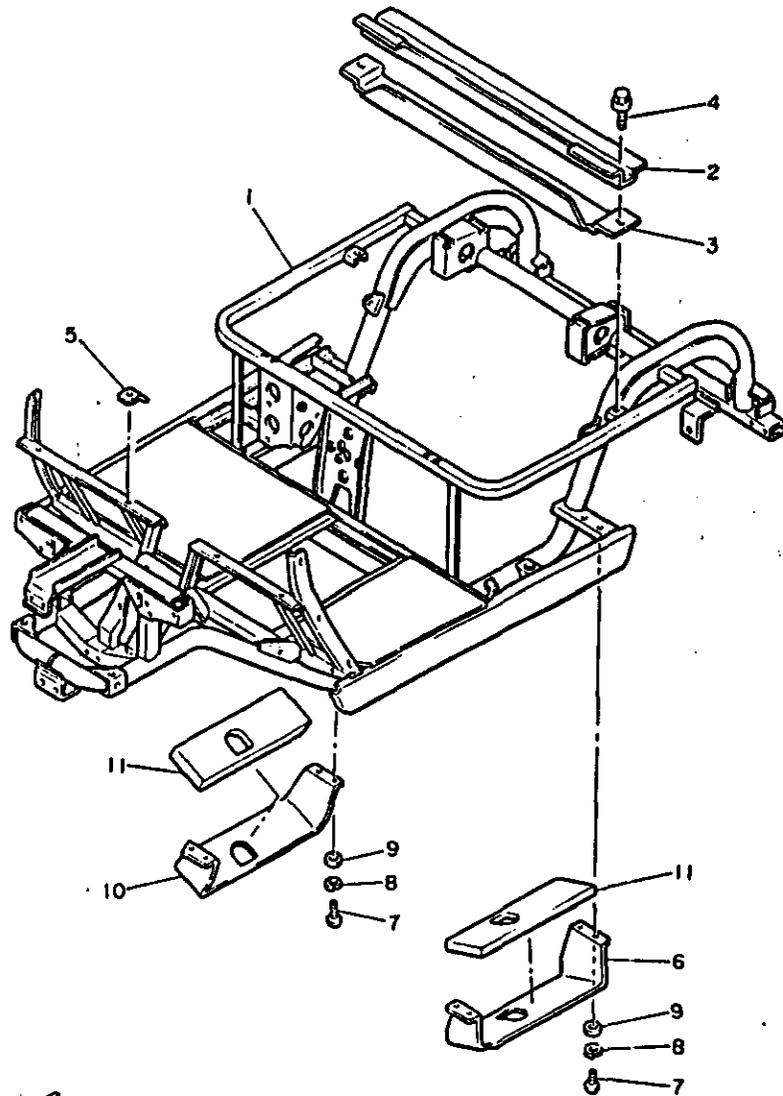

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-F2501-00	FRAME COMP.	1	
2	JF2-F254R-00	SUPPORT, body mounting	1	
3	JF2-K8266-00	PLATE, body protect 6	1	
4	95801-08016	BOLT, flange	2	
5	JF2-7814A-00	SEAL, body upper	4	
6	JF2-F2592-00	PLATE 1	1	
7	98501-05012	SCREW, pan head	8	
8	92990-05100	WASHER, spring	8	
9	92901-05600	WASHER, plate	8	
10	JF2-F2593-00	PLATE 2	1	
11	JF2-K825H-00	PAD, silencer 14	2	




FIG. 12 FRONT SUSPENSION - WHEEL

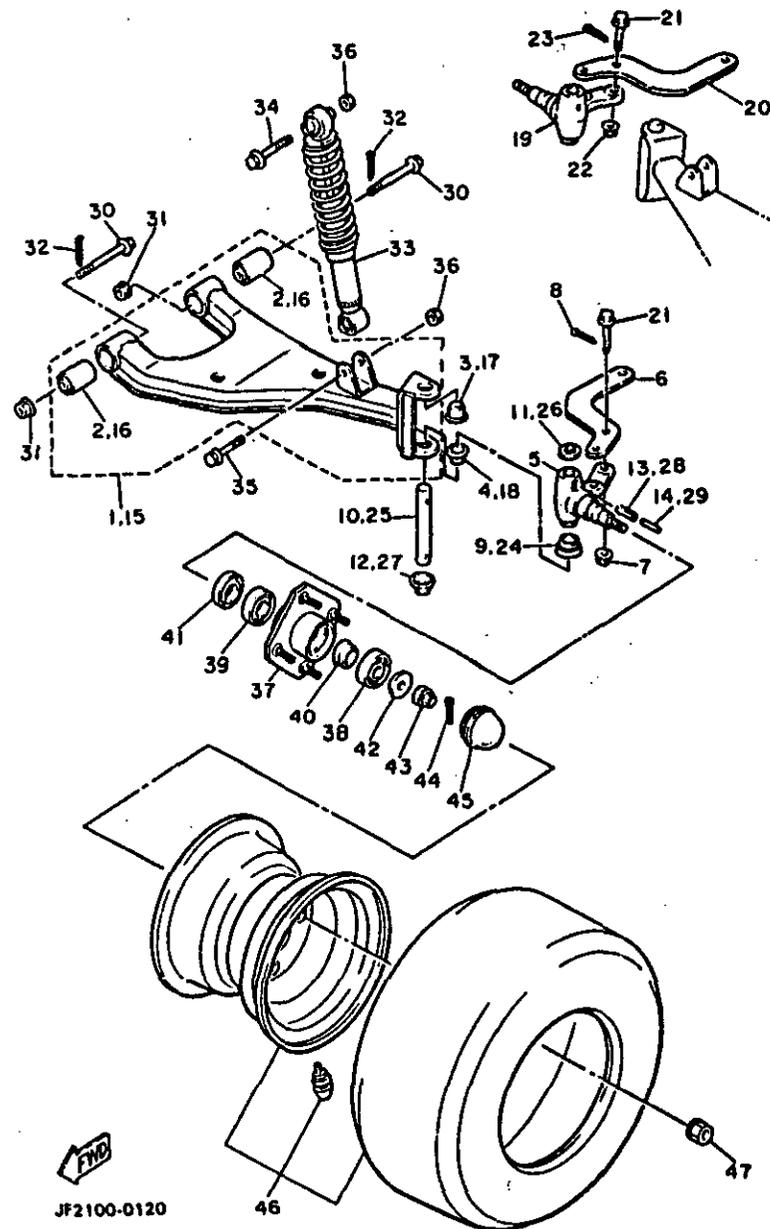

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-F3570-00	FRONT LOWER ARM COMP. (LEFT)	1	
2	J38-23526-00	.BUSH	2	
3	90338-17170	PLUG	1	
4	90386-15139	BUSH	1	
5	J38-23511-01	KNUCKLE, steering 1	1	
6	J38-23512-02	ARM, knuckle 1	1	
7	90185-10115	NUT, self-locking	2	
8	91401-25020	PIN, cotter	2	
9	J38-23527-00	SEAL, dust 1	1	
10	J55-F3516-00	KING PIN, steering knuckle	1	J38-23516-00
11	90201-156J2	WASHER, plate	1	
12	J38-23528-00	SEAL, dust 2	1	
13	91609-60028	PIN, spring	1	
14	91609-35028	PIN, spring	1	
15	JF2-F3580-00	FRONT LOWER ARM COMP. (RIGHT)	1	
16	J38-23528-00	.BUSH	2	
17	90338-17170	PLUG	1	
18	90386-15139	BUSH	1	
19	J38-23521-01	KNUCKLE, steering 2	1	
20	J38-23512-02	ARM, knuckle 1	1	
21	90105-10360	BOLT, washer based	4	
22	90185-10115	NUT, self-locking	2	
23	91401-25020	PIN, cotter	2	
24	J38-23527-00	SEAL, dust 1	1	
25	J55-F3516-00	KING PIN, steering knuckle	1	J38-23516-00
26	90201-156J2	WASHER, plate	1	
27	J38-23528-00	SEAL, dust 2	1	
28	91609-60028	PIN, spring	1	


FIG. 12 FRONT SUSPENSION • WHEEL

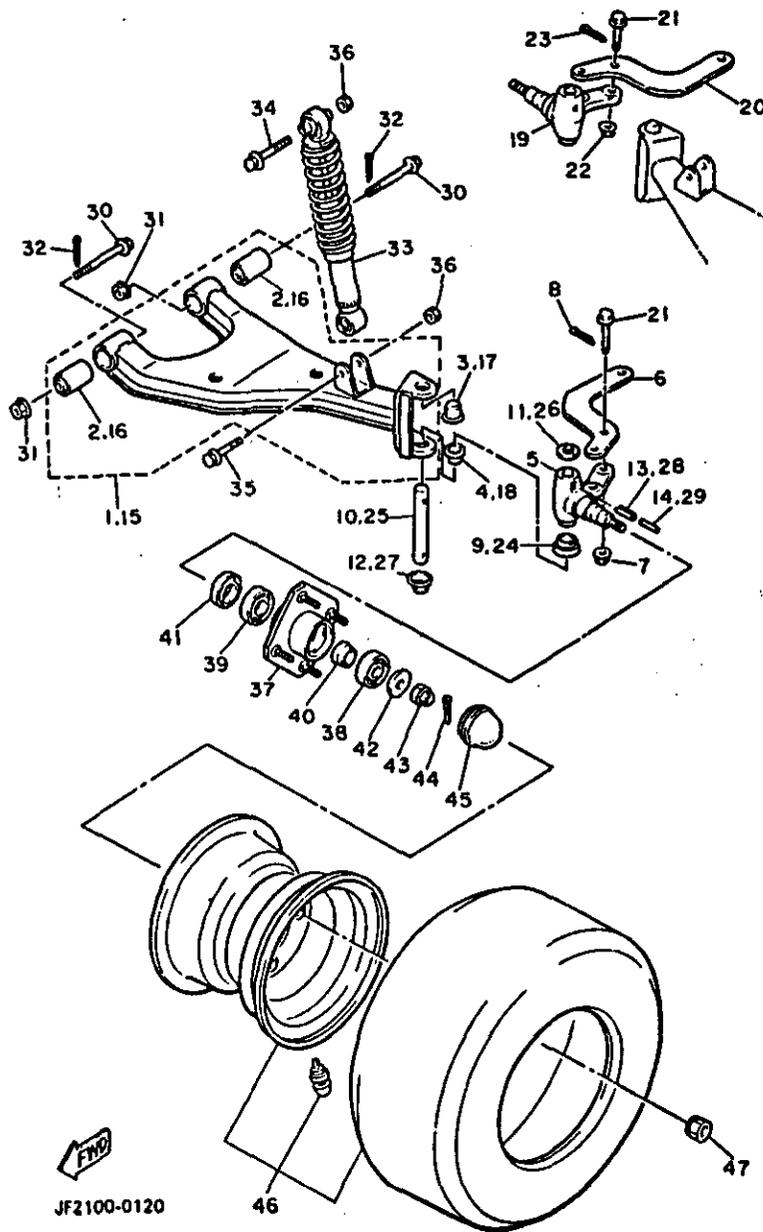

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
29	91809-35028	PIN, spring	1	
30	90105-10357	BOLT, washer based	4	
31	90185-10115	NUT, self-locking	4	
32	91401-25020	PIN, cotter	4	
33	JF2-23350-00	SHOCK ABSORBER ASSY	2	
34	97002-10065	BOLT	2	
35	97002-10060	BOLT	2	
36	95602-10100	NUT, u	4	
37	J38-W2511-00	HUB, front	2	
38	93306-20437	BEARING	2	
39	93306-00511	BEARING	2	
40	90387-241M7	COLLAR	2	
41	93102-30083	OIL SEAL	2	
42	90209-32271	WASHER	2	
43	95601-14100	NUT, u	2	
44	91401-25020	PIN, cotter	2	
45	J17-25118-00	COVER, hub dust	2	
46	*	FRONT WHEEL ASSY	2	LM
47	90179-12262	NUT	8	


JF2100-0120

FIG. 13 STEERING

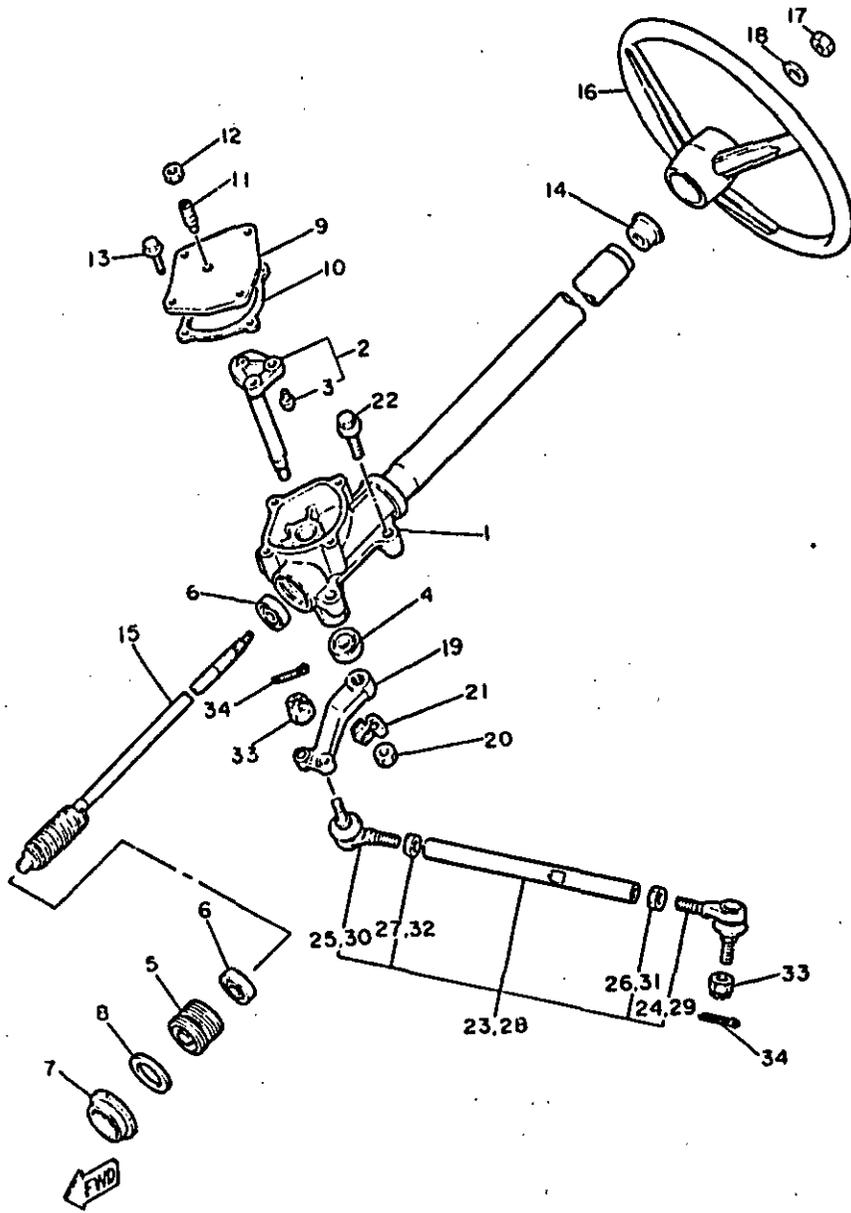


REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	JF2-F3811-00	COLUMN, steering	1	
2	J38-23818-00	ARM, pitman	1	
3	J38-23836-00	.PIN, pitman	2	
4	93102-22314	OIL SEAL	1	
5	J55-F3878-00	BOLT	1	
6	93332-00010	BEARING	2	
7	J10-23877-00	NUT	1	
8	J10-23444-00	WASHER	1	
9	J55-23818-00	COVER, steering	1	
10	J38-23462-00	SEAL, steering	1	
11	J10-23459-00	BOLT	1	
12	90170-08024	NUT	1	
13	95801-06020	BOLT, flange	4	
14	J38-23814-00	HOLDER, handle upper	1	
15	JF2-23840-00	STEERING SHAFT ASSY	1	
16	JF2-F3838-00	WHEEL, steering	1	
17	90185-12061	NUT, self-locking	1	
18	92902-12200	WASHER, wave	1	
19	J38-23826-01	ARM, idler	1	
20	95701-16300	NUT, flange	1	
21	90215-16252	WASHER, lock	1	
22	95812-10050	BOLT, flange	4	
23	JF2-F3830-00	TIE ROD ASSY	1	
24	J38-23841-01	.JOINT, universal 1	1	
25	J38-23845-01	.JOINT, universal 2	1	
26	90170-12055	.NUT	1	
27	90170-12054	.NUT	1	
28	JF2-F3850-00	TIE ROD ASSY	1	

FIG. 13 STEERING

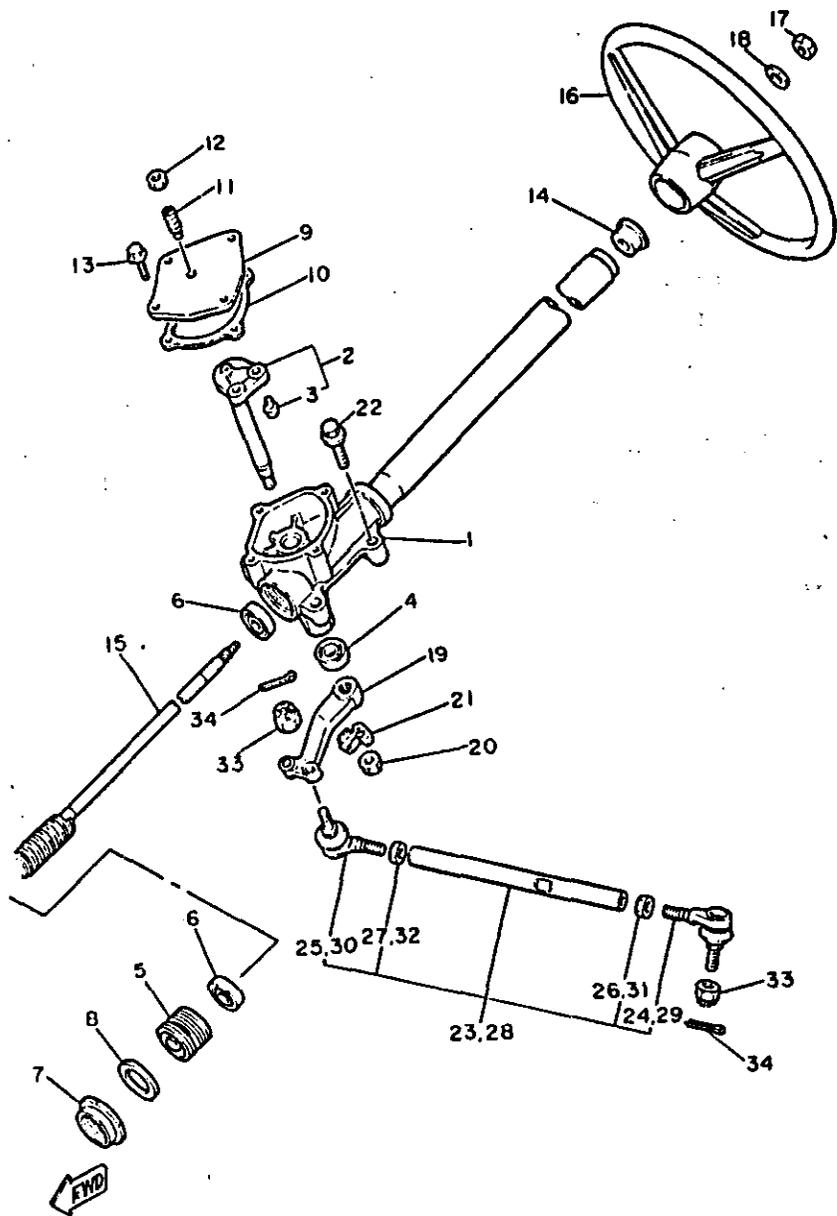

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J38-23841-01	JOINT, universal 1	1	
30	J38-23845-01	JOINT, universal 2	1	
31	90170-12055	NUT	1	
32	90170-12054	NUT	1	
33	95602-10100	NUT, u	4	
34	91401-26020	PIN, cotter	4	

FIG. 14 FUEL TANK

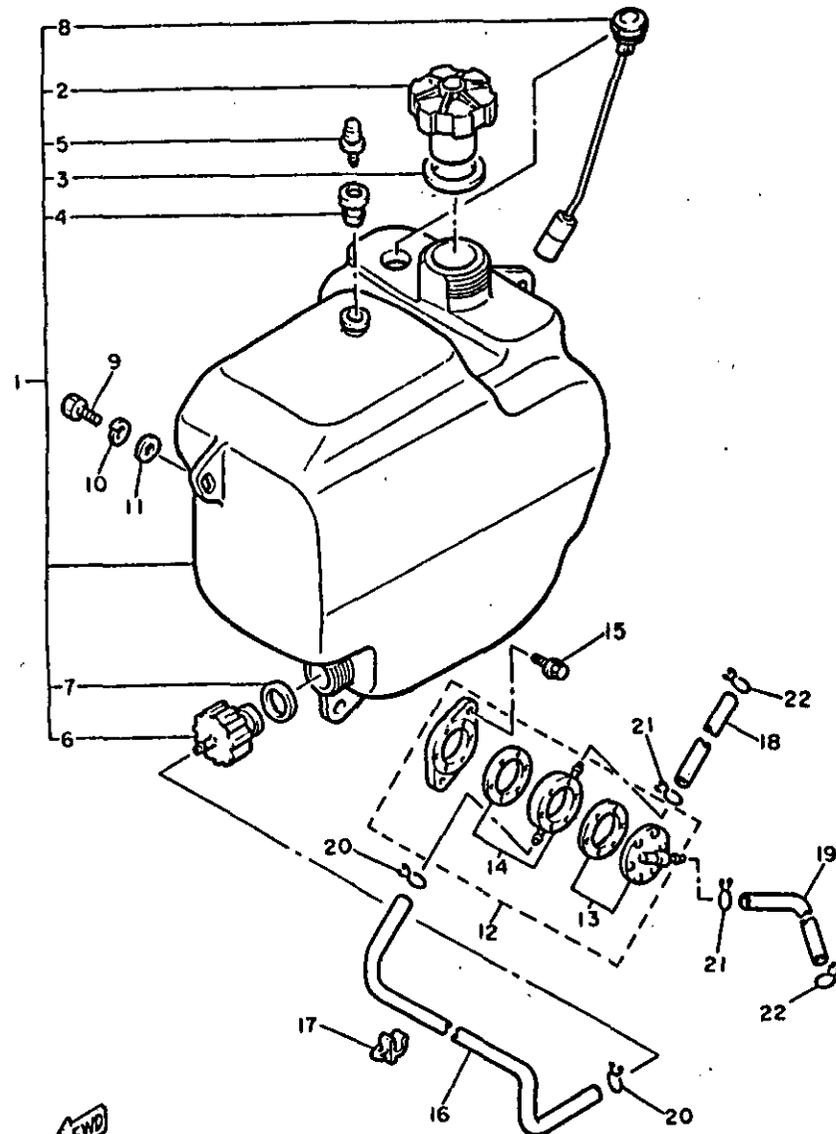

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-F4110-00	FUEL TANK COMP.	1	
2	J24-24620-01	.BODY CAP ASSY	1	
3	J10-24612-00	.GASKET, cap	1	
4	JF2-21773-00	.GROMMET	1	
5	J24-24460-01	.RELEASE VALVE ASSY	1	
6	8R4-24560-00	.FILTER ASSY	1	
7	8F3-24564-00	.GASKET	1	
8	JF2-85710-00	.FUEL LEVEL GAUGE ASSY	1	
9	97313-08020	BOLT	3	
10	92902-08100	WASHER, spring	3	
11	90201-08748	WASHER, plate	3	
12	JF2-24410-01	FUEL PUMP ASSY	1	
13	J38-24452-18	.COVER	1	
14	38W-W1391-01	.FUEL PUMP SEAL SET	1	
15	95801-06016	BOLT, flange	2	
16	JF2-24311-00	PIPE, fuel 1	1	
17	90464-11074	CLAMP	2	
18	90445-09304	HOSE	1	
19	90445-09085	HOSE	1	
20	90467-11009	CLIP	2	
21	90467-08017	CLIP	2	
22	90467-08017	CLIP	2	



FIG. 15 BRAKE

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	J46-27250-01	BRAKE ARM COMP.	1	
2	90384-14080	.BUSH, bimetal formed	2	
3	J10-27211-00	PEDAL, brake	1	
4	J17-25670-01	PARKING PEDAL COMP.	1	
5	90384-05163	.BUSH, bimetal formed	1	
6	90384-12164	.BUSH, bimetal formed	1	
7	90380-12051	.BUSH, solid	1	
8	90101-06555	BOLT	1	
9	90179-07564	NUT	1	
10	90508-23542	SPRING, torsion	1	
11	90109-08669	BOLT	1	
12	92902-08100	WASHER, spring	1	
13	90179-08378	NUT	1	
14	J17-25679-01	DAMPER	2	
15	92990-08200	WASHER, plain	1	
16	J17-W2561-00	SECTOR, parking brake	1	
17	90384-10162	.BUSH, bimetal formed	1	
18	J17-27221-00	SEAL, shaft	2	
19	92990-10600	WASHER, plate	1	
20	99080-07600	CIRCLIP	1	
21	90508-14548	SPRING, torsion	1	
22	J17-25672-00	PAD, parking pedal	1	
23	J17-27231-00	ROD, brake	1	
24	J17-27232-00	END, rod 2	1	
25	95303-06700	NUT	2	
26	90506-12277	SPRING, tension	1	
27	J17-25673-00	DAMPER, brake	1	
28	J17-27228-00	PIN, joint	1	

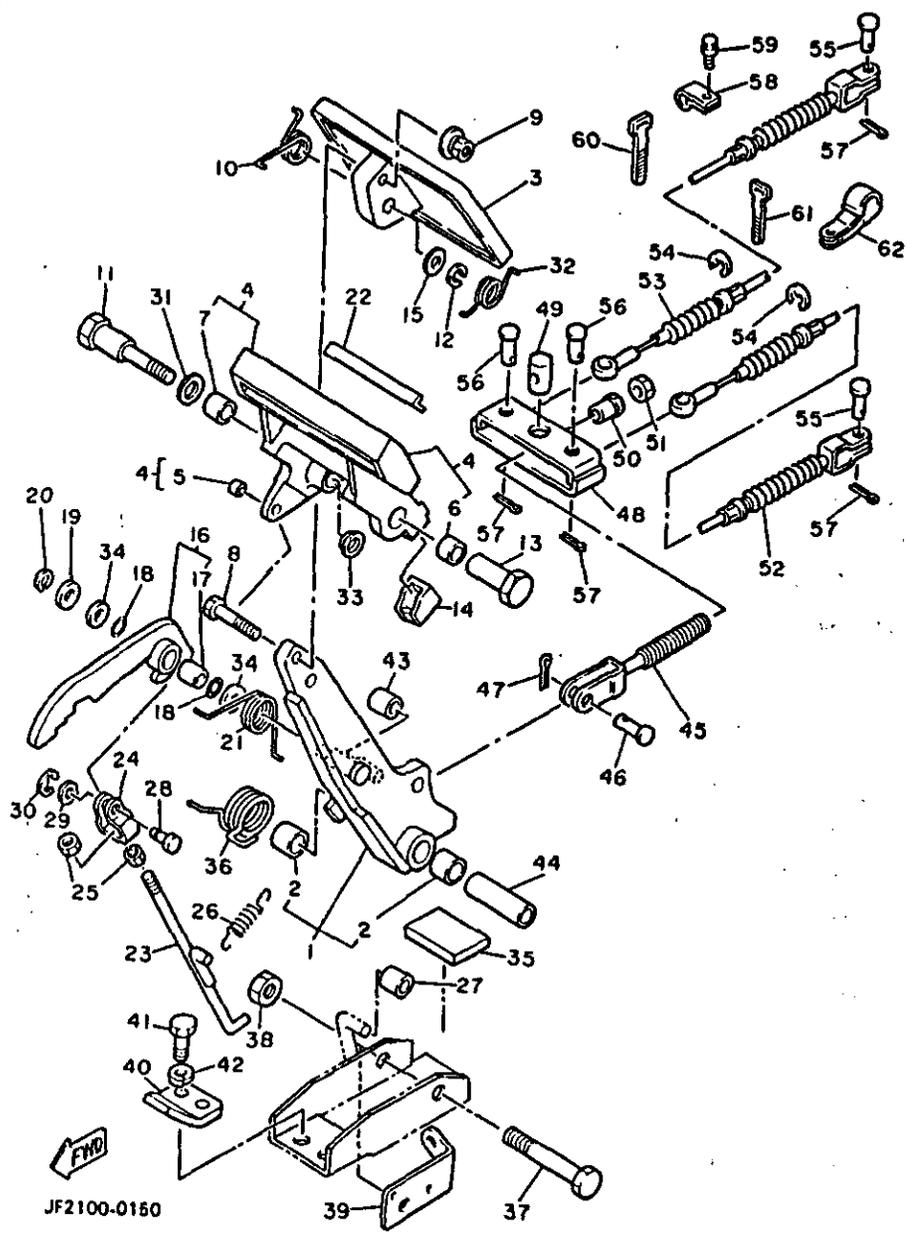


FIG. 15 BRAKE

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
29	92901-05600	WASHER, plate	1	
30	99001-04600	CIRCLIP	1	
31	90201-123F2	WASHER, plate	1	
32	90508-26557	SPRING, torsion	1	
33	90380-12105	BUSH, solid	1	
34	90201-104G8	WASHER, plate	2	
35	J46-27245-00	PAD, brake pedal	1	
36	90508-40543	SPRING, torsion	1	
37	90101-10447	BOLT	1	
38	95602-10100	NUT, u	1	
39	J55-2252M-00	BRACKET, 3	1	
40	J17-27248-00	NAIL, brake	1	
41	97313-08020	BOLT	2	
42	92902-08100	WASHER, spring	2	
43	J17-25673-00	DAMPER, brake	1	
44	90387-107F8	COLLAR	1	
45	JF2-25685-00	ROD	1	
46	91701-10022	PIN, clevis	1	
47	91490-30015	PIN, cotter	1	
48	JF2-25681-00	EQUALIZER, brake	1	
49	90249-14129	PIN	1	
50	90179-08261	NUT	1	
51	95303-08700	NUT	1	
52	JF2-F6341-00	CABLE, brake	1	
53	JF2-F6351-00	CABLE, brake	1	
54	99002-09600	CIRCLIP	4	
55	91701-08018	PIN, clevis	2	
56	91701-08026	PIN, clevis	2	

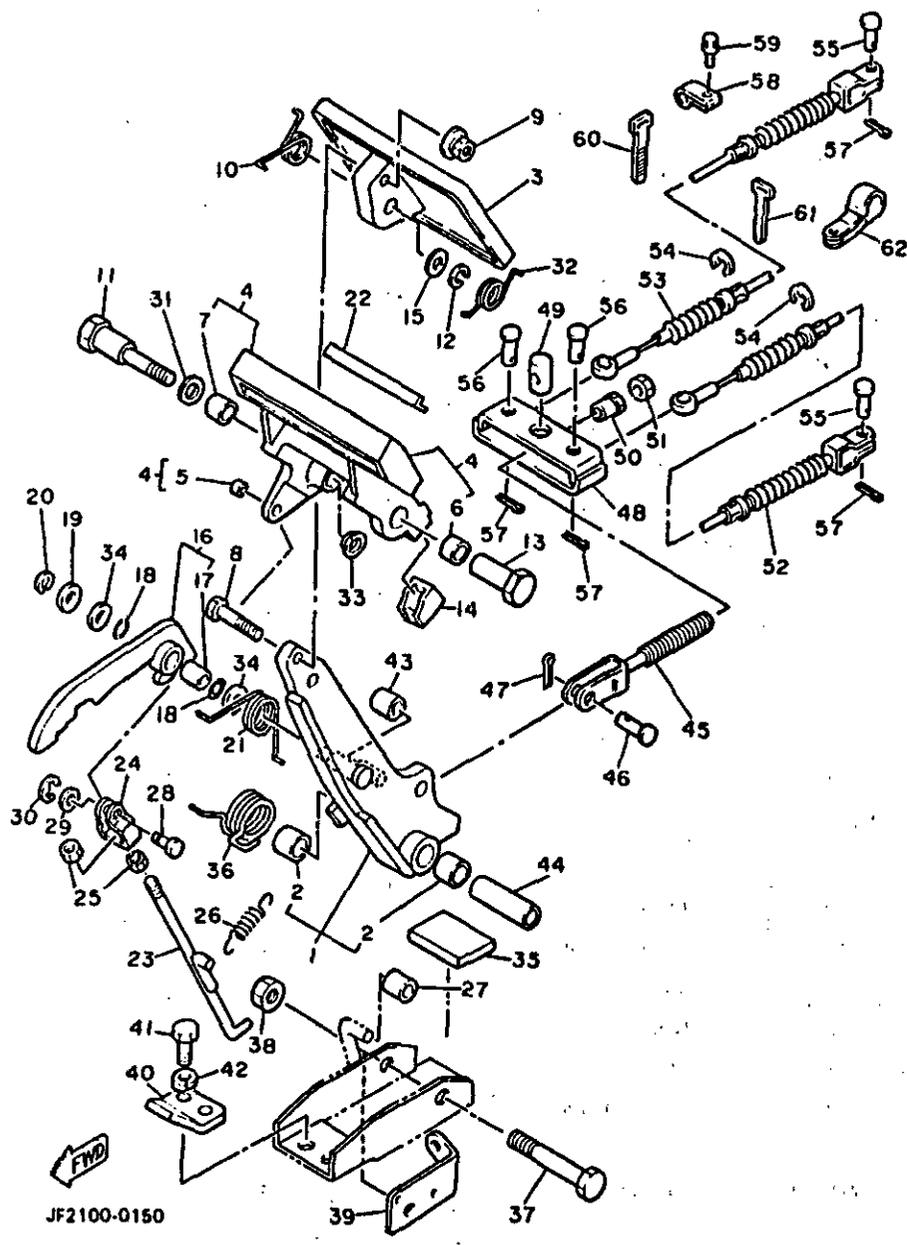


FIG. 15 BRAKE

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
57	91490-25015	PIN, cotter	4	
58	90461-12117	CLAMP	2	
59	95801-06012	BOLT, flange	2	
60	90465-13189	CLAMP	1	
61	25G-83936-00	BAND, switch cord	1	
62	90461-08108	CLAMP	1	


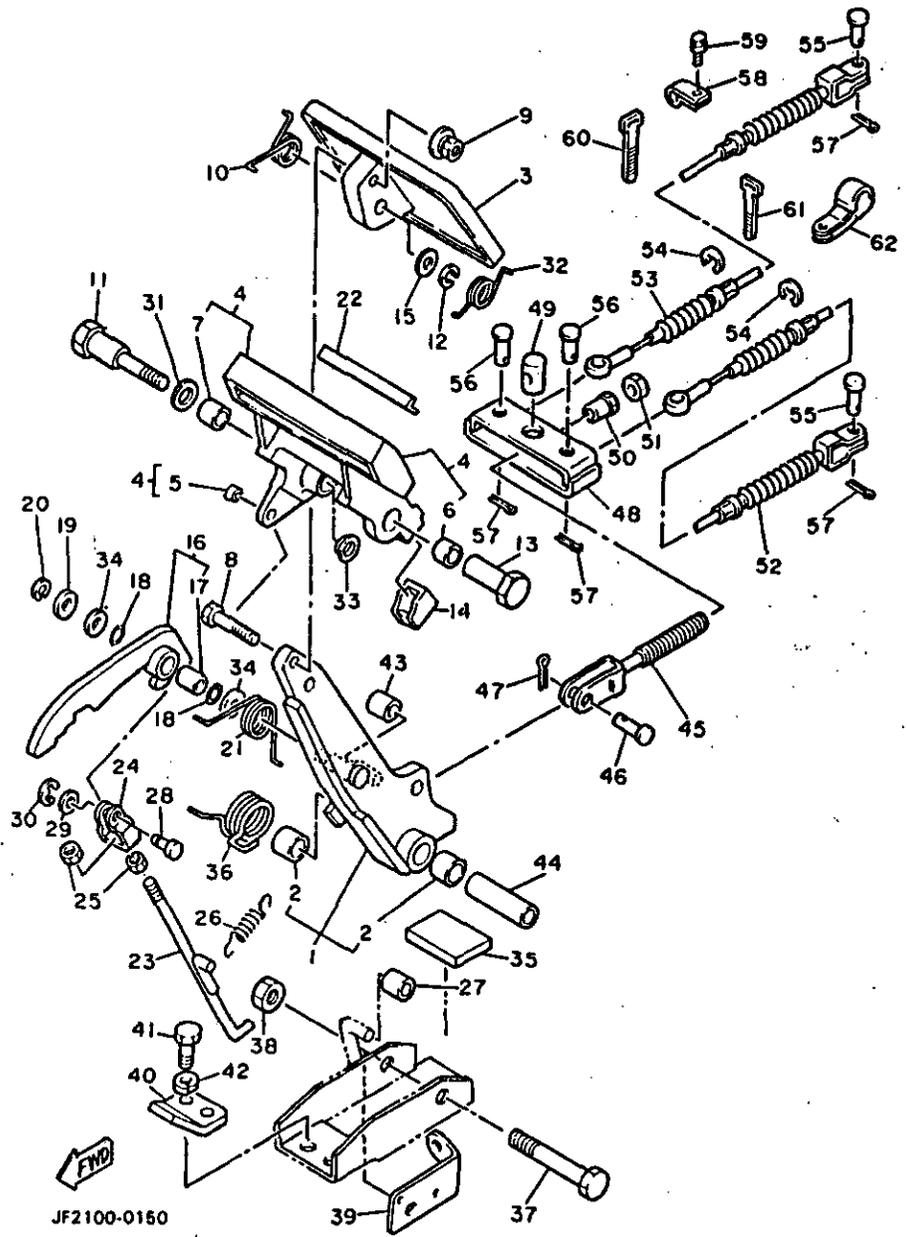



FIG. 16 BRAKE 2

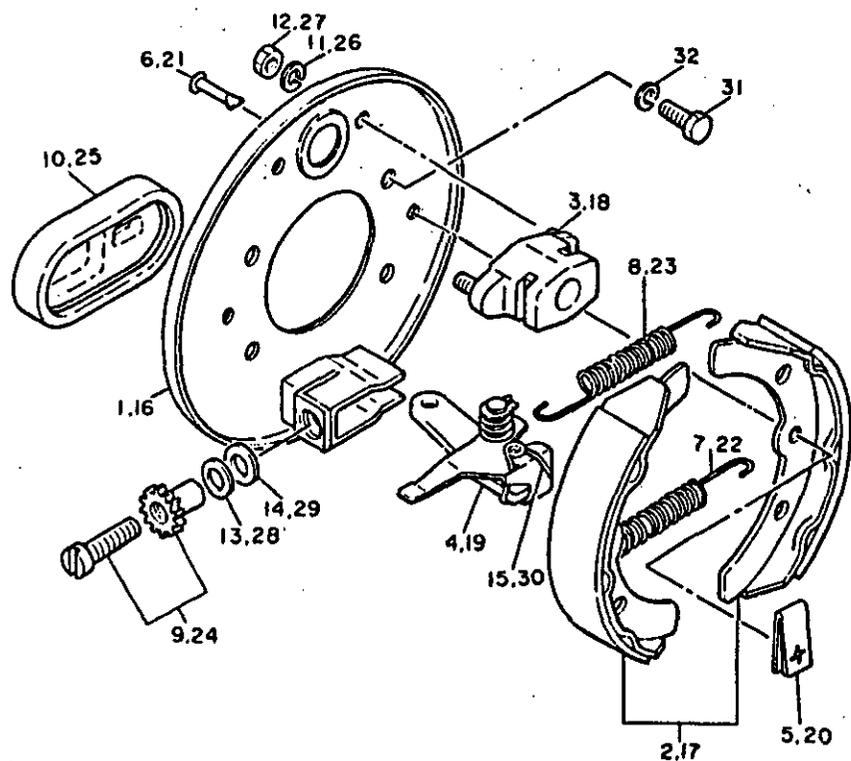


JF2100-0160

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J17-27208-00	BACKING PLATE SUB ASSY 1	1	
2	J55-W2536-00	BRAKE SHOE SET	1	
3	J17-27206-00	ANCHOR BODY COMP.	1	
4	J38-27204-00	LEVER ASSY 1	1	
5	J10-27281-00	SPRING, shoe clamp	2	
6	J10-27282-00	PIN, shoe hold down	2	
7	90506-20281	SPRING, tension	1	
8	90506-26191	SPRING, tension	1	
9	J55-27270-00	ADJUSTER ASSY	1	
10	J10-27286-00	COVER, dust	1	
11	92990-06100	WASHER, spring	2	
12	95303-06600	NUT	2	
13	90201-121H9	WASHER, plate	1	
14	90201-121H8	WASHER, plate	1	
15	J55-25358-00	SPRING, return	1	
16	J17-27209-00	BACKING PLATE SUB ASSY 2	1	
17	J55-W2536-00	BRAKE SHOE SET	1	
18	J17-27206-00	ANCHOR BODY COMP.	1	
19	J38-27205-00	LEVER ASSY 2	1	
20	J10-27281-00	SPRING, shoe clamp	2	
21	J10-27282-00	PIN, shoe hold down	2	
22	90506-20281	SPRING, tension	1	
23	90506-26191	SPRING, tension	1	
24	J55-27260-00	ADJUSTER ASSY	1	
25	J10-27286-00	COVER, dust	1	
26	92990-06100	WASHER, spring	2	
27	95303-06600	NUT	2	
28	90201-121H9	WASHER, plate	1	

FIG. 16 BRAKE 2

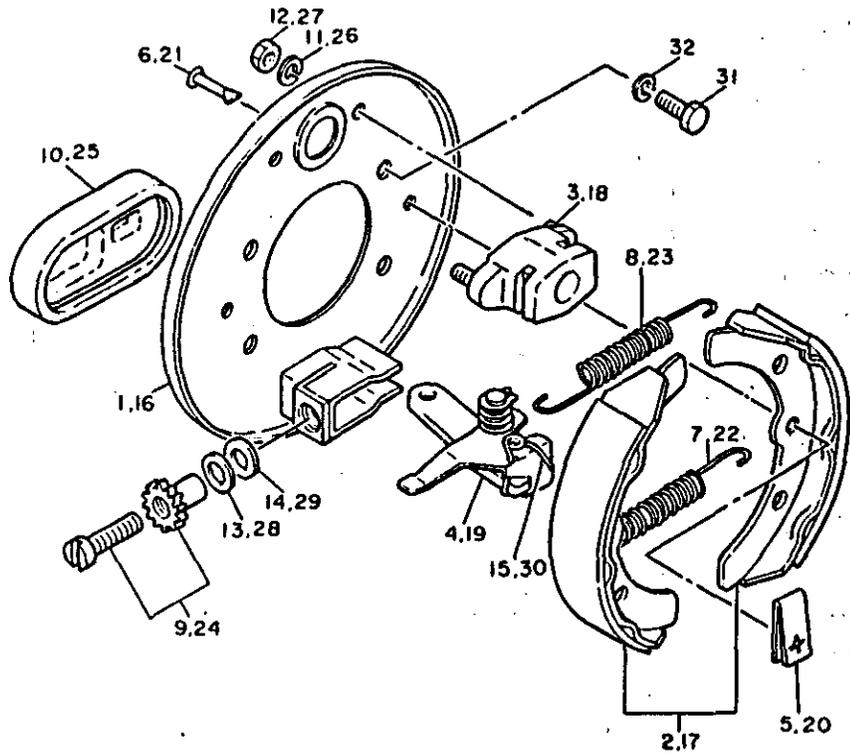


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90201-121H8	WASHER, plate	1	
30	J55-25357-00	SPRING, lever return	1	
31	97012-08016	BOLT	8	
32	92902-08100	WASHER, spring	8	



JF2100-0160


FIG. 17 ACCELERATOR

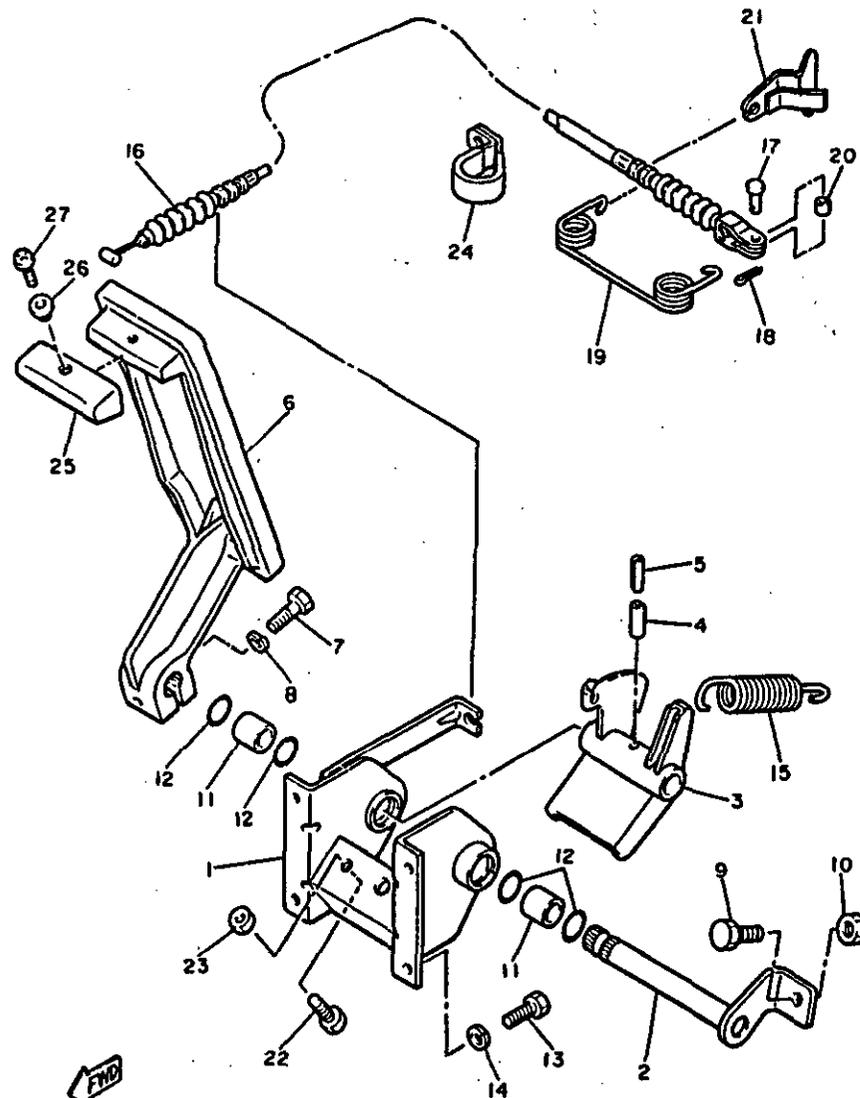

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-27874-00	BRACKET, accelerator pedal	1	
2	J17-27853-00	SHAFT, pedal 1	1	
3	J38-27872-00	ARM, accelerator pedal	1	
4	91609-60028	PIN, spring	1	
5	91609-35028	PIN, spring	1	
6	JF2-27871-00	PEDAL, accelerator	1	
7	97001-06025	BOLT	1	
8	92990-06100	WASHER, spring	1	
9	90106-08040	BOLT	1	
10	95303-08700	NUT	1	
11	90384-14080	BUSH, bimetal formed	2	
12	93210-14104	O-RING	4	
13	97021-06016	BOLT	4	
14	92990-06100	WASHER, spring	4	
15	90506-26282	SPRING, tension	1	
16	JF2-F6311-01	CABLE, throttle 1	1	
17	91702-05012	PIN, clevis	1	
18	90468-10049	CLIP	1	
19	90508-16460	SPRING, torsion	1	
20	90560-05001	SPACER	1	
21	J38-27981-00	BRACKET, throttle	1	
22	97001-06025	BOLT	1	
23	95303-06700	NUT	1	
24	90465-08334	CLAMP	1	
25	JF2-27854-00	COVER, pedal	1	
26	90387-050X4	COLLAR	1	
27	98906-05012	SCREW, bind	1	


JF2100-0170

FIG. 18 GOVERNOR

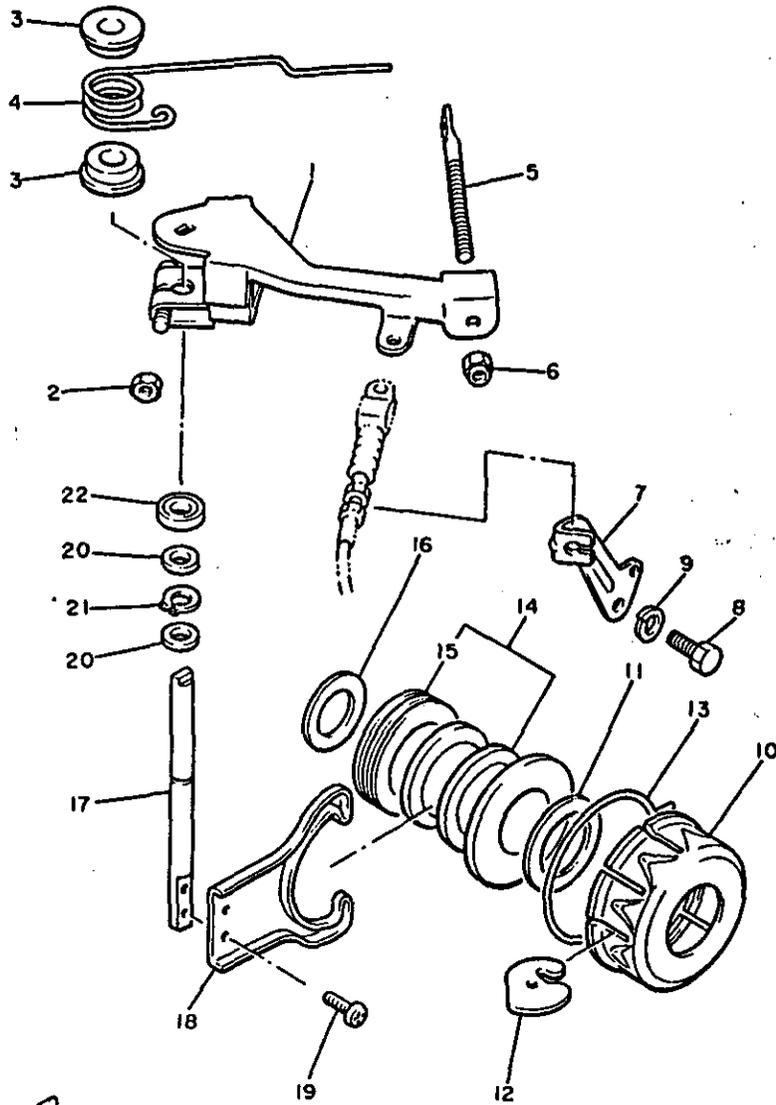

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-27951-00	LEVER, speed limiter	1	
2	95303-06600	NUT	1	
3	90386-08141	BUSH	2	
4	90508-40678	SPRING, torsion	1	
5	J38-27959-00	SCREW, adjusting	1	
6	95701-06300	NUT, nylon	1	
7	J38-27982-00	BRACKET, wire	1	
8	97011-08016	BOLT	1	
9	92902-08100	WASHER, spring	1	
10	J10-27912-00	RETAINER	1	
11	90387-21690	COLLAR	1	
12	J10-27913-00	WEIGHT	12	
13	J10-27911-00	HOLDER	1	
14	J10-27927-00	LIFTER	1	
15	93342-22502	BEARING	1	
16	90201-20275	WASHER, plate	1	
17	J38-27921-00	SHAFT, governor	1	
18	J10-27922-00	FORK, governor	1	
19	90157-04092	SCREW, pan head	2	
20	90202-08110	WASHER, plate	2	
21	99009-06600	CIRCLIP	1	
22	93109-08050	OIL SEAL	1	


FIG. 19 PRIMARY SHEAVE

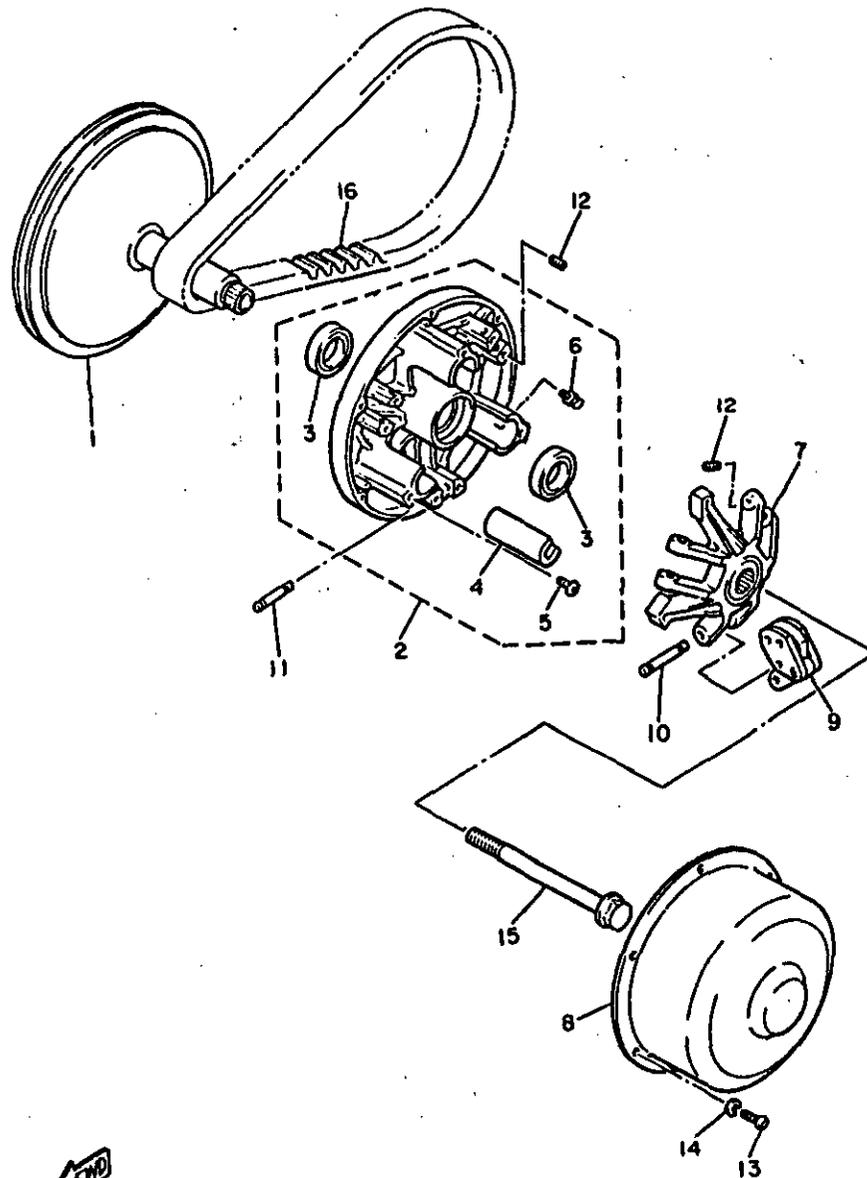

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-46210-00	PRIMARY FIXED SHEAVE COMP.	1	
2	J38-46220-00	PRIMARY SLIDING SHEAVE COMP.	1	
3	93102-28348	.OIL SEAL	2	
4	J38-46253-00	.SLIDER	3	
5	98901-05008	.SCREW, bind	3	
6	93700-06004	.NIPPLE, grease	1	
7	J38-46251-00	SPIDER	1	
8	J38-46231-00	CAP	1	
9	J38-46205-01	WEIGHT LINK ASSY	3	
10	J38-46236-00	PIN, weight	3	
11	J38-46237-00	PIN, weight 2	3	
12	90113-04050	BOLT, set	12	
13	98501-05008	SCREW, pan head	6	
14	92901-05100	WASHER, spring	6	
15	J38-46249-00	BOLT	1	
16	J55-G6241-00	V-BELT	1	J38-46241-00
17	90202-07164	WASHER, plate	6	
18	90387-076U6	COLLAR	3	
19	90202-07186	WASHER, plate	6	



FIG. 20 SECONDARY SHEAVE

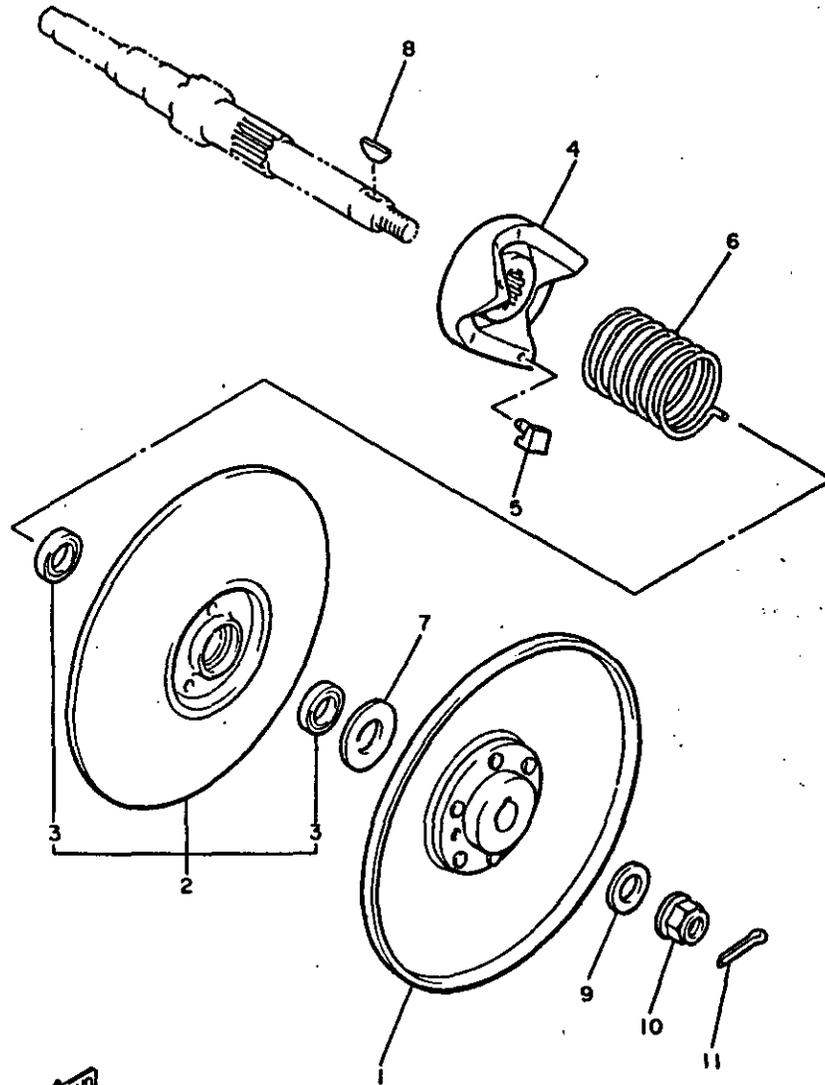


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J55-G6260-00	SECONDARY FIXED SHEAVE COMP.	1	
2	J55-G6270-00	SECONDARY SLIDING SHEAVE COMP.	1	
3	93102-20309	.OIL SEAL	2	
4	J38-46284-00	SEAT, secondary spring	1	
5	J17-17688-00	SHOE, ramp	3	
6	90508-45679	SPRING, torsion	1	
7	90202-20130	WASHER, plate	1	
8	90280-05022	KEY, woodruff	1	
9	90201-12588	WASHER, plate	1	
10	95601-12200	NUT, self-locking	1	
11	91401-25030	PIN, cotter	1	

*Best for Secondary Sheave
90384-20143*


J39700-6200


FIG. 21 TRANSMISSION 1

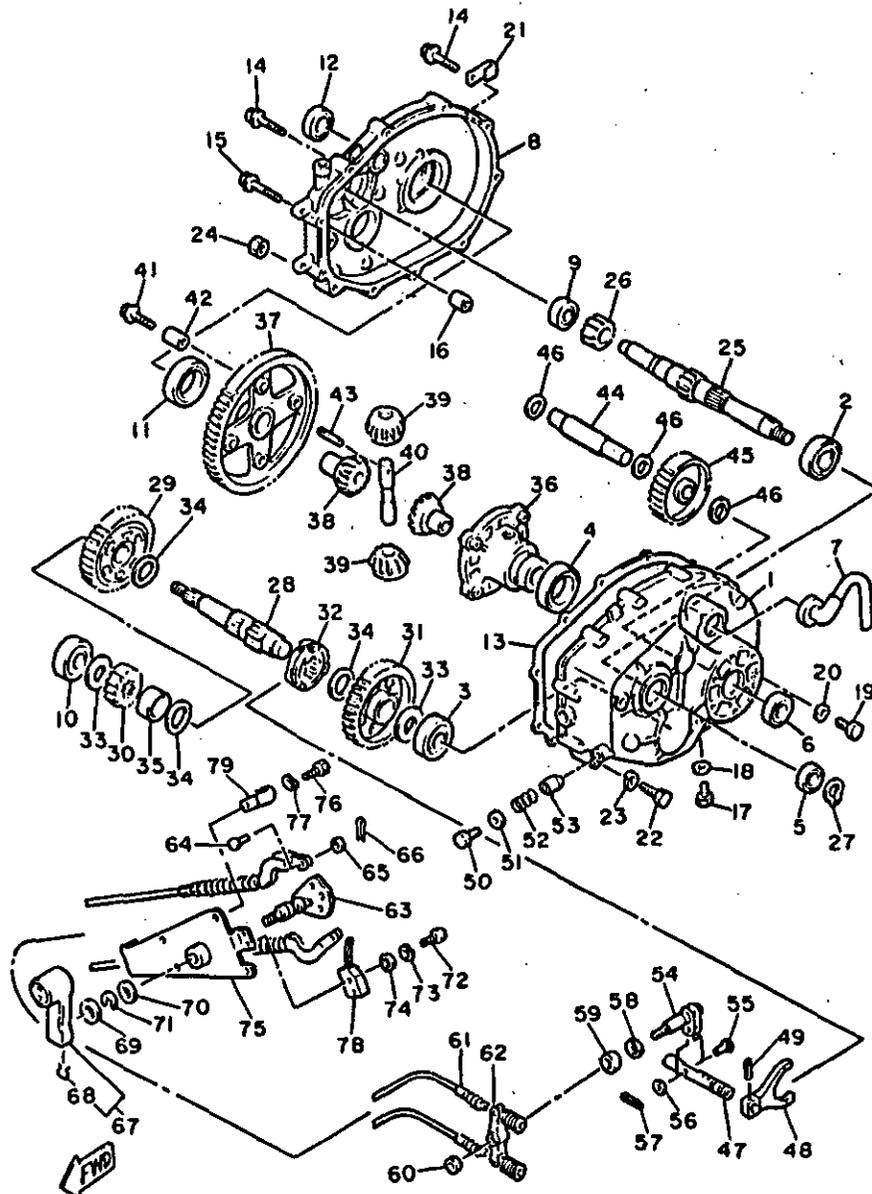

JF2100-0210

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-46311-00	CASE, transmission 1	1	
2	93306-20541	BEARING (B6205)	1	
3	93306-20401	BEARING (B6204)	1	
4	93306-00803	BEARING (B6008)	1	
5	93102-25017	OIL SEAL	1	
6	93102-22189	OIL SEAL	1	
7	835-47559-00	CAP 2	1	
8	J38-46312-00	CASE, transmission 2	1	
9	93306-20324	BEARING	1	
10	93306-20401	BEARING (B6204)	1	
11	93306-00803	BEARING (B6008)	1	
12	93102-22189	OIL SEAL	1	
13	J38-46319-00	GASKET	1	
14	95811-08040	BOLT, flange	7	
15	95811-08050	BOLT, flange	2	
16	99510-12016	PIN, dowel	2	
17	90340-14036	PLUG, straight screw	1	
18	90430-14043	GASKET	1	
19	90101-08344	BOLT	1	
20	90201-08087	WASHER, plate	1	
21	90465-08316	CLAMP	1	
22	97022-08076	BOLT	1	
23	92902-08100	WASHER, spring	1	
24	95303-08600	NUT	1	
25	J38-46321-02	SHAFT, input	1	
26	J38-46331-01	GEAR, input 1	1	
27	93410-25017	CIRCLIP	1	
28	J38-46351-00	SHAFT, counter	1	


FIG. 21 TRANSMISSION 1

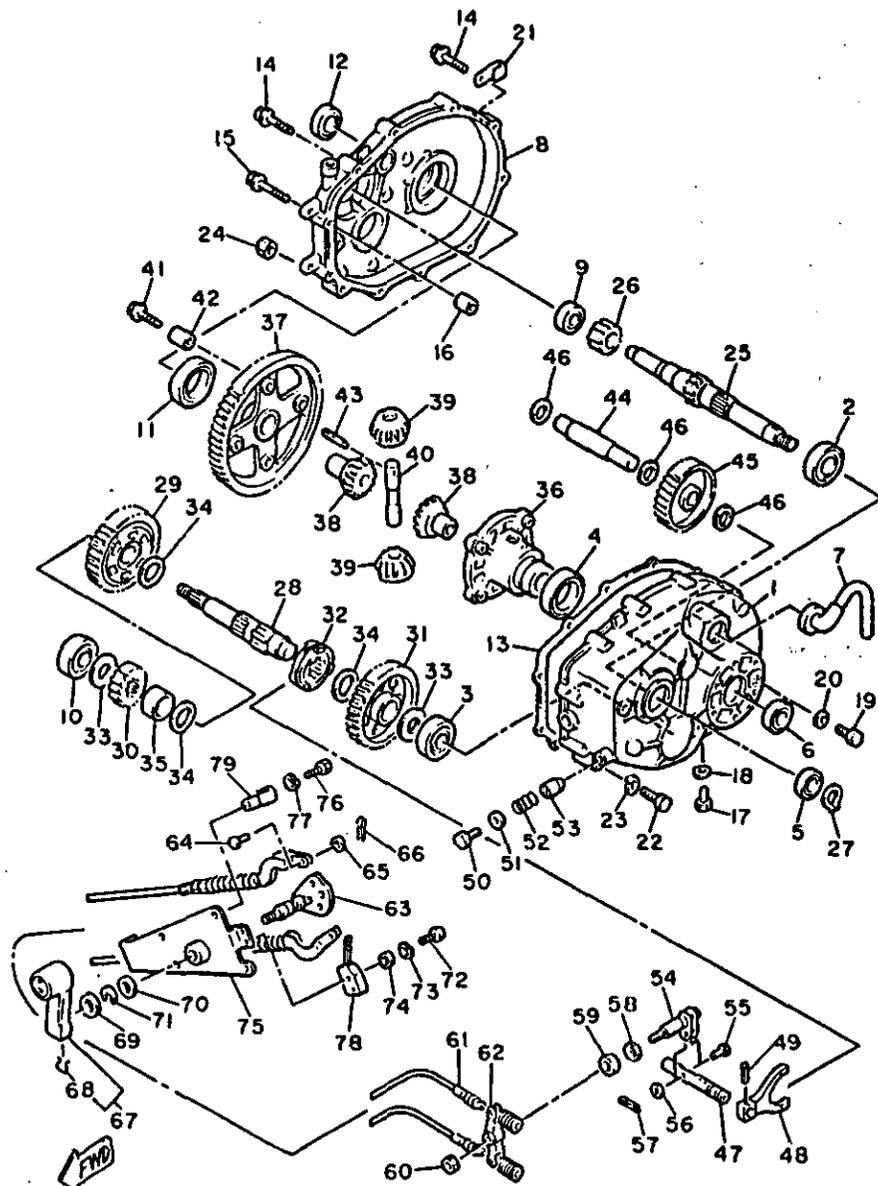

JF2100-0210

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
29	J38-46381-01	GEAR, counter 1	1	
30	J38-46382-00	GEAR, counter 2	1	
31	J38-46363-00	GEAR, reverse	1	
32	J38-4636A-00	DOG, clutch	1	
33	90201-204K8	WASHER, plate	2	
34	90201-257J2	WASHER, plate	3	
35	90387-252M8	COLLAR	1	
36	J38-46411-01	CASE, differential	1	
37	J38-46421-01	GEAR, ring	1	
38	J38-46414-00	GEAR, differential side	2	
39	J38-46415-00	PINION, differential	2	
40	J38-46417-02	PIN, differential	1	
41	90105-08390	BOLT, washer based	4	
42	91812-16001	PIN, dowel	2	
43	91609-40040	PIN, spring	1	
44	J38-46348-00	SHAFT 2	1	
45	J38-46356-00	GEAR, idler	1	
46	90201-17713	WASHER, plate	3	
47	J38-4633A-00	BAR, shift fork guide	1	
48	J38-46338-00	FORK, shift	1	
49	91609-40020	PIN, spring	1	
50	90101-08344	BOLT	1	
51	90201-08087	WASHER, plate	1	
52	90501-10060	SPRING, compression	1	
53	90249-07215	PIN	1	
54	J38-46384-00	LEVER, shift 3	1	
55	91701-06022	PIN, clevis	1	
56	92990-08200	WASHER, plain	1	

FIG. 21 TRANSMISSION 1

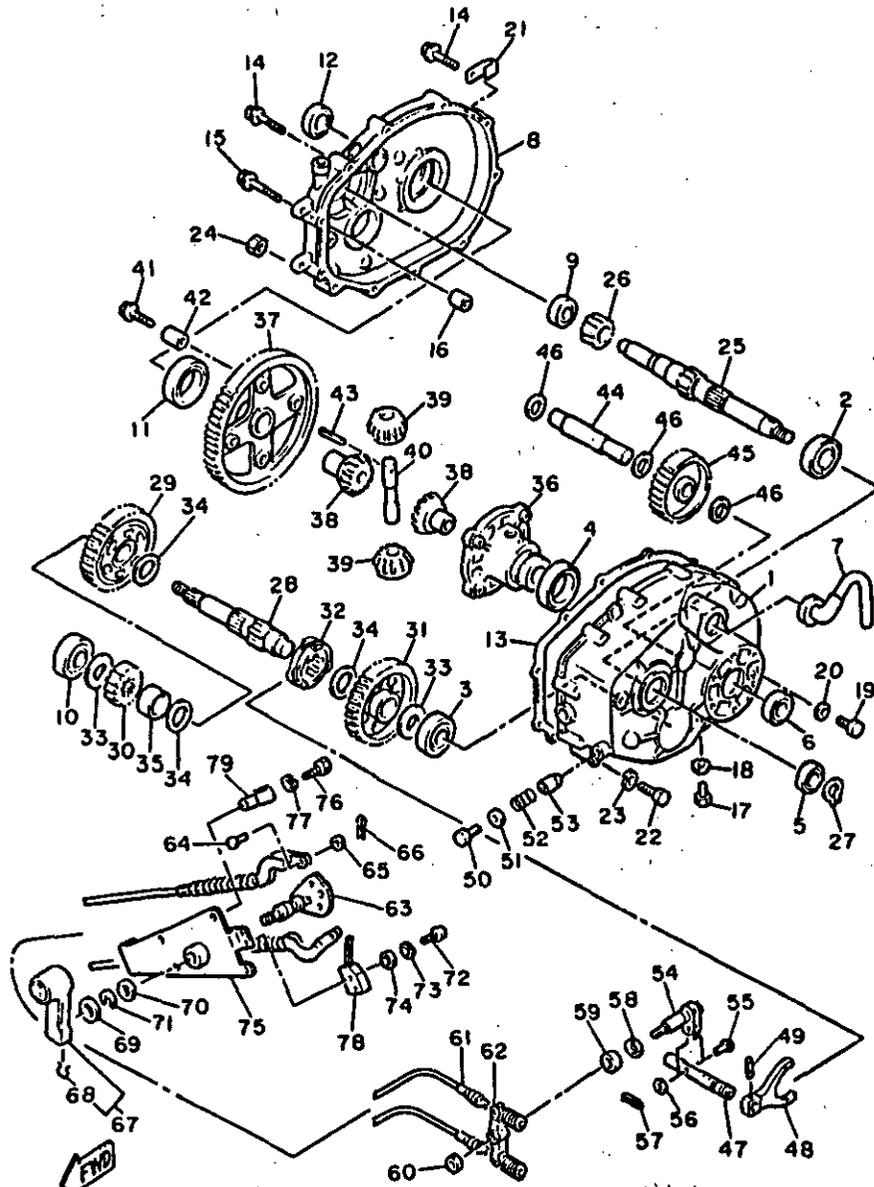


JF2100-0210

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
57	91402-20012	PIN, cotter	1	
58	90201-12166	WASHER, plate	1	
59	93102-12224	OIL SEAL	1	
60	95611-08100	NUT, u	1	
61	J55-G6371-00	WIRE, shift	2	J38-46371-01
62	J55-G6383-00	LEVER, shift 2	1	J38-46383-00
63	JF2-46382-00	LEVER, shift 1	1	
64	91702-06014	PIN, clevis	2	
65	92990-06600	WASHER, plate	2	
66	91402-20012	PIN, cotter	2	
67	JF2-46370-00	SHIFT ASSY	1	
68	JF2-46376-00	SPRING SET	1	
69	90201-20118	WASHER, plate	1	
70	90201-19551	WASHER, plate	1	
71	99009-19400	CIRCLIP	1	
72	97802-04016	SCREW, pan head	2	
73	92902-04100	WASHER, spring	2	
74	92901-04600	WASHER, plate	2	
75	JF2-46372-00	BRACKET, shift wire	1	
76	97021-06016	BOLT	4	
77	92990-06100	WASHER, spring	4	
78	J50-82617-00	SWITCH	1	
79	90465-06038	CLAMP	1	


FIG. 22 REAR AXLE • WHEEL

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	JF2-46540-00	REAR AXLE HOUSING COMP.	1	
2	JF2-46550-00	REAR AXLE HOUSING COMP. 2	1	
3	97011-08025	BOLT	12	
4	92902-08100	WASHER, spring	12	
5	JF2-46510-00	REAR AXLE SHAFT COMP.	1	
6	JF2-46520-00	REAR AXLE SHAFT COMP. 2	1	
7	97011-10020	BOLT	8	
8	92901-10100	WASHER, spring	8	
9	92990-10600	WASHER, plate	8	
10	*	FRONT WHEEL ASSY	2	LM
11	90179-12262	NUT	8	
12	J55-G6521-00	DRUM	2	J17-46521-00

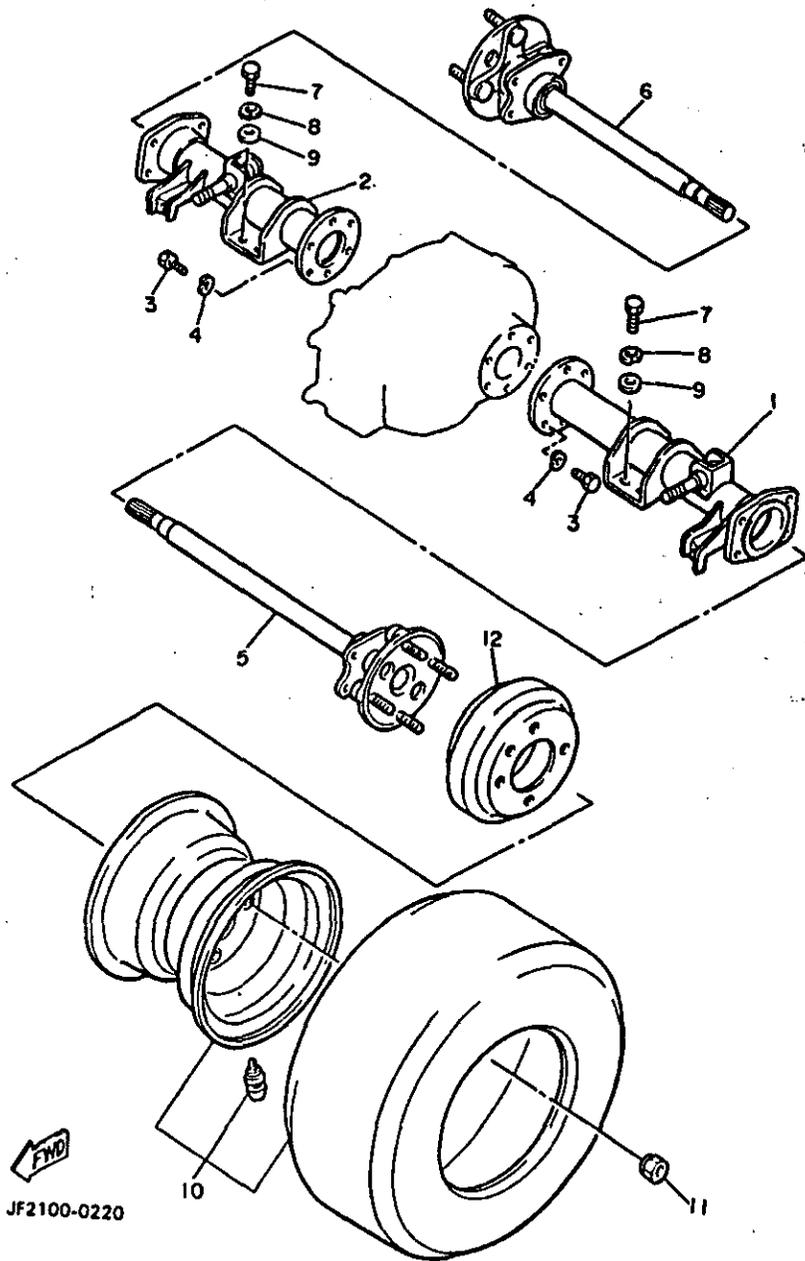

JF2100-0220


FIG. 23 BUMPER

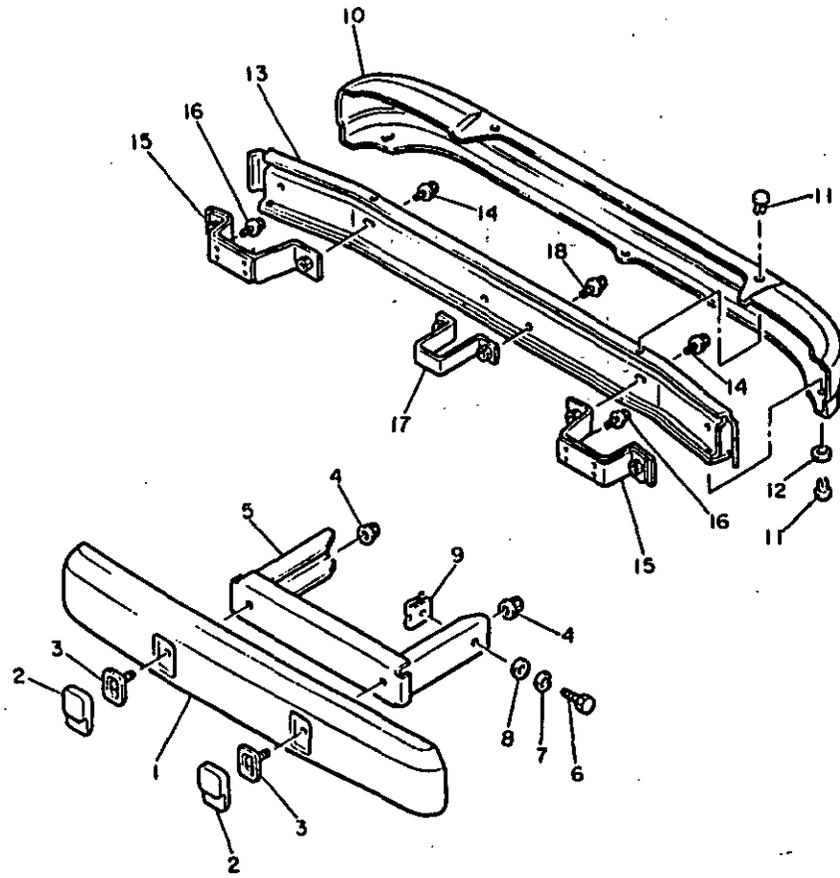

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-K8163-00	COVER, bumper	1	
2	JF2-77517-00	CAP	2	
3	JF2-77527-00	PLATE, back up	2	
4	95706-08500	NUT, flange	2	
5	JF2-K7511-00	BUMPER, front 1	1	
6	97313-08020	BOLT	2	
7	92902-08100	WASHER, spring	2	
8	92990-08600	WASHER, plate	2	
9	JF2-77528-00	NUT	2	
10	JF2-K817U-00	COVER, rear bumper	1	
11	90267-63047	RIVET, blind	5	
12	90201-063J2	WASHER, plate	2	
13	JF2-K8107-00	BUMPER SUB-ASSY, rear	1	
14	95816-08016	BOLT, flange	4	
15	JF2-K8174-00	STAY, rear bumper	2	
16	95816-08016	BOLT, flange	6	
17	JF2-K7521-00	STOPPER, 1	1	
18	95816-08016	BOLT, flange	2	


JF2100-0230


FIG. 24 BODY

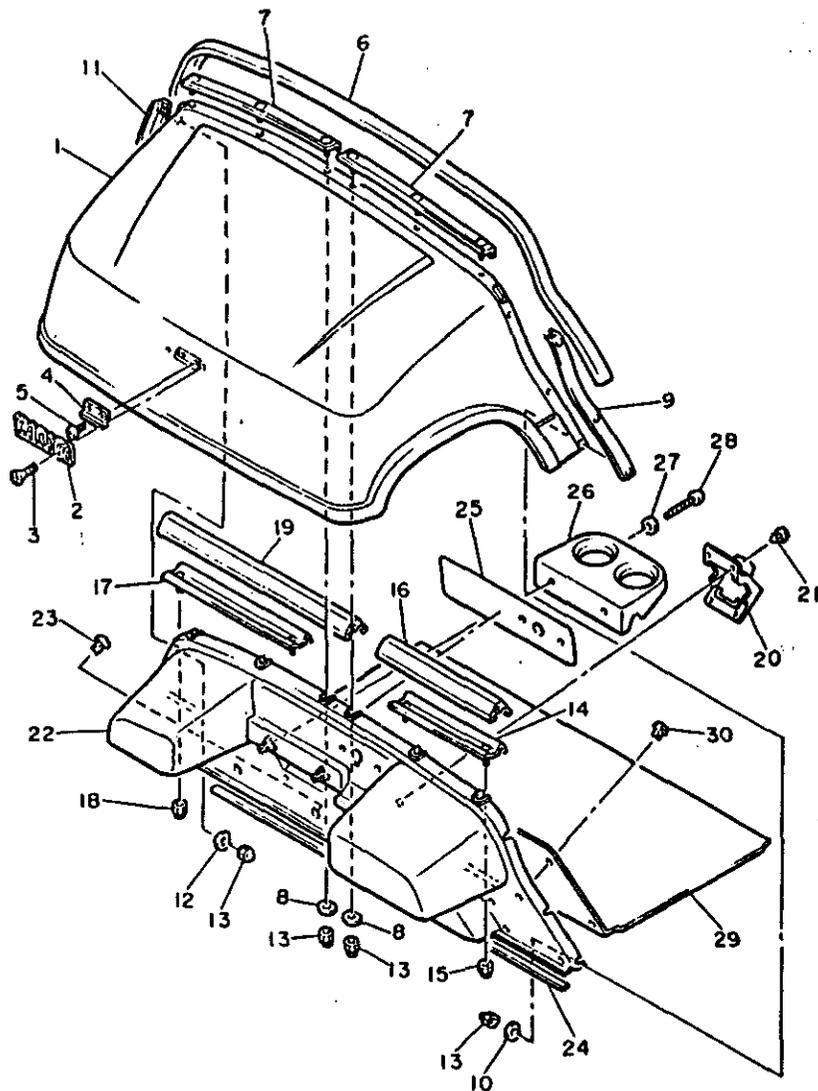

JF2100-0240

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-K8116-00	COWL, front	1	
2	J38-24181-00	EMBLEM 1	1	
3	90162-04002	SCREW, tapping	2	
4	JF2-K811G-00	BOLT, cowl fitting	1	
5	98980-06016	SCREW, bind	2	
6	JF2-7811V-00	PROTECTOR 1	1	
7	JF2-K8261-00	PLATE, body protect 1	2	
8	JF2-78117-00	PLATE 1	6	
9	JF2-K8262-00	PLATE, body protect 2	1	
10	JF2-78117-00	PLATE 1	3	
11	JF2-K8263-00	PLATE, body protect 3	1	
12	JF2-78117-00	PLATE 1	3	
13	90176-06069	NUT, cap	12	
14	JF2-K8264-00	PLATE, body protect 4	1	
15	95601-06100	NUT, u	2	
16	JF2-7811W-00	PROTECTOR 2	1	
17	JF2-K8265-00	PLATE, body protect 5	1	
18	95601-06100	NUT, u	2	
19	JF2-7811X-00	PROTECTOR 3	1	
20	JF2-78273-00	COVER, hole	1	
21	90269-11042	RIVET	4	
22	JF2-K8114-00	PANEL, front	1	
23	90269-08066	RIVET	3	
24	JF2-7815G-00	SEAL, front storage	1	
25	JF2-77768-00	LABEL, warning	1	
26	JF2-K835E-00	HOLDER, beverage	1	
27	90201-060A3	WASHER, plate	2	
28	97702-60130	SCREW, tapping	2	


FIG. 24 BODY

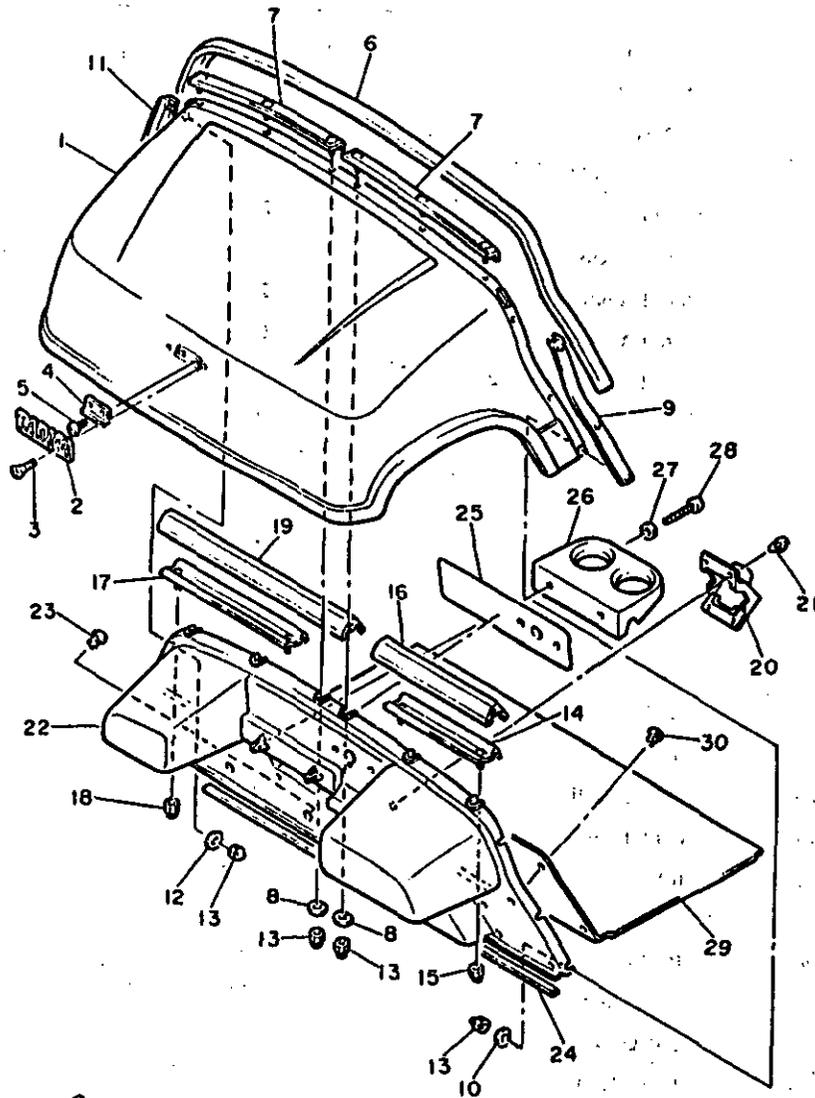

JF2100-0240

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	JF2-K8233-00	MAT, main floor 3	1	
30	90267-63047	RIVET, blind	11	

FIG. 25 BODY 2

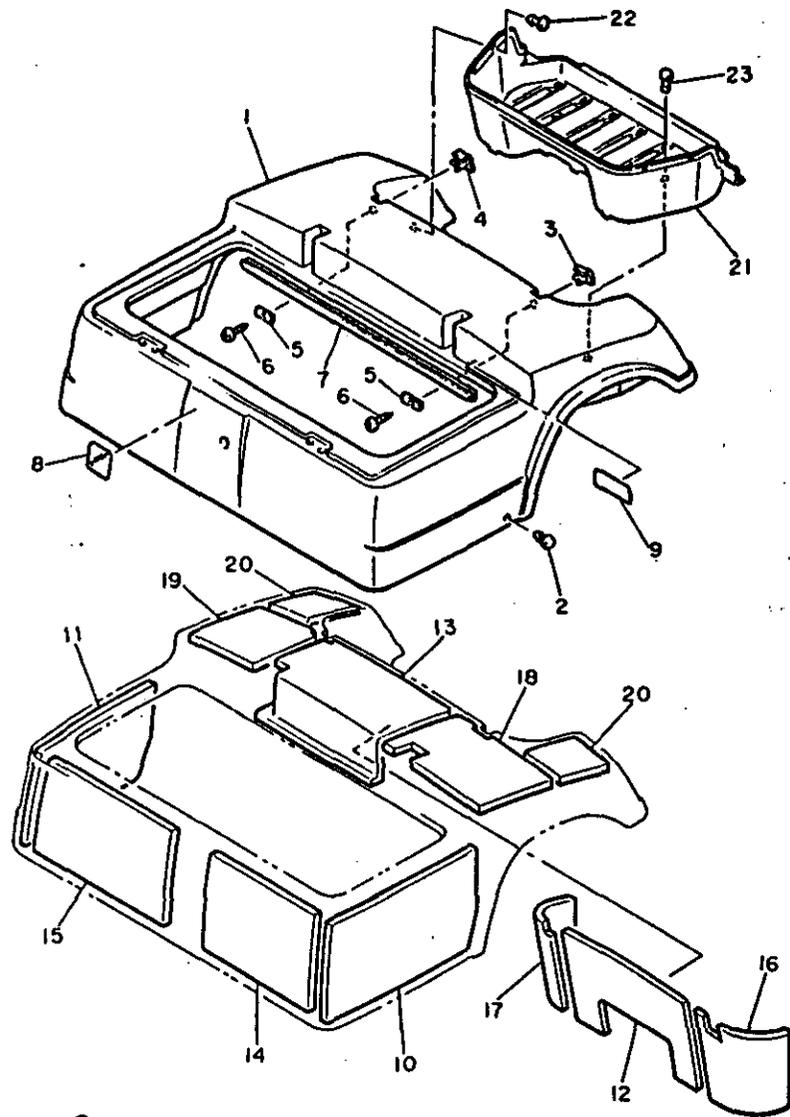


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-K8142-00	PANEL, rear body	1	
2	90269-08087	RIVET	2	
3	JF2-K8283-00	COVER, 3	1	
4	JF2-K8284-00	COVER, 4	1	
5	JF2-78118-00	PLATE 2	2	
6	97780-60116	SCREW, tapping	2	
7	JF2-7836A-00	PROTECTOR 2	1	
8	JF2-77741-00	INDICATOR 1	1	
9	JF2-77764-00	LABEL, warning 4	1	
10	JF2-K8251-00	PAD, silencer 1	1	
11	JF2-K8252-00	PAD, silencer 2	1	
12	JF2-78254-00	PAD, silencer 4	1	
13	JF2-78255-00	PAD, silencer 5	1	
14	JF2-K8256-00	PAD, silencer 6	1	
15	JF2-K8257-00	PAD, silencer 7	1	
16	JF2-K8258-00	PAD, silencer 8	1	
17	JF2-K8259-00	PAD, silencer 9	1	
18	JF2-K825A-00	PAD, silencer 10	1	
19	JF2-K825E-00	PAD, silencer 11	1	
20	JF2-K825L-00	PAD, silencer 17	2	
21	JF2-K8237-00	COVER, rear floor	1	
22	90269-08066	RIVET	7	
23	90267-63047	RIVET, blind	2	



JF2100-0250

FIG. 26 BODY FITTING

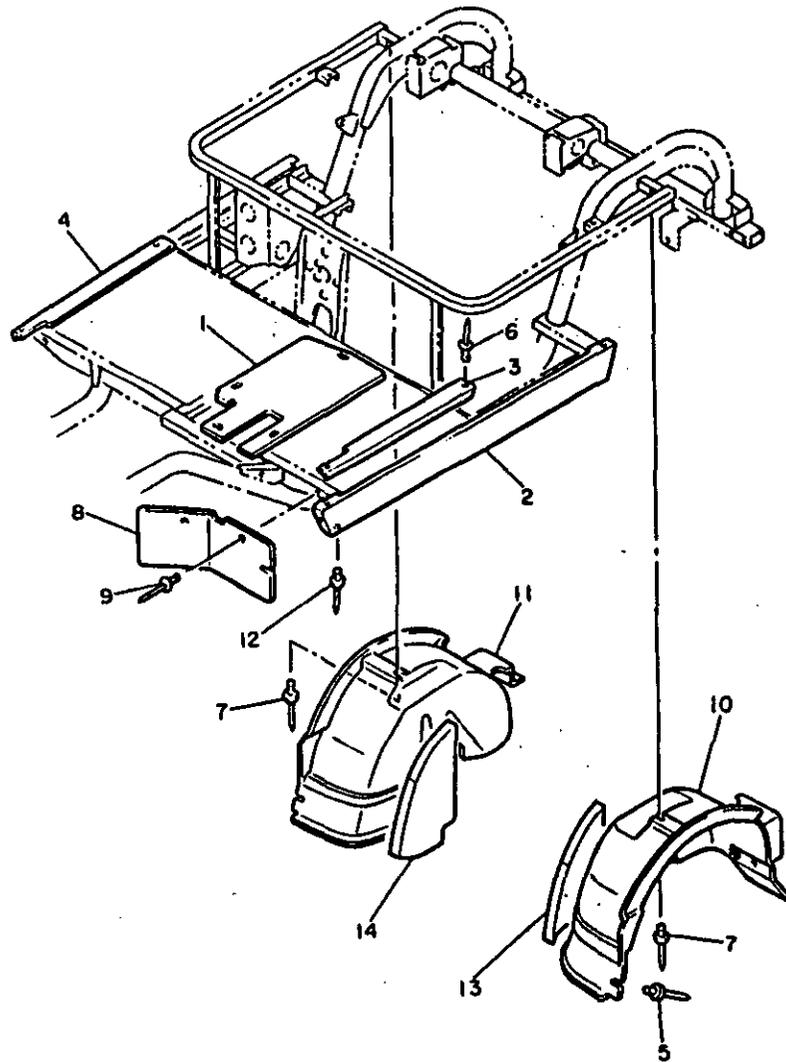


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-K8271-00	SERVICE LID, pedal	1	
2	JF2-K818A-00	PROTECTOR, side plate	2	
3	JF2-K8215-00	PLATE, side trim	1	
4	JF2-K821F-00	PLATE, side trim	1	
5	90267-48086	RIVET, blind	4	
6	90267-48154	RIVET, blind	6	
7	90267-48086	RIVET, blind	6	
8	JF2-K8187-00	FLAP, front fender	2	
9	90267-48101	RIVET, blind	4	
10	JF2-K8191-00	PANEL, rear fender 1	1	
11	JF2-K8192-00	PANEL, rear fender 2	1	
12	90267-48101	RIVET, blind	6	
13	JF2-K825F-00	PAD, silencer 12	1	
14	JF2-K825G-00	PAD, silencer 13	1	



JF2100-0260

FIG. 27 CARRIER

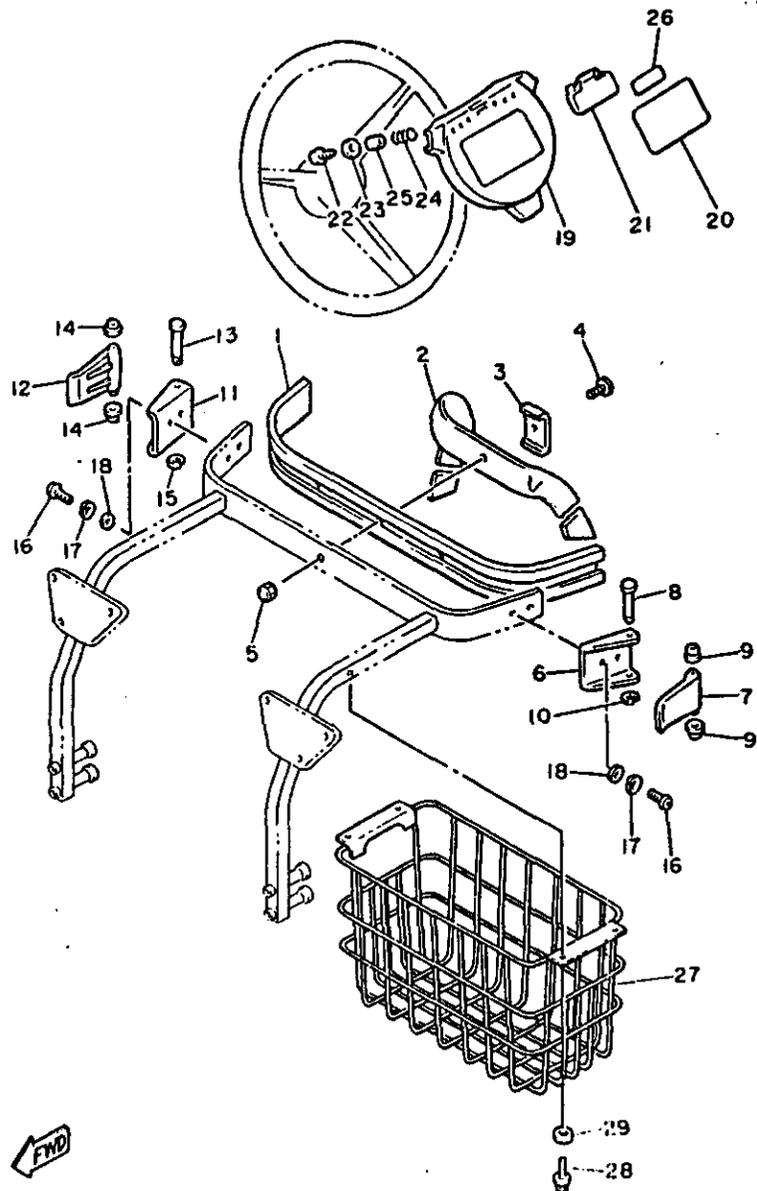


JF2100-0270

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-K8356-00	PAD, bag support	1	
2	JF2-K8355-00	BAND	1	
3	J38-78367-00	PLATE, anchor	1	
4	98980-06016	SCREW, bind	1	
5	95380-06800	NUT	1	
6	J17-78157-00	BASE, lock	1	
7	J17-78368-00	LEVER, lock	1	
8	J17-78369-00	PIN, lever	1	
9	90386-06108	BUSH	2	
10	99080-05600	CIRCLIP	1	
11	J17-78157-00	BASE, lock	1	
12	J17-78368-00	LEVER, lock	1	
13	J17-78369-00	PIN, lever	1	
14	90386-08108	BUSH	2	
15	99080-05600	CIRCLIP	1	
16	92580-06010	SCREW, pan head	4	
17	92990-06100	WASHER, spring	4	
18	92990-06200	WASHER, plain	4	
19	J55-K8357-00	HOLDER 1	1	J38-78357-00
20	J50-77762-00	LABEL, warning 2	1	
21	J55-K8358-00	HOLDER 2	1	J38-78358-01
22	97706-40525	SCREW, tapping	2	
23	90201-044A2	WASHER, plate	2	
24	90502-10013	SPRING, conical	2	
25	90387-046N7	COLLAR	2	
26	J51-77763-00	LABEL, warning 3	1	
27	JF2-K8340-01	LUGGAGE RACK ASSY., rear	1	
28	95805-08016	BOLT, flange	2	
29				

FIG. 27 CARRIER

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90201-08103	WASHER, plate	2	

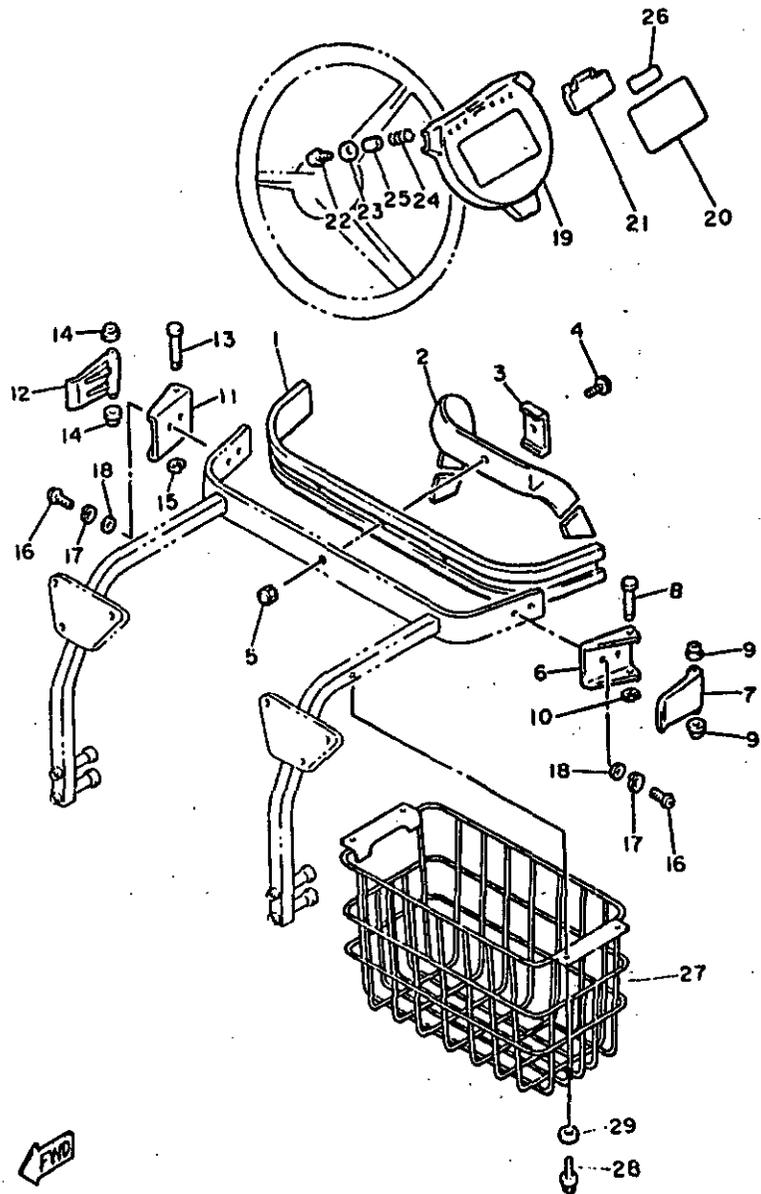

JF2100-0270

FIG. 28 SEAT

REF. NO.	PART NO.	DESCRIPTION	QTY	REMARKS
1	JF2-K8401-01	SEAT SUB-ASSY,cushion	1	
2	JF2-K8404-09	.COVER, seat	1	
3	JF2-K8425-01	.SEAL, seat	1	
4	JF2-K842A-01	.SEAL, seat 2	2	
5	JF2-K8121-01	REINFORCEMENT 1	2	
6	97780-60125	SCREW, tapping	12	
7	90201-06M02	WASHER, plate	12	
8	JF2-K842E-01	SEAL, seat 3	1	
9	90267-48086	RIVET, blind	6	
10	90201-04325	WASHER, plate	6	
11	JF2-K8426-00	HINGE, seat 1	2	
12	90267-48084	RIVET, blind	4	
13	JF2-K8361-01	ARM REST 1	1	
14	JF2-K8362-01	ARM REST 2	1	
15	90267-48084	RIVET, blind	8	
16	JF2-K8427-00	HINGE, seat 2	2	
17	95805-06020	BOLT, flange	4	
18	JF2-K8402-01	SEAT SUB ASSY, back	2	
19	JF2-K841G-09	.COVER, seat back 2	1	
20	JF2-K8413-00	COVER, seat back	2	
21	J55-K835A-00	HOLDER, ball	2	J38-7835A-01
22	97780-60325	SCREW, tapping	12	
23	JF2-K8423-02	SUPPORT, seat back	1	
24	95815-08075	BOLT, flange	4	
25	95805-06020	BOLT, flange	6	


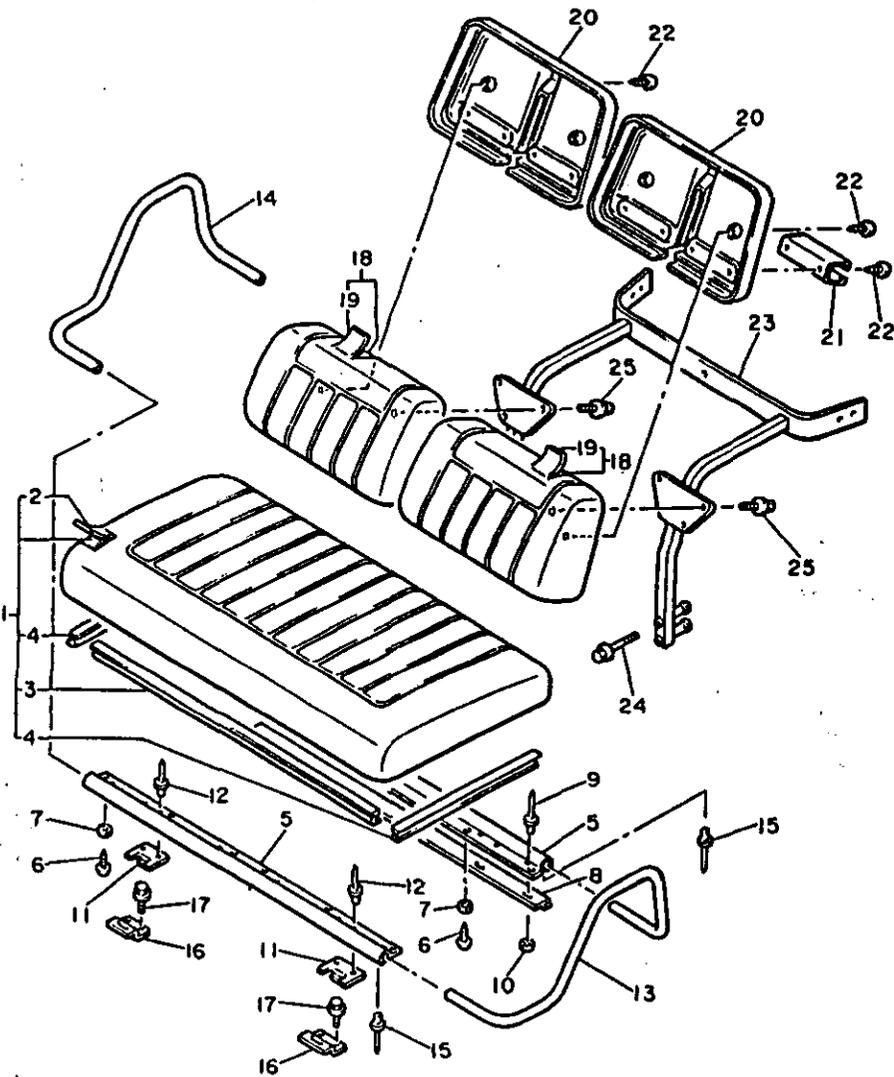


FIG. 29 STARTING MOTOR


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-H1100-00	STARTER GENERATOR ASSY	1	
2	J10-81150-10	ARMATURE ASSY	1	
3	J10-81157-10	BEARING 1 (6202 SD)	1	
4	J10-81158-10	BEARING 2 (6203 SD)	1	
5	J10-81159-10	HOLDER, bearing	1	
6	J38-81110-10	STATOR ASSY	1	
7	J38-81160-10	FIELD COIL ASSY	1	
8	J10-81148-10	SCREW 4	2	
9	95303-06600	NUT	4	
10	92990-06600	WASHER, plate	2	
11	92990-06100	WASHER, spring	4	
12	J10-81146-10	SCREW 2	4	
13	J38-81165-10	BRACKET, starter generator 1	1	
14	J10-81166-10	BRACKET, starter generator 2	1	
15	J10-81147-10	SCREW 3	2	
16	95303-06600	NUT	4	
17	92990-06600	WASHER, plate	2	
18	92990-06100	WASHER, spring	4	
19	JF2-81119-00	BRUSH HOLDER ASSY	1	
20	JF2-81111-00	BRUSH	4	
21	J38-81113-10	SPRING, brush	4	
22	J10-81115-10	WIRE, lead	2	
23	98501-05016	SCREW, pan head	2	
24	98580-04010	SCREW, pan head	4	
25	J38-81163-10	KEY	1	
26	95302-14600	NUT	1	
27	92901-14100	WASHER, spring	1	
28	98501-05018	SCREW, pan head	3	

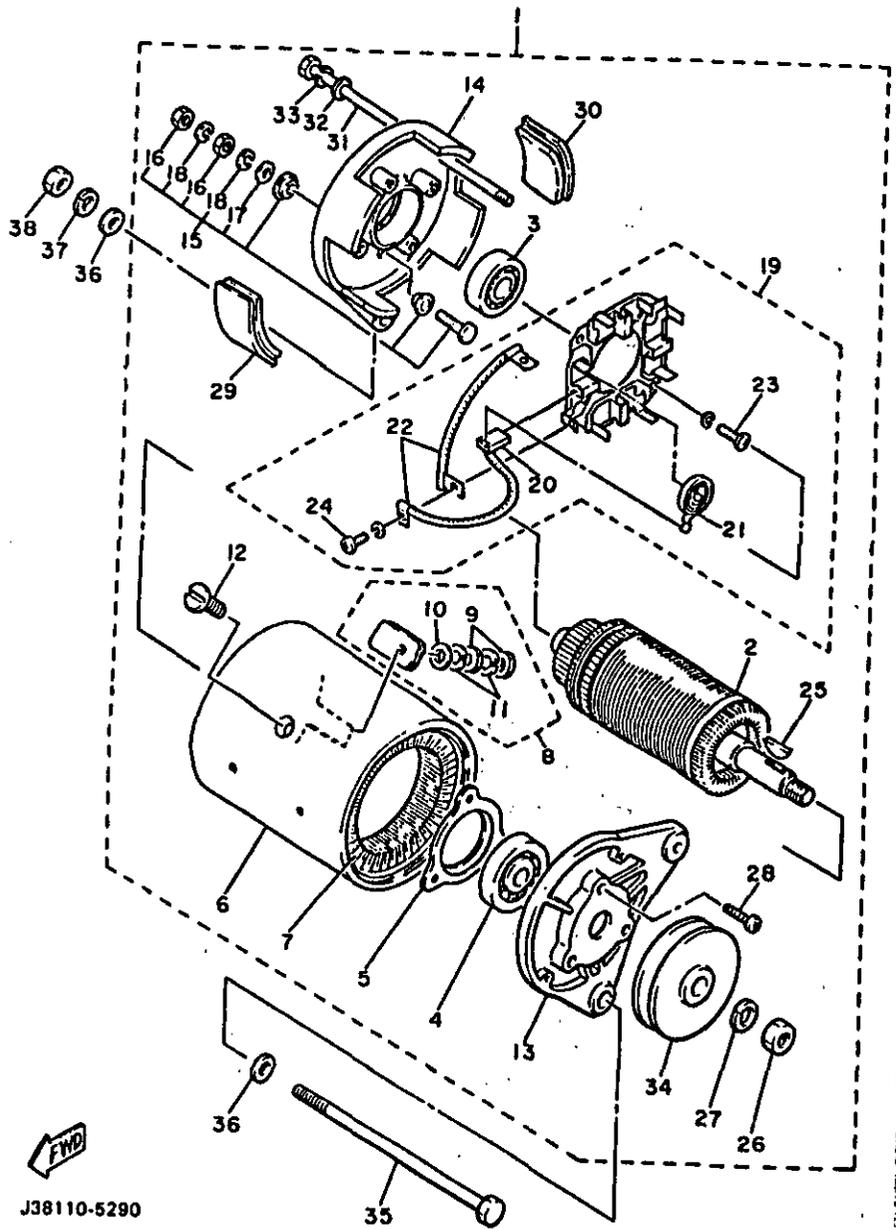

J38110-5290


FIG. 29 STARTING MOTOR

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J10-81129-10	.COVER, brush	3	
30	J10-81139-10	.COVER, brush 2	1	
31	J10-81145-10	.SCREW 1	2	
32	92990-06600	.WASHER, plate	2	
33	92990-06100	.WASHER, spring	2	
34	J38-81161-10	.PULLEY	1	
35	90101-12545	BOLT	1	
36	92902-12600	WASHER, plate	2	
37	92901-12100	WASHER, spring	1	
38	95302-12600	NUT	1	

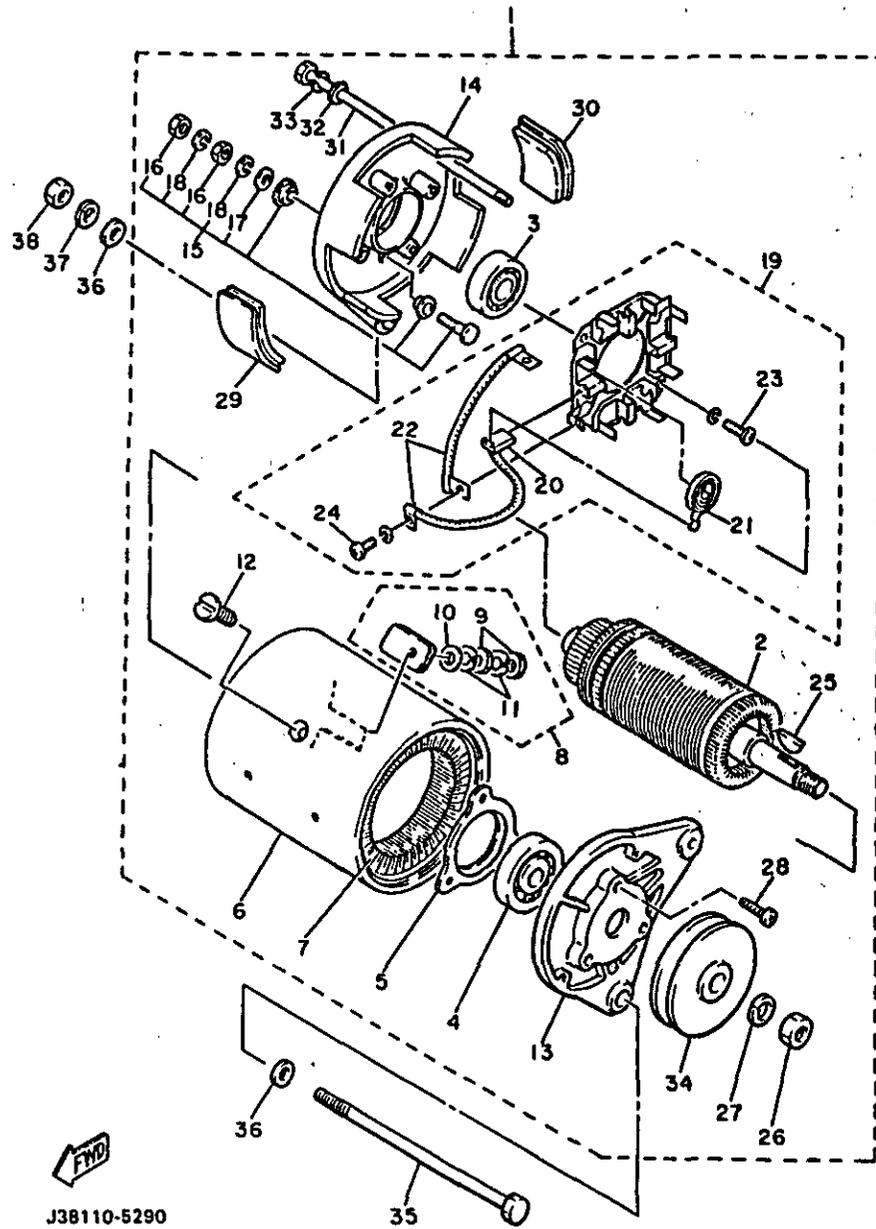

J38110-5290


FIG. 30 ELECTRICAL 1

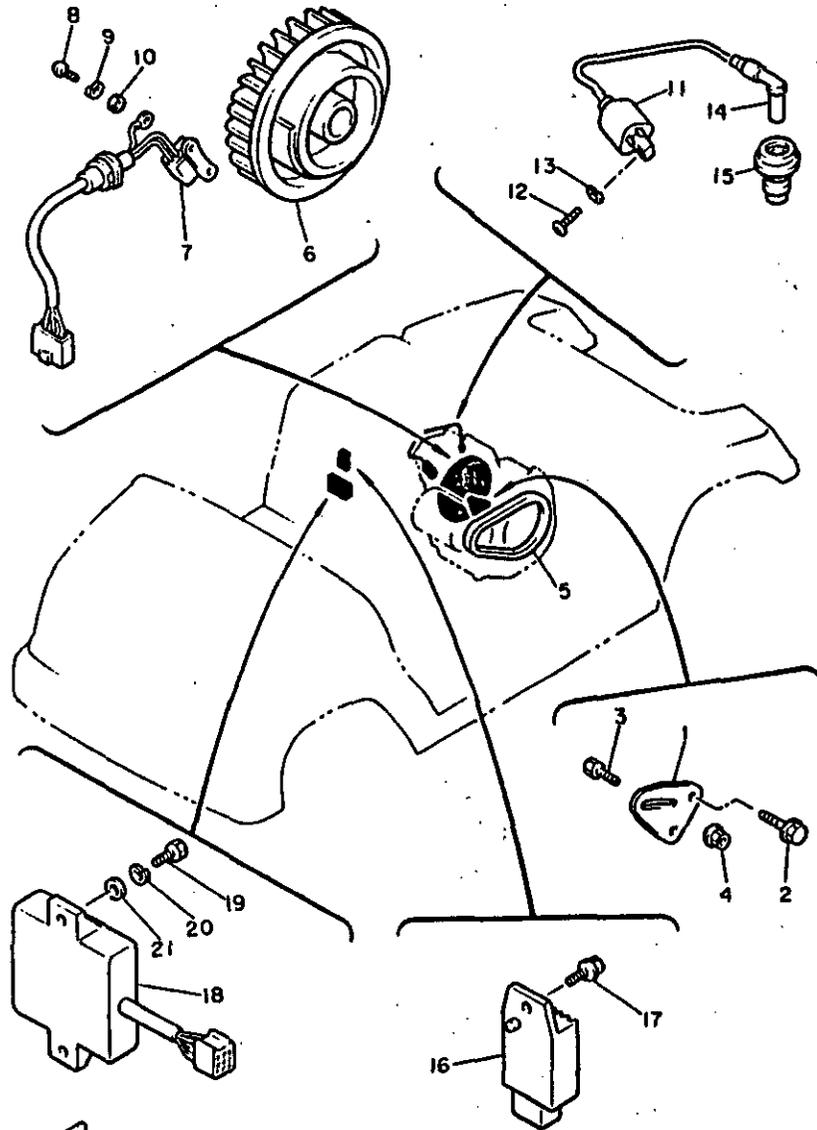

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-81170-00	TENSIONER ASSY	1	
2	95821-08025	BOLT, flange	2	
3	90109-087A5	BOLT	1	
4	95701-08500	NUT, flange	1	
5	J55-H1173-00	BELT	1	J38-81173-00
6	JF2-81350-00	ROTOR ASSY	1	
7	JF2-85580-00	COIL, pulser	1	
8	98501-05018	SCREW, pan head	2	
9	92990-05100	WASHER, spring	2	
10	92901-05600	WASHER, plate	2	
11	JF2-82310-00	IGNITION COIL ASSY	1	
12	98501-05020	SCREW, pan head	2	
13	92990-05100	WASHER, spring	2	
14	8K1-82370-20	PLUG CAP ASSY	1	
15	J38-82372-00	SEAL, plug cap	1	
16	JF2-81910-00	VOLTAGE REGULATOR ASSY	1	
17	95801-06016	BOLT, flange	1	
18	JF2-82305-00	IGNITOR UNIT ASSY	1	
19	97001-06020	BOLT	2	
20	92990-06100	WASHER, spring	2	
21	92990-06600	WASHER, plate	2	

FWD
JF2100-0300


FIG. 31 ELECTRICAL 2

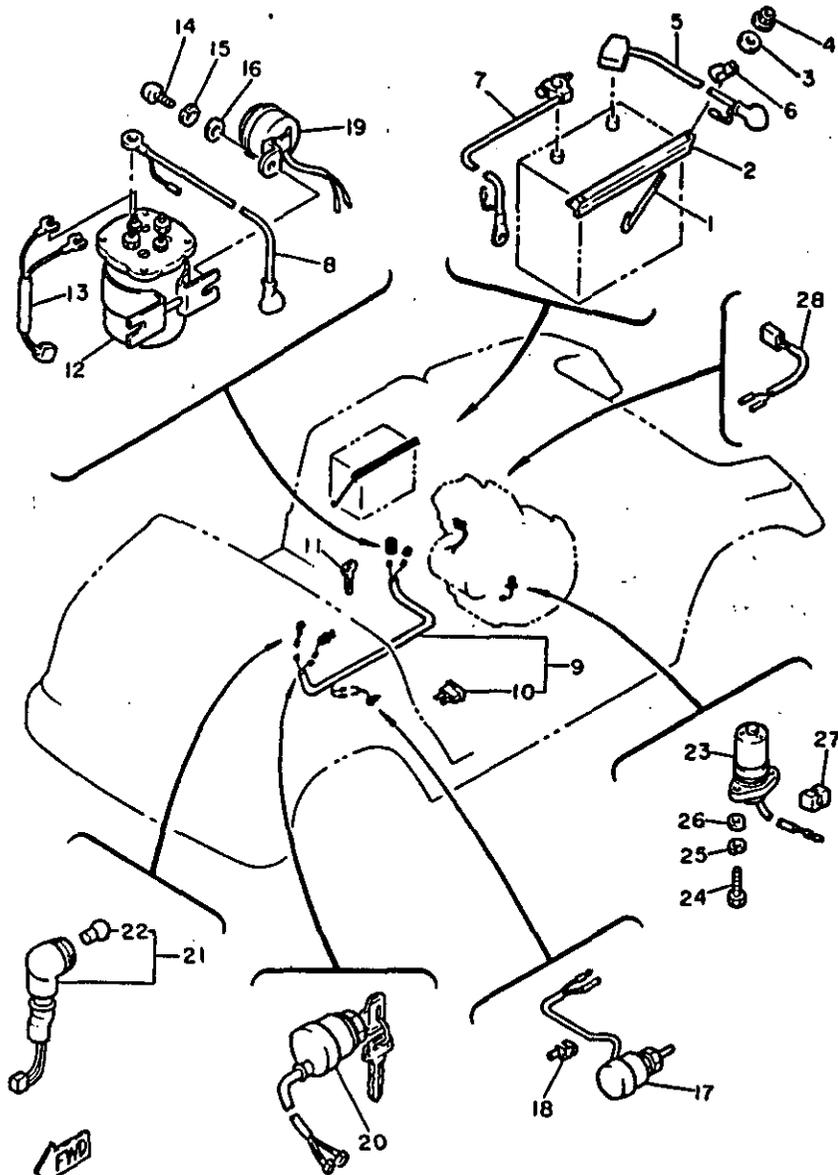

JF2100-0310

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J17-82133-00	SCREW, fitting	2	
2	J55-H2136-00	PLATE, battery fitting	1	J17-82136-00
3	92990-08200	WASHER, plain	2	
4	95701-08500	NUT, flange	2	
5	JF2-H2115-00	WIRE, plus lead	1	
6	90465-08028	CLAMP	1	
7	JF2-H2116-00	WIRE, minus lead	1	
8	JF2-H2117-00	WIRE, lead	1	
9	JF2-82590-00	WIRE HARNESS ASSY	1	
10	42X-82151-00	.FUSE (10A)	2	
11	90464-23041	CLAMP	1	
12	JF2-H1950-00	RELAY ASSY	1	
13	JF2-82105-00	WIRE HARNESS	1	
14	98502-06016	SCREW, pan head	2	
15	92990-06100	WASHER, spring	2	
16	92990-06600	WASHER, plate	2	
17	J41-82550-00	ENGINE STOP SWITCH ASSY	1	
18	90465-06038	CLAMP	1	
19	J10-83383-02	BUZZER	1	
20	J55-82510-00	MAIN SWITCH ASSY	1	
21	JF2-83530-00	PILOT LIGHT ASSY	1	
22	123-83516-21	.BULB (12V-3.4W)	1	
23	JF2-85720-00	OIL LEVEL GAUGE ASSY	1	
24	97001-06020	BOLT	2	
25	92990-06100	WASHER, spring	2	
26	92990-06600	WASHER, plate	2	
27	J38-82598-00	GROMMET	1	
28	JF2-82318-00	WIRE, sub-lead	1	

FIG. 32 REGULAR HITCH (OPTIONAL PARTS)

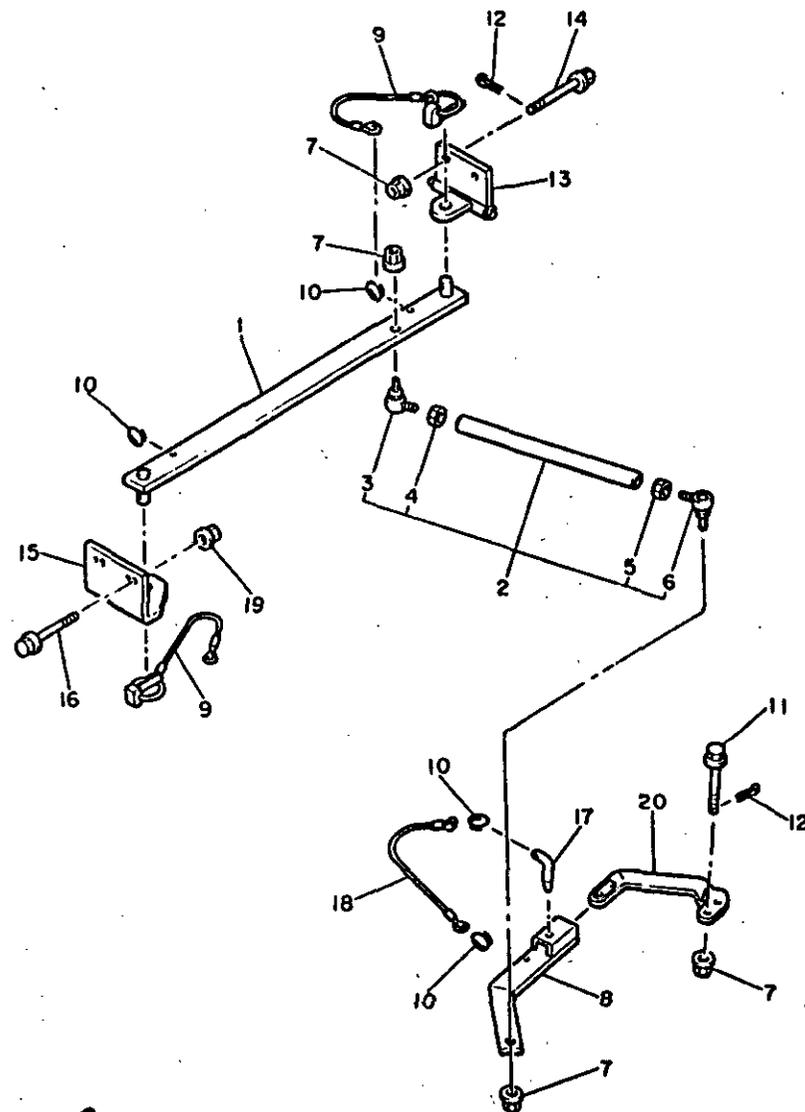

JF2100-0320

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	JF2-F389A-00	BAR, drain	1	
2	JF2-F3820-00	STEERING RELAY ASSY	1	
3	JF2-F3845-00	JOINT, universal 2	1	
4	90170-10395	.NUT, hexagon	1	
5	95302-10700	.NUT, hexagon	1	
6	JF2-F3841-00	JOINT, universal	1	
7	95602-10200	NUT, u flange	6	
8	JF2-F3562-00	ARM, front	1	
9	JF2-F3822-00	JOINT, 1	2	
10	JF2-F387H-00	RING, snap	4	
11	90105-10366	BOLT, flange	2	
12	91402-25020	PIN, split	4	
13	J56-F3881-00	BRACKET, 1	1	
14	90105-10358	BOLT, flange	2	
15	JF2-F3882-00	BRACKET, 2	1	
16	95822-08070	BOLT, flange	2	
17	JF2-F3823-00	JOINT, 2	1	
18	JF2-F3874-00	HOLDER, wire	1	
19	95702-08500	NUT, flange	2	
20	J41-23532-02	ARM, steering	1	

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.
J55-E4710-00	7- 1	JF2-K8107-00	23-13
J55-F1419-00	9- 2	JF2-K811G-00	24- 4
JF2-F2110-00	10- 1	JF2-K8114-00	24-22
J55-F2130-00	10-16	JF2-K8115-00	24- 1
JF2-F2501-00	11- 1	JF2-K8121-01	28- 5
JF2-F254R-00	11- 2	JF2-K8142-00	25- 1
JF2-F2592-00	11- 6	JF2-K8163-00	23- 1
JF2-F2593-00	11-10	JF2-K817U-00	23-10
J55-F3516-00	12-10	JF2-K817A-00	23-15
	12-25	JF2-K818A-00	26- 2
2-F3562-00	32- 8	JF2-K8187-00	26- 8
2-F3570-00	12- 1	JF2-K8191-00	26-10
JF2-F3580-00	12-15	JF2-K8192-00	26-11
JF2-F3811-00	13- 1	JF2-K821F-00	26- 4
JF2-F3820-00	32- 2	JF2-K8215-00	26- 3
JF2-F3822-00	32- 9	JF2-K8233-00	24-29
JF2-F3823-00	32-17	JF2-K8237-00	25-21
JF2-F3830-00	13-23	JF2-K825A-00	25-18
JF2-F3838-00	13-16	JF2-K825E-00	25-19
JF2-F3841-00	32- 6	JF2-K825F-00	26-13
JF2-F3845-00	32- 3	JF2-K825G-00	26-14
JF2-F3850-00	13-28	JF2-K825H-00	11-11
JF2-F387H-00	32-10	JF2-K825L-00	25-20
JF2-F3874-00	32-18	JF2-K8251-00	25-10
J55-F3876-00	13- 5	JF2-K8252-00	25-11
J56-F3881-00	32-43	JF2-K8256-00	25-14
JF2-F3882-00	32-15	JF2-K8257-00	25-15
JF2-F389A-00	32- 1	JF2-K8258-00	25-16
JF2-F4110-00	14- 1	JF2-K8259-00	25-17
JF2-F6311-01	17-16	JF2-K8261-00	24- 7
JF2-F6331-00	5-34	JF2-K8262-00	24- 9
JF2-F6341-00	15-52	JF2-K8263-00	24-11
JF2-F6351-00	15-53	JF2-K8264-00	24-14
J55-G6241-00	19-16	JF2-K8265-00	24-17
J55-G6260-00	20- 1	JF2-K8266-00	11- 3
J55-G6270-00	20- 2	JF2-K8271-00	26- 1
J55-G6371-00	21-61	JF2-K8283-00	25- 3
J55-G6383-00	21-62	JF2-K8284-00	25- 4
J55-G6521-00	22-12	JF2-K8340-01	27-27
JF2-H1100-00	29- 1	J55-K835A-00	28-21
55-H1173-00	30- 5	JF2-K835E-00	24-28
2-H1950-00	31-12	JF2-K8355-00	27- 2
F2-H2115-00	31- 5	JF2-K8356-00	27- 1
JF2-H2116-00	31- 7	J55-K8357-00	27-19
JF2-H2117-00	31- 8	J55-K8358-00	27-21
J55-H2138-00	31- 2	JF2-K8361-01	28-13
JF2-K7511-00	23- 5	JF2-K8362-01	28-14
JF2-K7521-00	23-17	JF2-K8401-01	28- 1

PART NO.	GRID NO.	PART NO.	GRID NO.
JF2-K8402-01	28-18	J38-12154-00	3- 9
JF2-K8404-09	28- 2	J38-12156-00	3- 8
JF2-K841G-09	28-19	J38-12159-00	3-12
JF2-K8413-00	28-20	J38-12161-01	3- 7
JF2-K842A-01	28- 4	J38-12171-00	3-11
JF2-K842E-01	28- 8	J38-12621-01	4- 1
JF2-K8423-02	28-23	J38-12640-00	4- 4
JF2-K8425-01	28- 3	J38-12651-01	4- 5
JF2-K8426-00	28-11	J38-12652-00	4- 6
JF2-K8427-00	28-16	J38-13115-00	8-20
38W-W1391-01	14-14	J38-13161-00	8-24
J38-W2511-00	12-37	J38-13556-00	5- 1
J55-W2536-00	16- 2	J38-13557-00	5- 3
	16-17	J38-13596-00	5- 2
	15-18	J38-14101-00	6- 1
J17-W2561-00	1- 1	J10-14122-00	6- 7
J38-11102-00	1-10	J38-14133-00	6-11
J38-11116-00	1-10	J38-14141-00	6-23
J38-11133-09	1- 2	620-14142-87	6-10
J38-11181-00	1- 8	620-14142-72	6-10
J38-11191-00	1- 9	J38-14150-00	6-22
J38-11193-00	1-12	7R1-14162-00	6-20
812-11198-00	8-17	796-14184-00	6-18
J38-11355-00	8-30	J38-14185-00	6- 9
J38-11400-00	2- 1	J38-14186-00	6- 8
J38-11496-00	2-15	127-14198-00	6-19
J38-11500-00	2-14	75G-14211-00	6- 5
J38-11531-00	2-18	620-14212-00	6- 6
J38-11610-00	2- 3	3G2-1423E-41	6-17
J38-11610-10	2- 3	3G2-1423E-42	6-17
J38-11610-20	2- 3	J38-14243-00	6- 4
J38-11631-01-A0	2- 2	J38-14291-00	8-16
7A9-11633-00	2- 4	J38-14388-00	8-19
J38-11635-01	2- 2	J38-1441F-00	5-23
J38-11636-01	2- 2	J38-14411-00	5-11
J38-11650-00	2- 6	J38-14412-00	5-13
J38-11654-00	2- 7	J38-14416-00	5-22
J38-11656-00	2- 9	J10-14417-00	5-25
J38-11656-10	2- 9	J38-14419-00	5-18
J38-11656-20	2- 9	J10-14438-00	5-21
J38-11657-00	2-10	J38-14450-00	5-16
J38-12111-01	3- 1	J38-14453-00	5- 8
J38-12117-01	3- 4	J38-1448A-00	5-28
J38-12118-00	3- 5	55K-14476-00	5-14
5H0-12119-00	3-16	J38-14479-00	5-17
J38-12121-01	3- 2	J38-14484-00	5-16
J38-12161-01	3- 6	J38-14581-00	6-12
J38-12152-00	3-13	J10-14597-00	6-21
J38-12153-00	3-10		

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.
J38-14613-00	7- 2	J38-23841-01	13-29
J38-14771-00	7- 5	J38-23845-01	13-25
J38-15100-02	8- 1		13-30
J38-15112-00	8-10	J10-23877-00	13- 7
J38-15123-00	8- 4	J38-24161-00	24- 2
J38-15148-00	8- 2	JF2-24311-00	14-16
J38-15155-00	8- 3	807-24376-00	8-27
J38-15361-00	8- 8	JF2-24410-01	14-12
J38-15363-00	8-11	J38-24452-18	14-13
J38-15411-01	8- 9	J24-24460-01	14- 5
J38-15451-00	8-18	J38-24461-00	1-11
J17-17688-00	20- 5	8R4-24560-00	14- 6
J38-2141A-00	9-15	8F3-24564-00	14- 7
J38-21411-02	9- 1	J10-24612-00	14- 3
J38-21486-00	9- 7	J24-24620-01	14- 2
J38-21488-00	9- 8	J17-25118-00	12-45
JF2-21773-00	14- 4	J55-25357-00	16-30
J50-22123-00	10- 2	J55-25358-00	16-15
J50-22124-00	10- 5	J17-25670-01	15- 4
	10-10	J17-25672-00	15-22
J17-2214F-00	9-12	J17-25673-00	15-27
J31-2217J-01	9-11		15-43
J50-22171-00	10- 4	J17-25679-01	15-14
JF2-22172-00	10- 9	JF2-25681-00	15-48
JF2-22210-00	10-13	JF2-25685-00	15-45
J56-2252M-00	15-39	J38-26312-00	5-30
JF2-23350-00	12-33	J38-27204-00	16- 4
J10-23444-00	13- 8	J38-27205-00	16-19
J10-23459-00	13-11	J17-27208-00	16- 3
J38-23462-00	13-10		16-18
J38-23511-01	12- 5	J17-27208-00	16- 1
J38-23512-02	12- 6	J17-27209-00	16-16
	12-20	J10-27211-00	15- 3
J38-23521-01	12-19	J17-27221-00	15-18
J38-23526-00	12- 2	J17-27228-00	15-28
	12-16	J17-27231-00	15-23
J38-23527-00	12- 9	J17-27232-00	15-24
	12-24	J46-27245-00	15-35
J38-23528-00	12-12	J17-27246-00	15-40
	12-27	J46-27250-01	15- 1
J41-23532-02	32-20	J55-27260-00	16-24
J38-23814-00	13-14	J55-27270-00	16- 9
J38-23816-00	13- 2	J10-27281-00	16- 5
J55-23818-00	13- 9		16-20
J38-23826-01	13-19	J10-27282-00	16- 6
J38-23836-00	13- 3		16-21
JF2-23840-00	13-15	J10-27288-00	16-10
J38-23841-01	13-24		16-25

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.	PART NO.	GRID NO.
J17-27853-00	17- 2	J38-46421-01	21-37	J10-81159-10	29- 5
JF2-27854-00	17-25	JF2-46510-00	22- 5	J38-81160-10	29- 7
JF2-27871-00	17- 6	JF2-46520-00	22- 6	J38-81161-10	29-34
J38-27872-00	17- 3	JF2-46540-00	22- 1	J38-81163-10	29-25
J38-27874-00	17- 1	JF2-46550-00	22- 2	J38-81165-10	29-13
J10-27911-00	18-13	835-47559-00	21- 7	J10-81168-10	29-14
J10-27912-00	18-10	JF2-77617-00	23- 2	J38-81170-00	30- 1
J10-27913-00	18-12	JF2-77527-00	23- 3	JF2-81350-00	30- 6
J38-27921-00	18-17	JF2-77628-00	23- 9	JF2-81910-00	30-16
J10-27922-00	18-18	JF2-77741-00	25- 8	JF2-82105-00	31-13
J10-27927-00	18-14	J50-77762-00	27-20	J17-82133-00	31- 1
J38-27951-00	18- 1	J51-77763-00	27-28	42X-82151-00	31-10
J38-27959-00	18- 5	JF2-77764-00	25- 9	JF2-82305-00	30-18
J38-27981-00	17-21	JF2-77768-00	24-25	JF2-82310-00	30-11
J38-27982-00	18- 7	JF2-7811V-00	24- 8	JF2-82318-00	31-28
J38-46205-01	19- 9	JF2-7811W-00	24-16	8K1-82370-20	30-14
J38-46210-00	19- 1	JF2-7811X-00	24-19	J38-82372-00	30-15
J38-46220-00	19- 2	JF2-78117-00	24- 8	J55-82510-00	31-20
J38-46231-00	19- 8		24-10	J41-82560-00	31-17
J38-46236-00	19-10		24-12	JF2-82590-00	31- 9
J38-46237-00	19-11	JF2-78118-00	25- 5	J38-82598-00	31-27
J38-46249-00	19-15	JF2-7814A-00	11- 5	J50-82617-00	21-78
J38-46251-00	19- 7	JF2-7815G-00	24-24	J10-83383-02	31-19
J38-46253-00	19- 4	J17-78157-00	27- 6	123-83516-21	31-22
J38-46284-00	20- 4		27-11	JF2-83530-00	31-21
J38-46311-00	21- 1	JF2-78254-00	25-12	25G-83936-00	15-61
J38-46312-00	21- 8	JF2-78255-00	25-13	JF2-85580-00	30- 7
J38-46319-00	21-13	JF2-78273-00	24-20	JF2-85710-00	14- 8
J38-46321-02	21-25	JF2-7838A-00	25- 7	JF2-85720-00	31-23
J38-4633A-00	21-47	J38-78367-00	27- 3	90101-06555	15- 8
J38-46331-01	21-26	J17-78368-00	27- 7	90101-08344	21-19
J38-46338-00	21-48		27-12		21-60
J38-46348-00	21-44	J17-78369-00	27- 8	90101-10447	15-37
J38-46351-00	21-28		27-13	90101-12545	29-35
J38-46356-00	21-45	J38-81110-10	29- 6	90105-08390	21-41
J38-4636A-00	21-32	JF2-81111-00	29-20	90105-10357	12-30
J38-46361-01	21-29	J38-81113-10	29-21	90105-10358	32- 4
J38-46362-00	21-30	J10-81115-10	29-22	90105-10360	12-21
J38-46363-00	21-31	JF2-81119-00	29-19	90105-10366	32-11
JF2-46370-00	21-67	J10-81129-10	29-29	90106-08040	17- 9
JF2-46372-00	21-75	J10-81139-10	29-30	90109-08513	4- 9
JF2-46376-00	21-68	J10-81145-10	29-31	90109-08669	15-11
JF2-46382-00	21-63	J10-81146-10	29-12	90109-087A5	30- 3
J38-46384-00	21-54	J10-81147-10	29-15	90113-04050	19-12
J38-46411-01	21-36	J10-81148-10	29- 8	90119-06097	5-28
J38-46414-00	21-38	J10-81150-10	29- 2	90119-08119	7- 7
J38-46415-00	21-39	J10-81157-10	29- 3	90157-04092	18-19
J38-46417-02	21-40	J10-81158-10	29- 4	90159-05117	8- 5

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.	PART NO.	GRID NO.
90162-04002	24- 3	90201-201G9	2-19	90387-050X4	17-26
90170-06128	3-17	90201-201L9	21-69	90387-07390	5-29
90170-08024	13-12	90201-20275	18-18	90387-078U6	19-18
90170-10395	32- 4	90201-204K8	21-33	90387-107F8	15-44
90170-12054	13-27	90201-257J2	21-34	90387-152M7	2-21
	13-32	90202-07164	19-17	90387-155R3	2-20
90170-12055	13-28	90202-07186	19-19	90387-21690	18-11
	13-31	90202-08110	18-20	90387-241M7	12-40
90170-16182	2-13	90202-20130	20- 7	90387-252M8	21-35
90178-06089	24-13	90209-32271	12-42	90430-14043	21-18
90179-07564	15- 9	90215-16252	13-21	90445-09073	8-28
90179-08261	15-50	90249-07215	21-53	90445-09085	14-19
90179-08327	2- 8	90249-14129	15-49	90445-09304	14-18
90179-08378	15-13	90267-40073	5-24	90445-110E6	8-25
90179-12262	12-47	90267-40127	10-17	90445-113E4	8-21
90179-12262	22-11	90267-48084	28-12	90445-130F8	1-15
90185-10115	10- 3	90267-48084	28-15	90460-43279	5- 9
	12- 7	90267-48086	26- 5	90460-53239	5-10
	12-22		26- 7	90461-08106	15-62
	12-31		28- 9	90461-12117	15-58
90185-12061	13-17	90267-48101	28- 9	90464-11074	14-17
90185-12072	10- 7		26-12	90464-15093	8-31
	10-12	90267-48154	26- 6	90464-16115	5-39
	10-15	90267-63047	23-11	90464-23041	31-11
	28-10		24-30	90464-26114	5-38
90201-04325	27-23		25-23	90465-06038	21-79
90201-044A2	28- 7	90269-08066	24-23		31-18
90201-06M02	24-27		25-22	90465-08028	31- 6
90201-060A3	23-12	90269-08067	25- 2	90465-08316	21-21
90201-063J2	9-13	90269-11042	24-21	90465-08334	17-24
90201-06778	21-20	90280-05013	2-11	90465-13169	15-60
90201-08087	21-51	90280-05022	20- 8	90467-08017	8-29
	27-29	90338-17170	12- 3		14-21
90201-08103	14-11		12-17		14-22
90201-08748	15-34	90340-14036	21-17	90467-10008	8-22
90201-104G8	5-27	90380-12051	15- 7		8-26
90201-114E6	5-42	90380-12105	15-33	90467-11009	14-20
	16-14	90384-05163	15- 5	90467-12052	1-16
90201-121H8	16-29	90384-10162	15-17	90468-07179	5-37
	16-13	90384-12164	15- 6	90468-08104	8-23
90201-121H9	16-28	90384-14080	15- 2	90468-10049	5-32
	21-58		17-11		5-36
90201-12166	15-31	90386-06108	27- 9		5-40
90201-123F2	20- 9		27-14		17-18
90201-12588	12-11	90386-08141	18- 3	90480-13238	5-20
90201-156J2	12-26	90386-15139	12- 4	90480-14100	5-12
	21-46		12-18	90480-18277	5-19
90201-17713	21-70	90387-046N7	27-25	90501-10060	21-52
90201-19551					

NUMERICAL INDEX

PART NO.	GRID NO.
90501-21133	2-16
90501-264A9	3- 3
90502-10013	27-24
90506-12277	15-26
90506-20281	16- 7
	16-22
90506-26191	16- 8
	16-23
	17-15
90506-26282	15-21
90508-14548	17-19
90508-16460	15-10
90508-23542	15-32
90508-26557	15-36
90508-40543	18- 4
90508-40678	20- 8
90508-45679	17-20
90560-05001	1-13
91318-06025	12- 8
91401-25020	12-23
	12-32
	12-44
	13-34
91401-25030	20-11
91402-20012	21-57
	21-66
	32-12
91402-25020	15-57
91490-25015	15-47
91490-30015	12-14
91609-35028	12-29
	17- 5
	21-49
91609-40020	21-43
91609-40040	12-13
91609-60028	12-28
	17- 4
	5-31
91701-05010	5-35
	5-41
	21-55
91701-08022	15-55
91701-08018	15-58
91701-08026	15-46
91701-10022	17-17
91702-05012	21-64
91702-06014	3-16
91810-09014	21-42
91812-16001	

PART NO.	GRID NO.
92501-06030	5- 4
92580-06010	27-16
92901-04600	21-74
92901-05100	19-14
92901-05600	11- 9
	15-29
	30-10
	9- 4
92901-10100	22- 8
	10- 8
92901-12100	29-37
	29-27
92901-14100	2-12
92901-16100	21-73
92902-04100	14-10
92902-08100	15-12
	15-42
	16-32
92902-08100	18- 9
	21-23
	22- 4
	23- 7
	13-18
92902-12200	29-36
92902-12600	6- 3
92990-05100	11- 8
	30- 9
	30-13
	5- 5
92990-06100	6-14
	16-11
	16-26
	17- 8
	17-14
	21-77
	27-17
	29-11
	29-18
	29-33
	30-20
	31-15
	31-25
92990-06200	21-56
	27-18
	31- 3
92990-06600	1-14
	4- 8
	5- 6

PART NO.	GRID NO.
92990-06600	21-65
	29-10
	29-17
	29-32
	30-21
	31-16
	31-26
92990-08100	7- 4
92990-08200	15-15
92990-08600	23- 8
92990-10600	9- 5
	15-19
	22- 9
	21-59
93102-12224	20- 3
93102-20309	21- 6
93102-22189	21-12
	13- 4
93102-22314	21- 5
93102-25017	19- 3
93102-28348	12-41
93102-30083	8-13
93102-30195	8- 7
93102-35191	18-22
93109-08050	17-12
93210-14104	12-39
93306-00511	21- 4
93306-00803	21-11
	21- 9
93306-20324	21- 3
93306-20401	21-10
	12-38
93306-20437	21- 2
93306-20541	8-12
93306-30621	8- 6
93306-30709	13- 6
93332-00010	18-15
93342-22502	21-27
93410-25017	2- 5
93450-19047	2-17
93605-10090	8-14
93608-12063	19- 6
93700-06004	1- 8
94702-00343	9- 6
95021-10040	7- 6
95026-10020	32- 5
95302-10700	29-36
95302-12600	29-26
95302-14600	

PART NO.	GRID NO.
95303-06600	9-14
	16-12
	16-27
	18- 2
	29- 9
	29-16
	15-25
95303-06700	17-23
	21-24
95303-08600	15-61
95303-08700	17-10
	27- 5
95380-06800	7- 3
95380-08600	24-15
95601-06100	24-18
	5- 7
95601-06200	20-10
95601-12200	12-43
95601-14100	12-36
95602-10100	13-33
	15-38
	32- 7
	21-60
95602-10200	1- 7
95611-08100	18- 6
95612-08618	31- 4
95701-06300	9-10
95701-06500	30- 4
95701-08500	13-20
	32-19
95701-16300	9- 9
95702-08500	23- 4
95702-10500	15-59
95706-08500	14-15
95801-06012	30-17
95801-06016	4- 2
	13-13
95801-08020	11- 4
	28-17
	28-25
	27-28
95805-08016	3-14
95811-06030	8-15
95811-08035	21-14
95811-08040	21-15
95811-08050	1- 4
95811-08070	1- 5
95812-08045	13-22
95812-10050	

NUMERICAL INDEX

PART NO.	GRID NO.
95812-12085	10- 8
	10-11
	10-14
	28-24
95815-08075	23-14
95816-08016	23-16
	23-18
	30- 2
95821-08025	32-16
95822-08070	30-19
97001-06020	31-24
	17- 7
97001-06025	17-22
	8-16
97001-12020	12-35
97002-10050	12-34
97002-10085	18- 8
97011-08016	22- 3
97011-08025	22- 7
97011-10020	9- 3
97011-10025	16-31
97012-08018	17-13
97021-08016	21-76
	21-22
97022-08075	14- 9
97313-08020	15-41
	23- 6
	24-28
97702-60130	27-22
97706-40528	25- 6
97780-60116	28- 6
97780-60125	28-22
97780-60325	4- 3
97780-60516	21-72
97802-04016	6- 2
98501-05008	19-13
	11- 7
98501-05012	29-23
98501-05016	30- 8
	29-28
98501-05018	30-12
98501-05020	6-13
98501-06010	4- 7
98502-06016	31-14
	29-24
98580-04010	6-15
98701-05008	19- 5
98901-05008	17-27
98906-05012	

PART NO.	GRID NO.
98980-06016	24- 5
	27- 4
99001-04600	15-30
99002-09600	15-54
99009-08600	18-21
99009-19400	21-71
99080-05600	27-10
	27-15
	5-33
99080-07600	15-20
	1- 3
99510-12016	21-16