



YAMAHA

PARTS CATALOGUE

G2-AM6 (J39)

16J39-700E1

CONTENTS

ENGINE

Cylinder	B2
Crankshaft · Piston	B3
Valve	B4
Air Shroud · Fan	B5
Intake	B6 ~ B7
Carburetor	B8
Exhaust	B9
Crankcase	B10 ~ B11

BODY

Engine Bracket	B12
Rear Suspension	B13
Frame	B14
Front Suspension · Wheel	B15 ~ C2
Steering	C3 ~ C4
Fuel Tank	C5
Brake	C6 ~ C8
Brake 2	C9 ~ C10
Accelerator	C11
Governor	C12

DRIVE

Primary Sheave	C13
Secondary Sheave	C14
Transmission 1	C15 ~ D3
Rear Axle · Wheel	D4

RIG

Bumper	D5 ~ D6
Body	D7 ~ D8
Body 2	D9 ~ D11
Body Fitting	D12 ~ D13
Sun Roof	D14 ~ D15
Carrier	E2 ~ E3
Seat	E4

ELECTRICAL

Starting Motor	E5 ~ E6
Electrical 1	E7
Electrical 2	E8 ~ E9

ALTERNATE PARTS

Alternate	E10
-----------------	-----

INDEX

NUMERICAL INDEX	M1 ~ M4
-----------------------	---------

FOREWORD

This Parts Catalogue is related to the parts in use for the Yamaha GOLF CAR G2-AM6 (J39). When you are ordering replacement parts for the G2-AM6 (J39), refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after issue of the Parts Catalogue will be announced in the Yamaha Parts News.

It is advisable that according to the Yamaha Parts News you make necessary corrections to the Parts Catalogue on hand to keep it up-to-date.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

- U.R. Use size (thickness) and/or number as required.
- U.N. Use as many as you need.
- A.P. Alternate Parts
- L.M. Local Made
- F# Frame No. (Applicable machine No.)

3. The parts marked with (*) in the parts number column of this Catalogue are not supplied with by Yamaha, those have to be found locally.

4. Parts, which are to be supplied in the form of assemblies, are listed with an indention of one letter's space, and a dot (.) is put against the name of each part.

EXAMPLE CARBURETOR ASS'Y
. JET, pilot
. NOZZLE, main

5. Initial Serial No. and Color Code

(A) Frame Serial No.	J39-000140 and following
(B) Engine Serial No.	J39-000140 and following



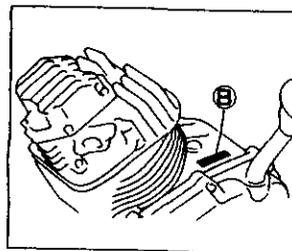


FIG. 1 CYLINDER

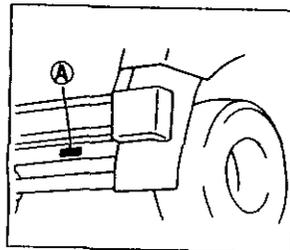


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-Y1111-00	CYLINDER HEAD ASSY	1	
2	99510-12016	PIN, dowel	2	
3	95812-08070	BOLT, flange	3	
4	95812-08045	BOLT, flange	3	
5	J38-11181-00	GASKET, cylinder head 1	1	
6	95622-08618	BOLT, stud	2	
7	94701-00078	PLUG, sPark (NGK B5ES)	1	
8	J38-11191-00	COVER, cylinder head 1	1	
9	J38-11116-00	JOINT, breather	2	
10	J38-24461-00	PIPE, joint	1	
11	J38-11193-00	GASKET, head cover 1	1	
12	91316-06025	BOLT	4	
13	92990-06600	WASHER, Plate	4	
14	J38-11166-00	PIPE, breather 1	1	
15	90467-11044	CLIP	2	

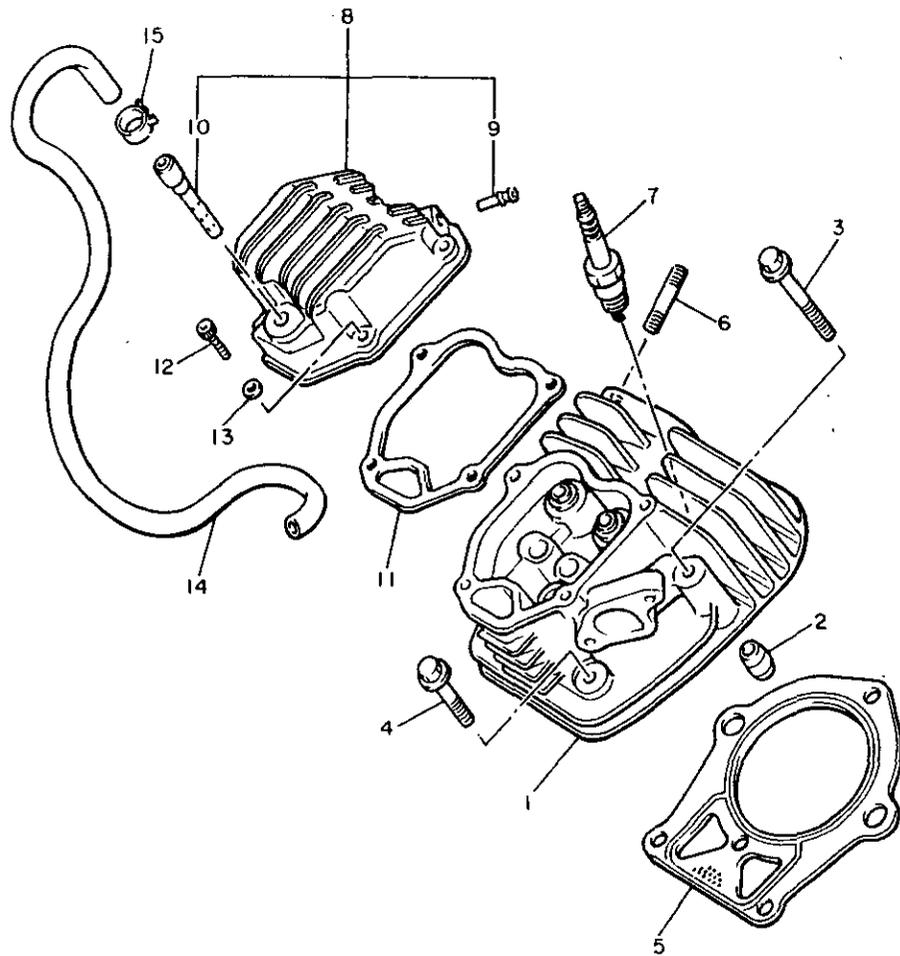

J38110-5010

B2

FIG. 2 CRANKSHAFT. PISTON

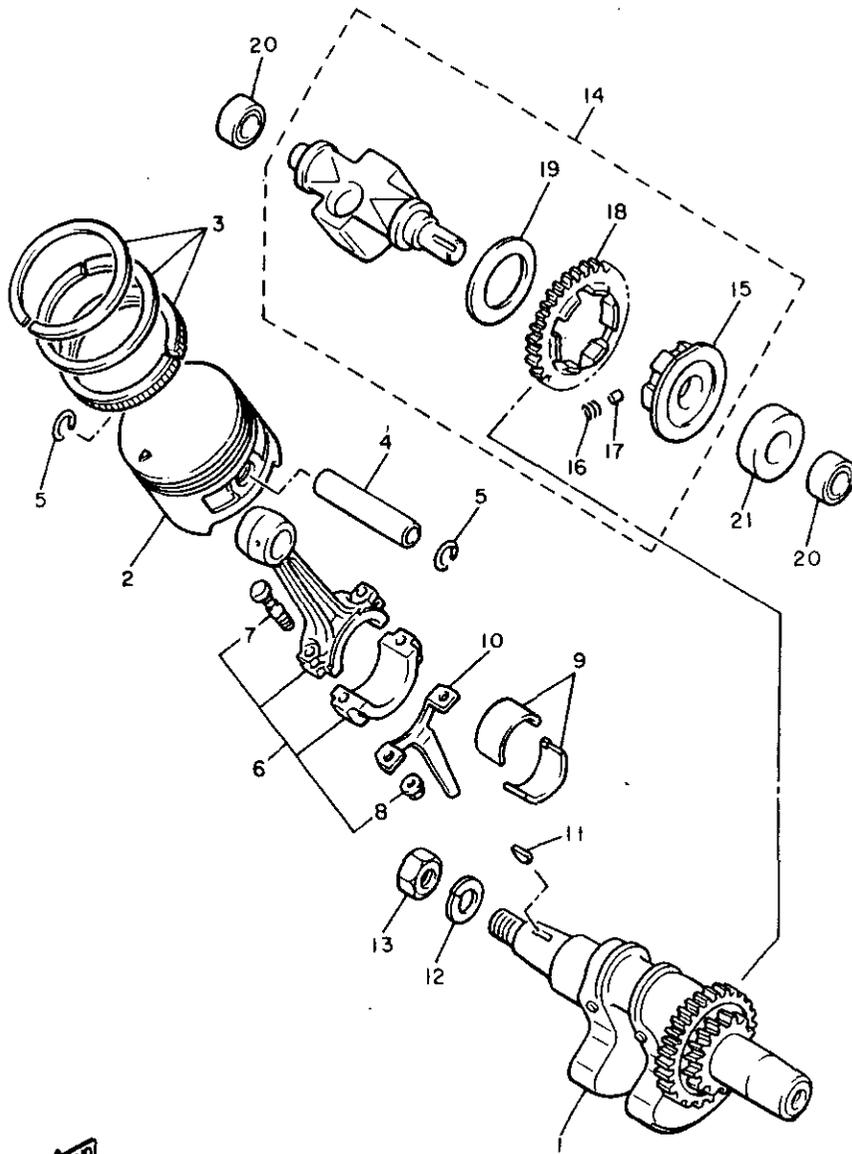


J38110-5020

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-11400-00	CRANKSHAFT ASSY	1	
2	J38-11631-00-A0	PISTON (STD)	1	
	J38-11635-00	PISTON (0.25MM O/S)	1	AP
	J38-11636-00	PISTON (0.50MM O/S)	1	AP
3	J38-11610-00	PISTON RING SET (STD)	1	
	J38-11610-10	PISTON RING SET (1ST O/S)	1	AP
	J38-11610-20	PISTON RING SET (2ND O/S)	1	AP
4	2F1-11633-00	PIN, Piston	1	
5	93450-19052	CIRCLIP	2	
6	J38-Y1165-00	CONNECTING ROD ASSY	1	
7	J38-11654-00	.BDLT, connectin& rod	2	
8	90179-08327	.NUT	2	
9	J38-11656-00	BEARING, con-rod (BRAWN)	2	UR
	J38-11656-10	BEARING, con-rod (BRACK)	2	UR
	J38-11656-20	BEARING, con-rod (BLUE)	2	UR
10	J38-11657-00	SPLASHER, oil	1	
11	90280-05013	KEY, woodruff	1	
12	92901-16100	WASHER, sPring	1	
13	90170-16182	NUT	1	
14	J38-11500-00	BALANCER ASSY	1	
15	25G-11496-00	.BOSS, buffar	1	
16	90501-21133	.SPRING, comPrission	6	
17	93605-10090	.PIN, dowal	3	
18	J38-11531-00	.GEAR, balance wt	1	
19	90201-201G9	.WASHER, Plate	1	
20	93318-31507	BEARING, cylindrical	2	
21	90387-152M7	COLLAR	1	

B3

FIG. 3 VALVE

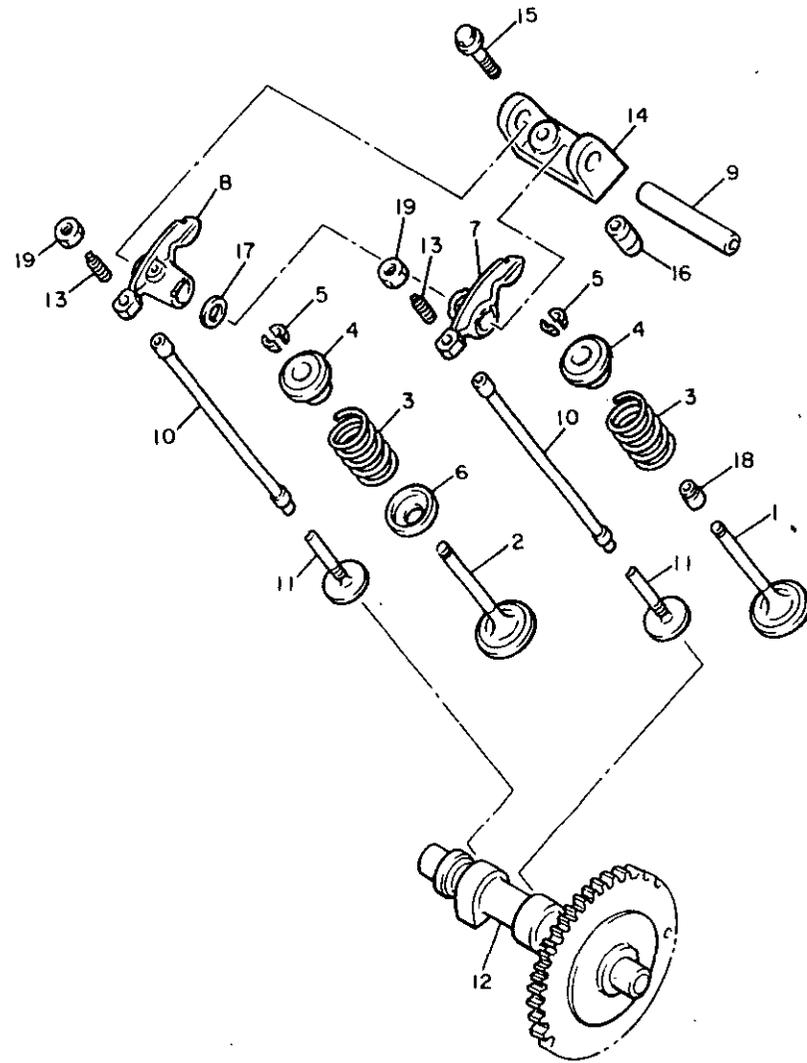


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-12111-00	VALVE, intake	1	
2	J38-12121-00	VALVE, exhaust	1	
3	90501-264A9	SPRING, compression	2	
4	J38-12117-00	RETAINER, valve spring	2	
5	4G0-12118-00	COTTER, valve	4	
6	J38-12219-00	SEAT, spring	1	
7	J38-12151-00	ARM, valve rocker	1	
8	J38-12161-00	ARM, valve rocker 2	1	
9	J38-12156-00	SHAFT, rocker 2	1	
10	J38-12154-00	ROD, valve push	2	
11	J38-12153-00	LIFTER, valve	2	
12	J38-12171-00	CAMSHAFT 1	1	
13	J38-12159-00	SCREW, valve adjusting	2	
14	J38-12152-00	SUPPORT, rocker arm	1	
15	95822-06030	BOLT, flange	2	
16	91810-09014	PIN, dowel	2	
17	90201-127J1	WASHER, Plate	1	
18	5H0-12119-00	SEAL, valve stem	1	
19	90170-06128	NUT	2	



J38110-5030

B4

FIG. 4 AIR SHROUD, FAN

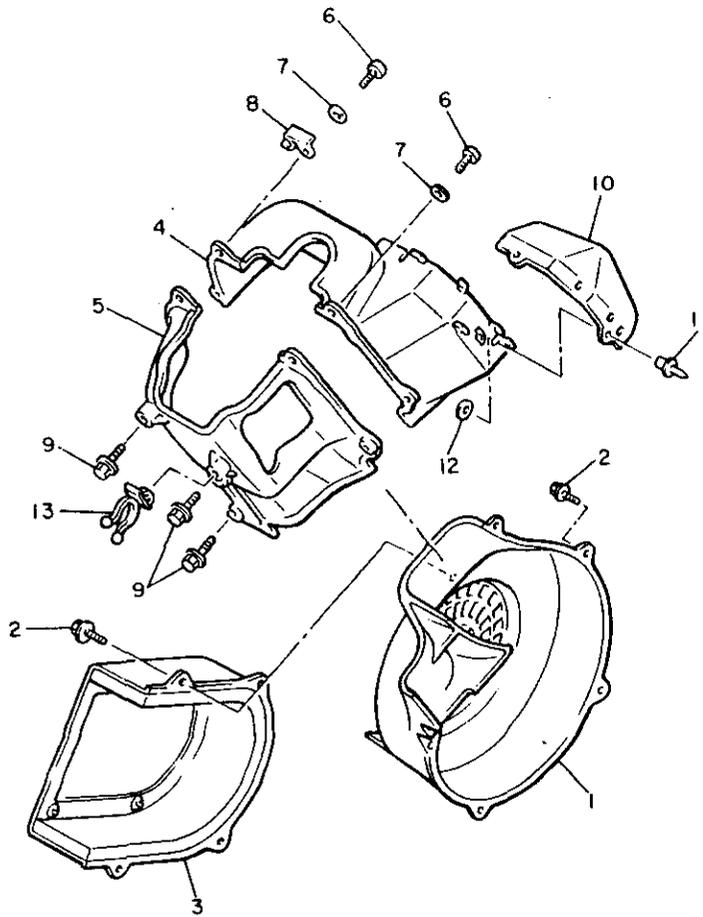


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-12621-00	CASE, fan	1	
2	95802-06020	BOLT, flange	9	
3	J38-12640-00	FAN CASE COVER COMP.	1	
4	J38-12651-00	AIR SHROUD, cylinder 1	1	
5	J38-12652-00	AIR SHROUD, cylinder 2	1	
6	92502-06016	SCREW, Pan head	4	
7	92990-06600	WASHER, Plate	4	
8	90465-10129	CLAMP	1	
9	90109-06513	BOLT	4	90109 06124
10	J38-12631-00	DEFLECTOR 1	1	
11	90267-48040	RIVET, blind	2	
12	90201-04325	WASHER, Plate	2	
13	90464-13066	CLAMP	1	



J38110-5041

B5

FIG. 5 INTAKE

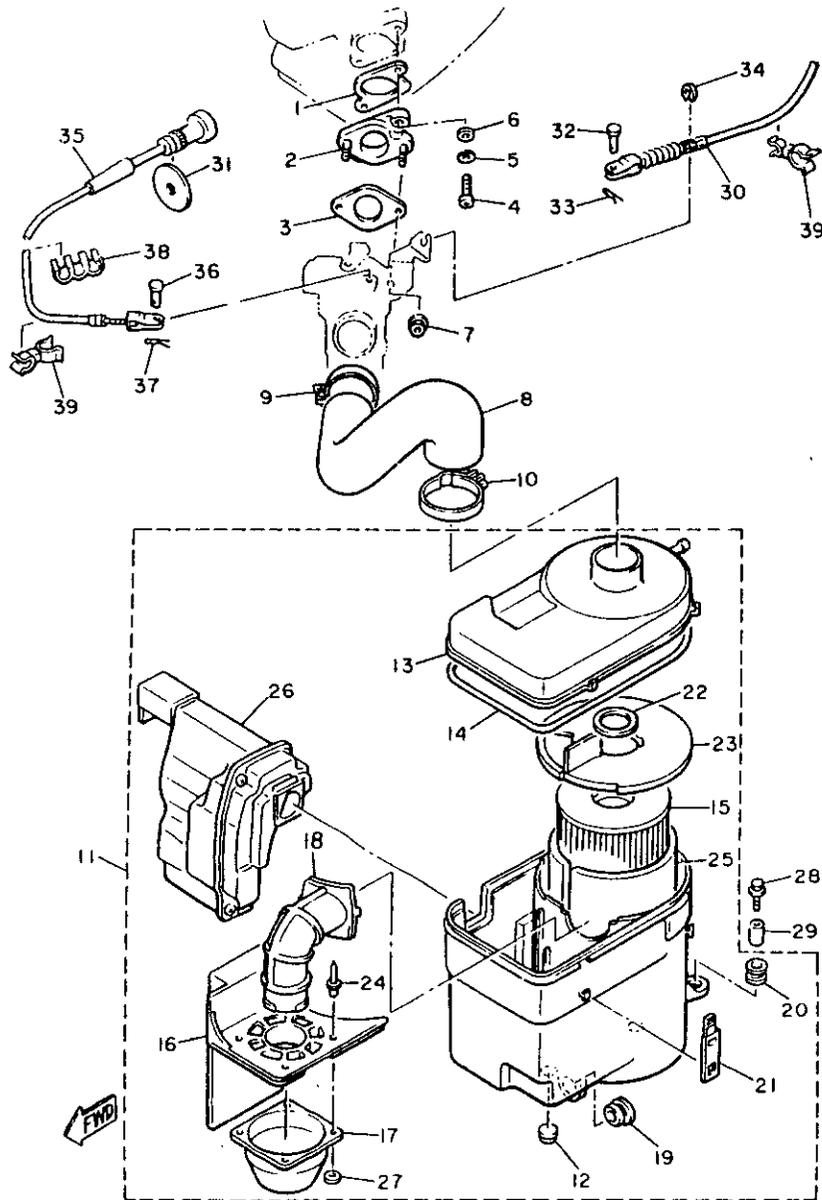


J38110-5050


B6

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-13556-00	GASKET, manifold	1	
2	J38-13596-00	JOINT, carburetor 2	1	
3	J38-13557-00	GASKET	1	
4	92501-06030	SCREW, Pan head	2	
5	92990-06100	WASHER, sPrinG	2	
6	92990-06600	WASHER, Plate	2	
7	90185-06098	NUT, self-lockinG	2	
8	J38-14453-00	JOINT, air cleaner 1	1	
9	90460-43279	CLAMP, hose	1	
10	90460-53239	CLAMP, hose	1	
11	J38-14410-00	AIR CLEANER ASSY.	1	
12	90480-14100	•GROMMET	2	
13	J38-14412-00	•CAP, cleaner case 1	1	
14	J38-14452-00	•SEAL	1	
15	J38-14450-00	•ELEMENT ASSY, air cleaner	1	
16	J38-14484-00	•PLATE, cleaner case fittinG	1	
17	J38-14479-00	•FUNNEL	1	
18	J38-14419-00	•PIPE	1	
19	90480-18277	•GROMMET	1	
20	90480-13238	•GROMMET	2	
21	J10-14436-00	•HOOK	4	
22	J38-14416-00	•GASKET, air cleaner	1	
23	J38-1441F-00	•PARTITION, air cleaner case	1	
24	90267-40073	•RIVET, blind	4	
25	J10-14417-00	•COVER 1	1	
26	J38-1446A-00	•SURGE TANK ASSY	1	
27	92990-04200	•WASHER, Plain	4	
28	90119-06097	BOLT, with washer	2	

FIG. 5 INTAKE

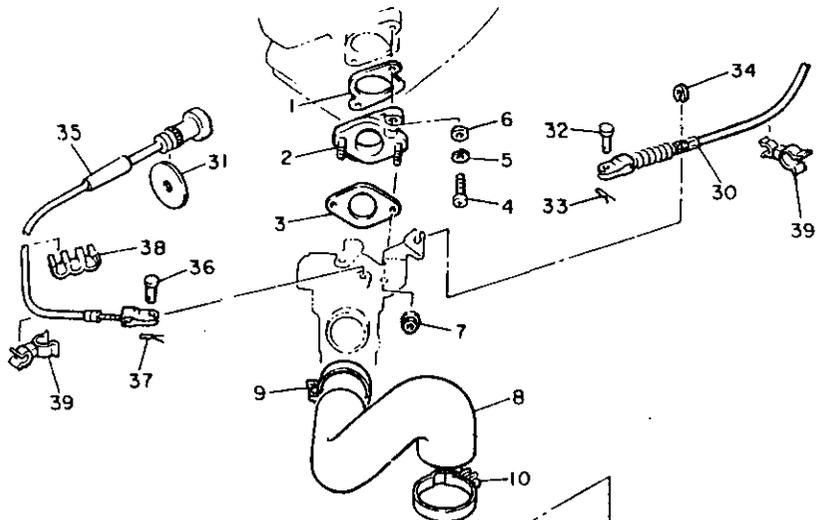


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90387-07390	COLLAR	2	
30	J38-26312-00	CABLE, throttle 2	1	
31	90201-114E6	WASHER, Plate	1	
32	91702-05010	PIN, clevis	2	
33	90468-10049	CLIP	2	
34	99001-07600	CIRCLIP	1	
35	J38-26331-00	CABLE, starter 1	1	
36	91702-05010	PIN, clevis	1	
37	90468-10049	CLIP	1	
38	90468-07179	CLIP	1	
39	90468-80181	CLIP	2	

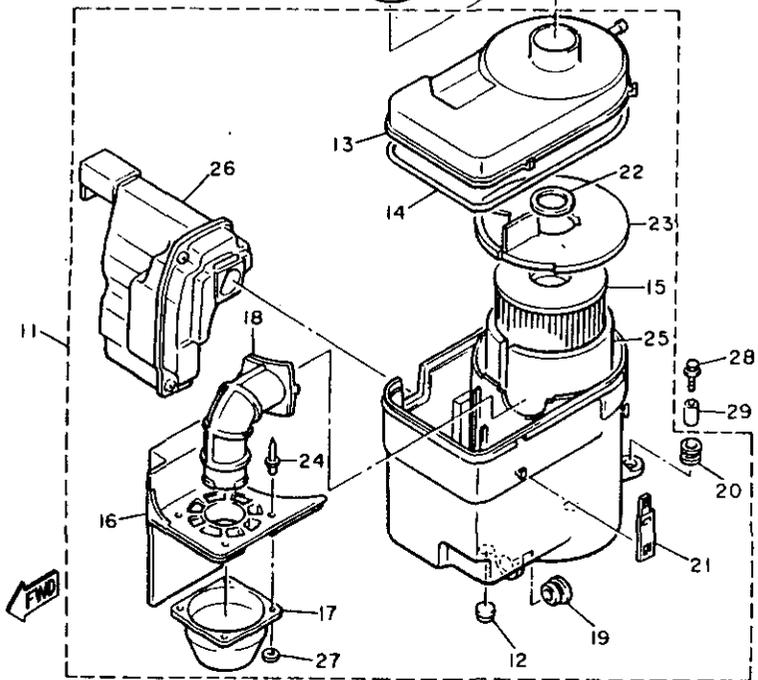

J38110-5050

B7

FIG. 6 CARBURETOR

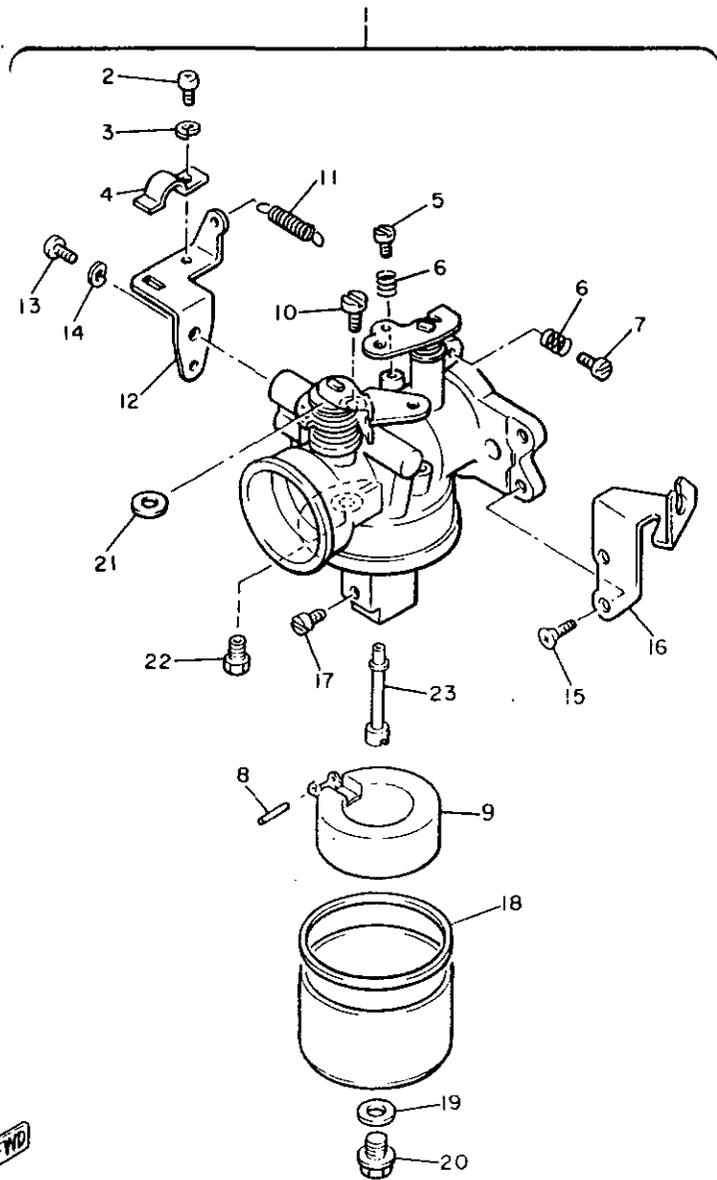


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-14101-00	CARBURETOR ASSY 1	1	
2	98501-05008	•SCREW, Pan head	1	
3	92990-05100	•WASHER, sPring	1	
4	J38-14243-00	•PLATE	1	
5	75G-14211-00	•SCREW, Pilot adjusting	1	
6	620-14212-00	•SPRING, Pilot adjusting	2	
7	J10-14122-00	•SCREW, throttle	1	
8	J38-14186-00	•PIN, float	1	
9	J38-14185-00	•FLOAT	1	
10	620-14142-72	•JET, Pilot (# 72.5)	1	STD
	620-14142-67	•JET, Pilot (# 67.5)	1	AP
11	J38-14133-00	•SPRING, throttle stop	1	
12	J38-14581-00	•BRACKET	1	
13	92501-06010	•SCREW, Pan head	1	
14	92990-06100	•WASHER, sPring	1	
15	98702-05008	•SCREW, flat head	2	
16	J38-14291-00	•BRACKET 1	1	
17	3G2-1423E-42	•JET, main (#106.3)	1	STD
	3G2-1423E-41	•JET, main	1	AP
18	796-14184-00	•GASKET, float chamber	1	
19	127-14198-00	•GASKET	1	
20	7R1-14162-00	•BOLT, holding	1	
21	J10-14597-00	•WASHER	1	
22	J38-14150-00	•NEEDLE ASSY	1	
23	J38-14141-00	•NOZZLE, main	1	



J38110-5060

FIG. 7 EXHAUST

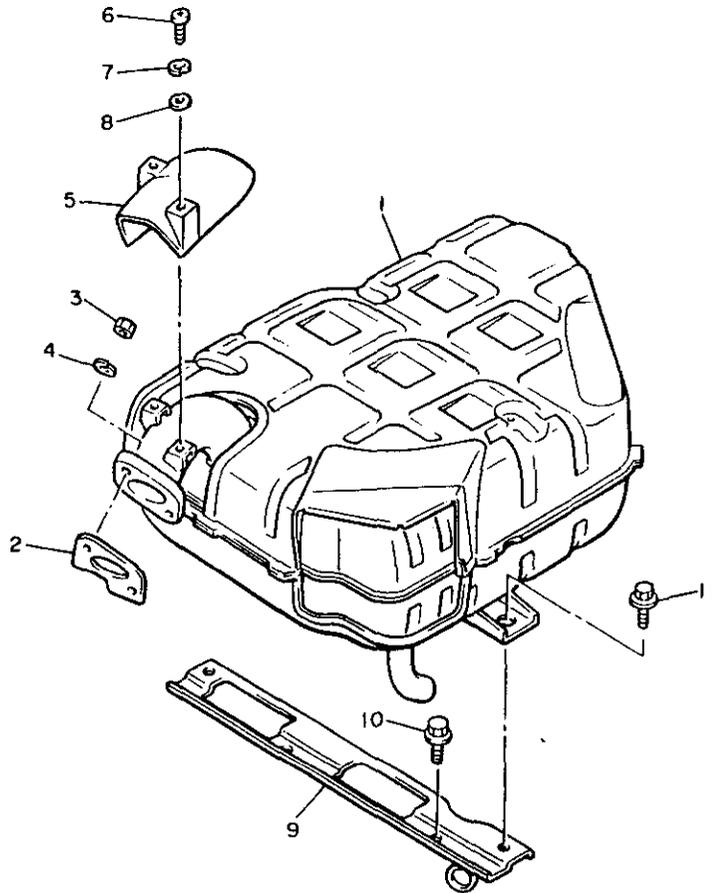


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-14710-00	MUFFLER ASSY 1	1	
2	J38-14613-00	GASKET, exhaust Pipe	1	
3	95380-08600	NUT	2	
4	92990-08100	WASHER, sPring	2	
5	J38-14738-00	PROTECTOR, muffler 3	1	
6	92580-06012	SCREW, Pan head	2	
7	92990-06100	WASHER, sPring	2	
8	92990-06600	WASHER, Plate	2	
9	J38-14771-00	STAY, muffler 1	1	
10	95026-10020	BOLT, flange	2	
11	90119-08119	BOLT, with washer	2	



J38110-5070

B9

FIG. 8 CRANKCASE

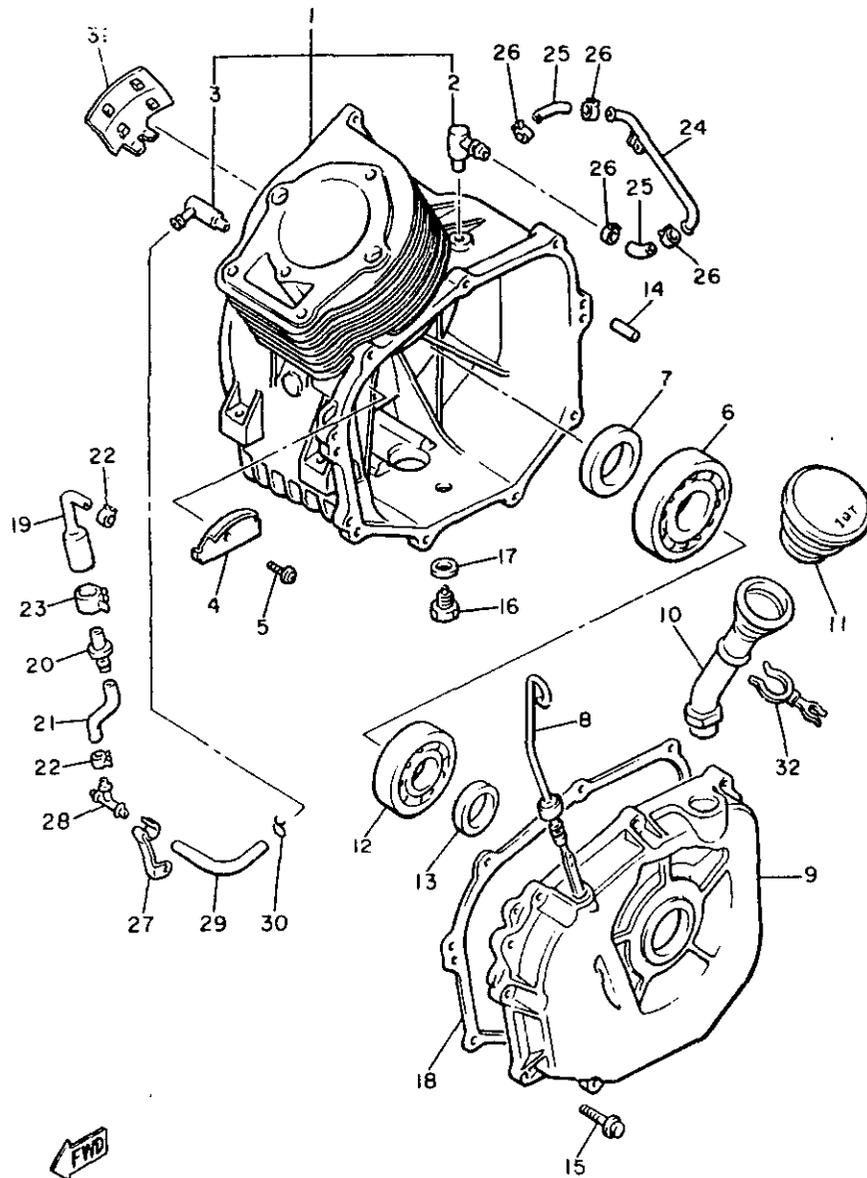


J38110-5080

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-15100-01	CRANKCASE ASSY	1	
2	J38-15148-00	.NOZZLE 2	1	
3	J38-15155-00	.NOZZLE 3	1	
4	J38-15123-00	PLATE, baffle 1	1	
5	90159-05117	SCREW, with washer	1	
6	93306-30709	BEARING	1	
7	93102-35191	OIL SEAL	1	
8	J38-15361-00	GAUGE, level	1	
9	J38-15411-00	COVER, crankcase 1	1	
10	J38-15112-00	PIPE, oil	1	
11	J38-15363-00	PLUG, oil	1	
12	93306-30621	BEARING (B6306)	1	
13	93102-30195	OIL SEAL	1	
14	93608-12063	PIN, dowel	2	
15	95822-08035	BOLT, flange	9	
16	J38-13455-C0	PLUG	1	
17	90430-13138	GASKET	1	
18	J38-15451-00	GASKET, crankcase cover 1	1	
19	J38-14388-00	VALVE, vacuum control	1	
20	J38-13115-00	CONNECTOR, suction Pipe	1	
21	90445-113E4	HOSE	1	
22	90467-10035	CLIP	2	
23	90468-08104	CLIP	1	
24	J38-13161-00	PIPE, delivery 1	1	
25	90445-110E6	HOSE	2	
26	90467-10035	CLIP	4	
27	90465-10292	CLAMP	1	
28	807-24376-00	PIPE, Joint 1	1	

FIG. 8 CRANKCASE


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90445-09073	HOSE	1	
30	90467-08017	CLIP	2	
31	J38-11355-00	SEAL, cylinder 1	1	
32	90468-60180	CLIP	1	

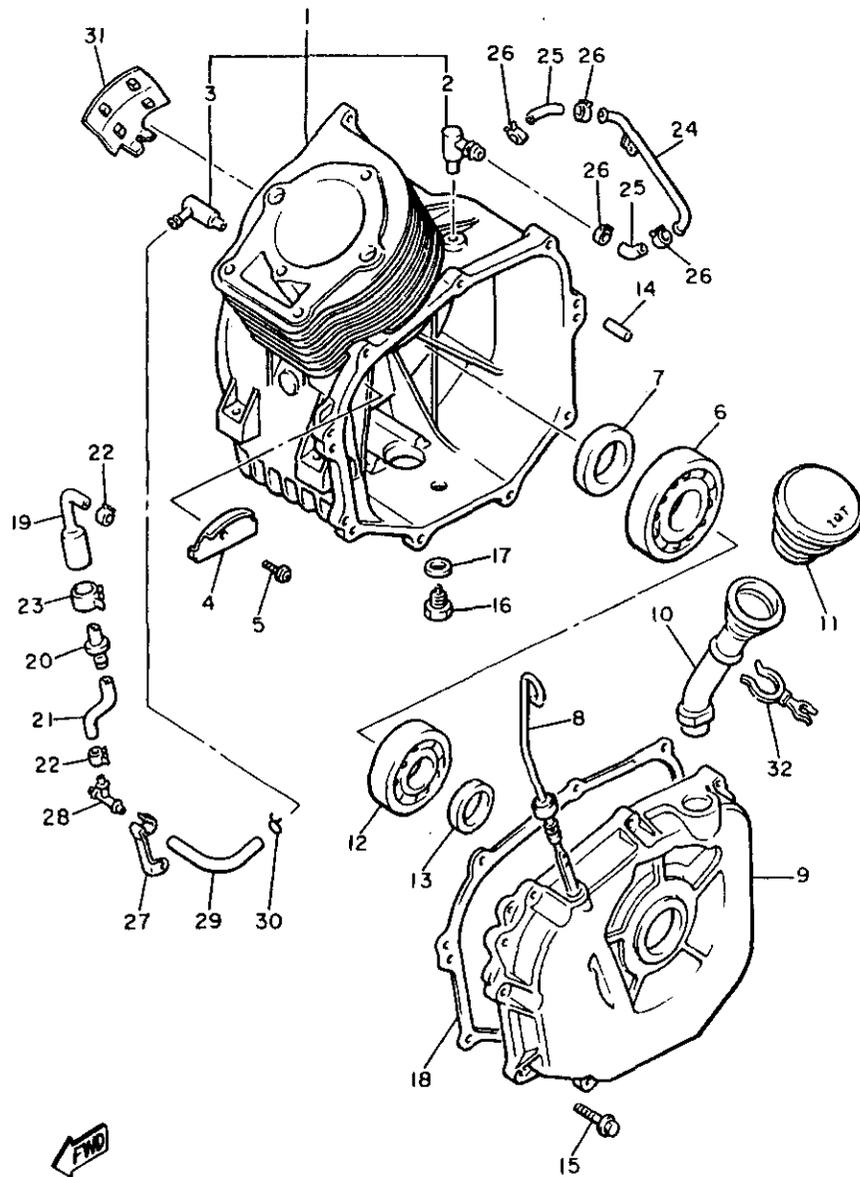

J38110-5080

B11

FIG. 9 ENGINE BRACKET

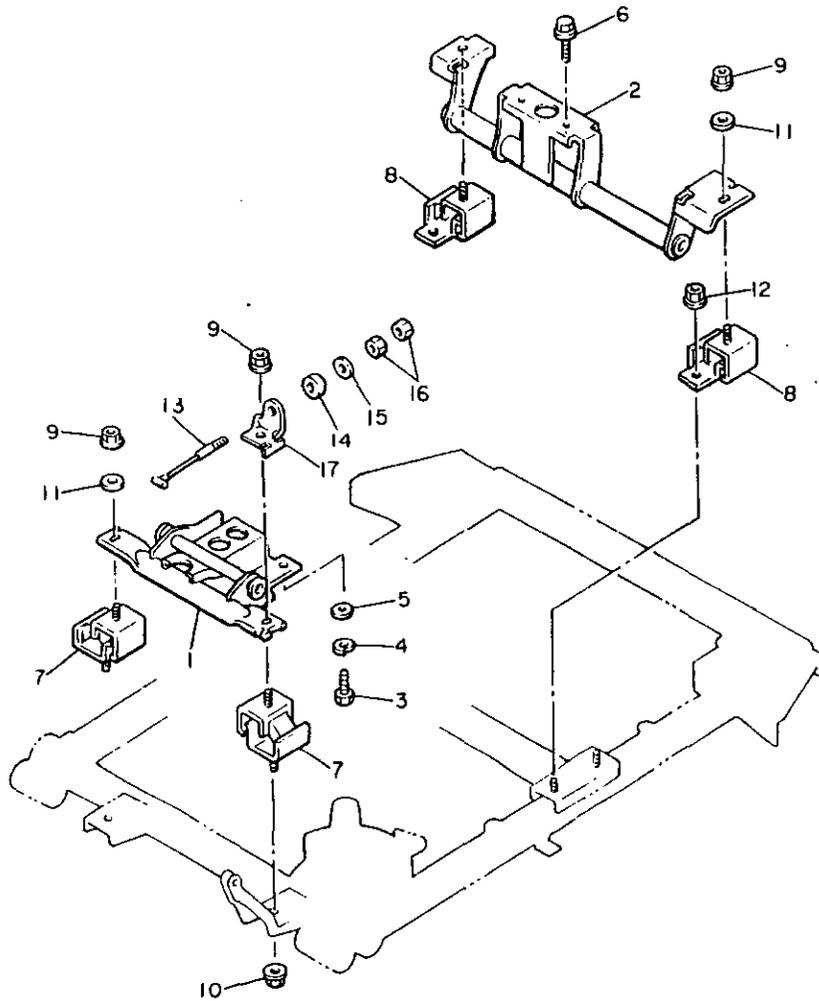


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-21411-00	BRACKET, engine 1	1	
2	J38-21419-01	BRACKET, engine 2	1	
3	97011-10025	BOLT	2	
4	92901-10100	WASHER, spring	2	
5	92990-10600	WASHER, Plate	2	
6	95021-10040	BOLT, flange	2	
7	J38-21486-00	DAMPER 2	2	
8	J38-21488-00	DAMPER	2	
9	90185-10130	NUT, self-locking	4	
10	95702-10500	NUT, flange	2	
11	90201-10136	WASHER, Plate	3	
12	90185-08106	NUT, self-locking	4	
13	J17-2217J-00	TENSIONER 1	1	
14	J17-2214F-00	DAMPER 1	1	
15	90201-06778	WASHER, Plate	1	
16	95302-06600	NUT	2	
17	J38-2141A-00	BRACKET 1	1	



J38110-5091

FIG. 10 REAR SUSPENSION


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-Y2210-00	REAR ARM COMP.	1	
2	J10-22123-00	BUSH 1	2	
3	90105-10359	BOLT, washer based	2	
4	90185-10130	NUT, self-locking	2	
5	J38-22128-00	COVER, thrust 1	1	
6	J38-2211E-00	PANEL, inner 1	1	
7	J38-2211G-00	PANEL, inner 2	1	
8	90267-40127	RIVET, blind	9	
9	J38-22210-00	SHOCK ABSORBER ASSY, rear	2	
10	97302-10050	BOLT	4	
11	95602-10100	NUT, u	4	

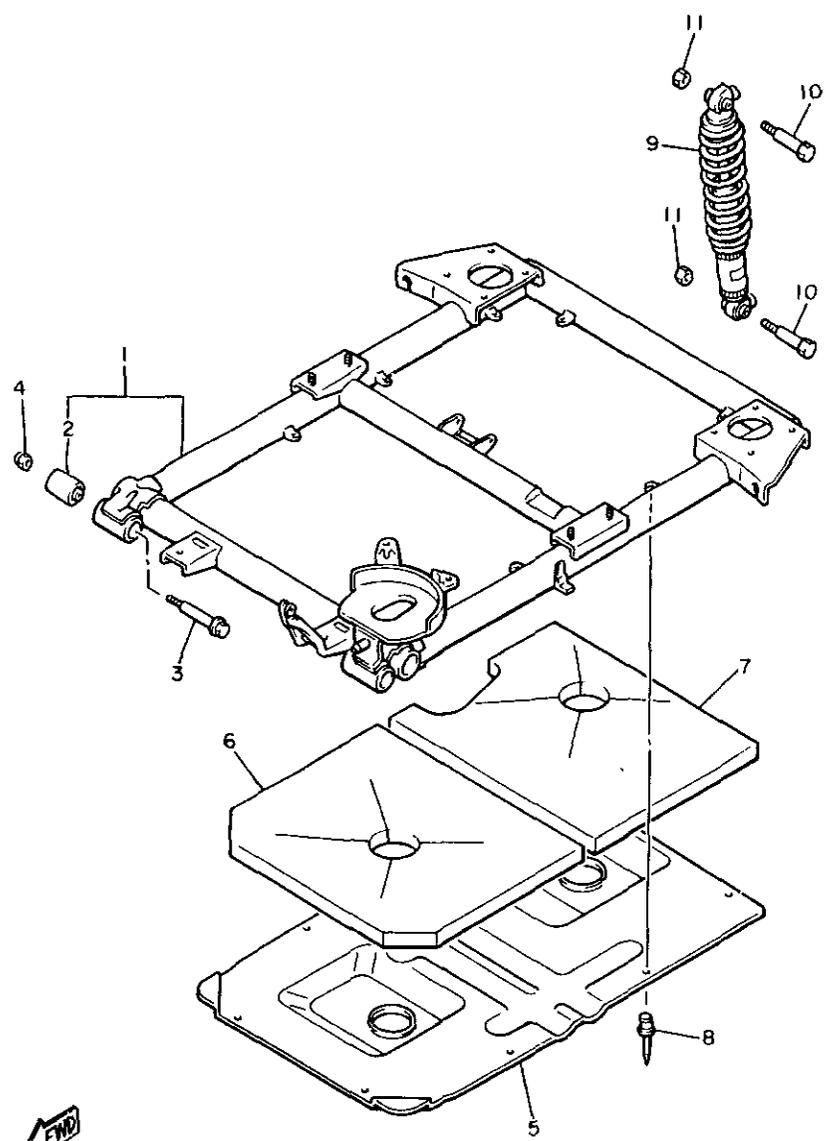

J38110-5100

B13


FIG. 11 FRAME

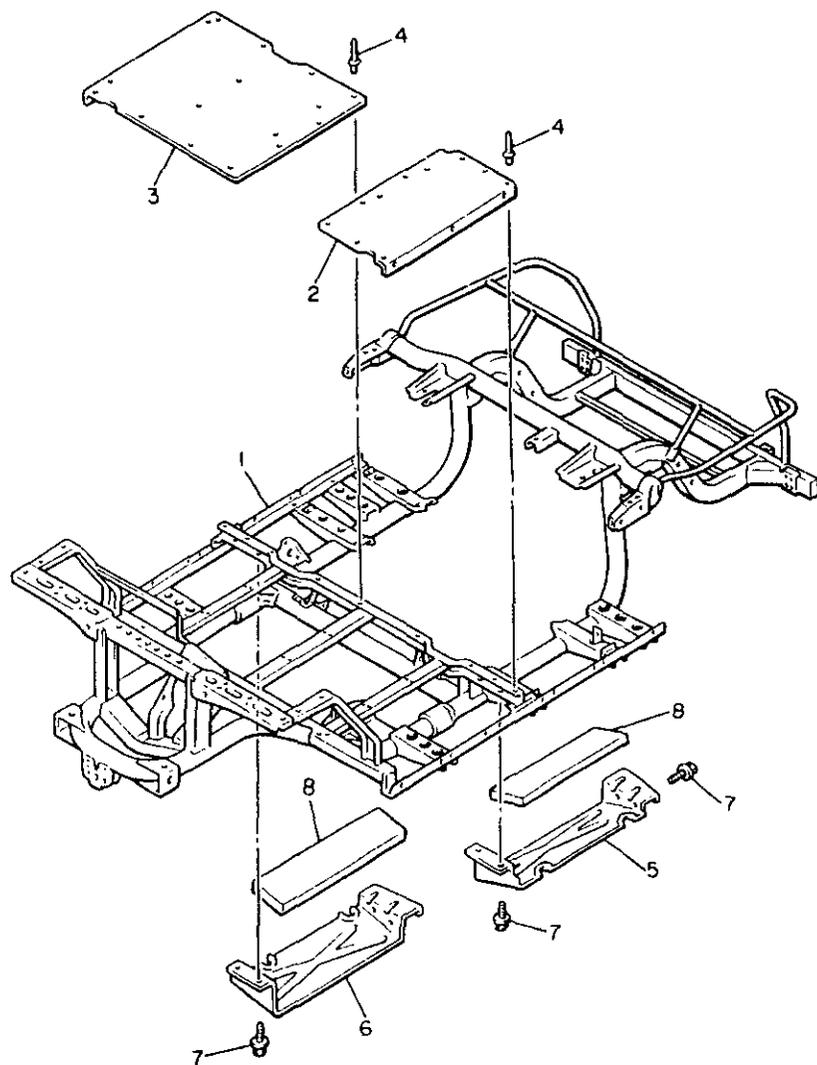

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-22501-00	FRAME COMP.	1	
2	J38-22571-01	PANEL 1	1	
3	J38-22572-01	PANEL 2	1	
4	90267-40054	RIVET, blind	20	
5	J38-22592-00	PLATE 1	1	
6	J38-22593-00	PLATE 2	1	
7	95802-06010	BOLT, flange	8	
8	J38-7825H-00	PAD, silencer 14	2	

J39700 6110

FIG. 12 FRONT SUSPENSION, WHEEL

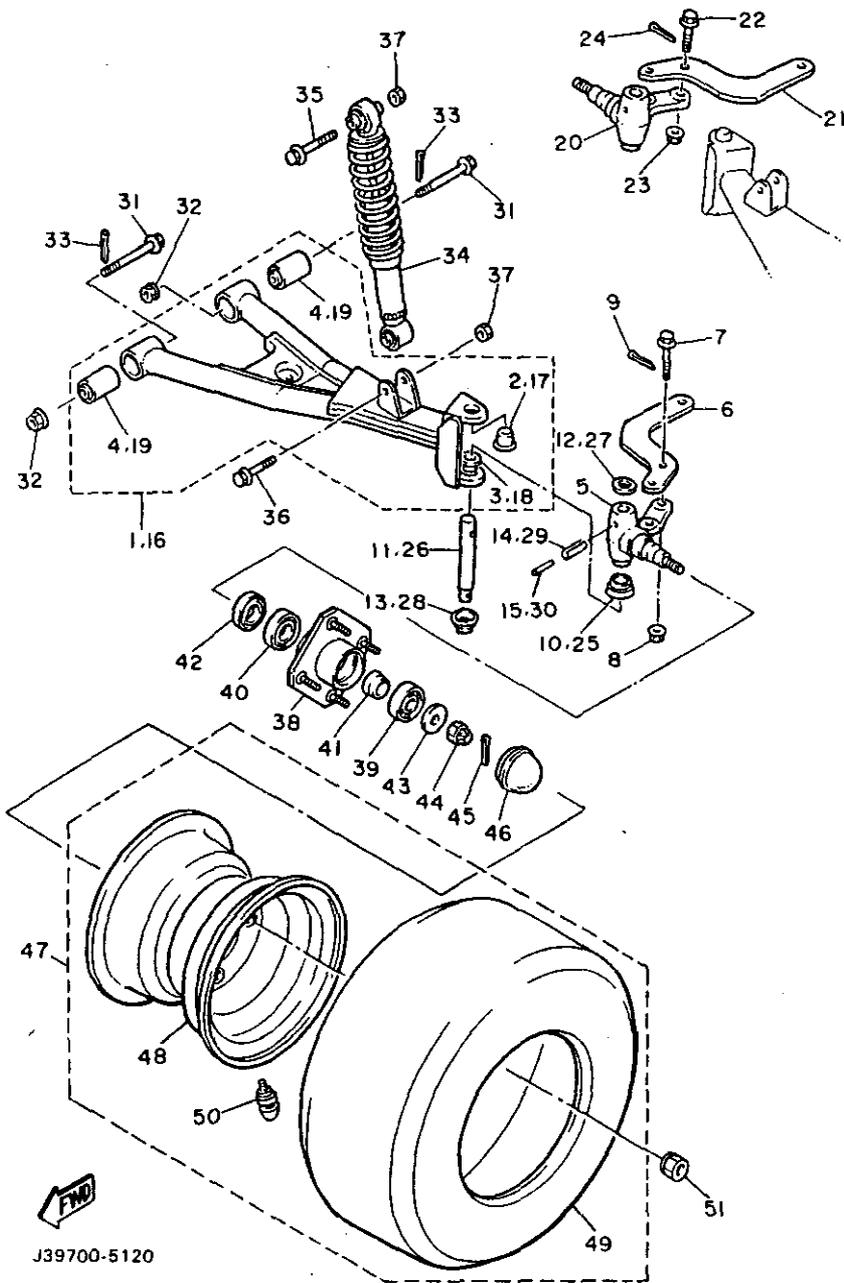


J39700-5120

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-23507-00	FRONT LOWER ARM SUB-ASSY (L.H)	1	
2	90338-17170	.PLUG	1	
3	90386-15139	.BUSH	1	
4	J38-23526-00	.BUSH	2	
5	J38-23511-00	KNUCKLE, steering 1	1	
6	J38-23512-00	ARM, knuckle 1	1	
7	90105-10360	BOLT, washer based	2	
8	90185-10130	NUT, self-locking	2	
9	91402-25020	PIN, cotter	2	
10	J38-23527-00	SEAL, dust 1	1	
11	J38-23516-00	KING PIN, steering knuckle	1	
12	90201-156J2	WASHER, Plate	1	
13	J38-23528-00	SEAL, dust 2	1	
14	91609-60028	PIN, sPring	1	
15	91609-35028	PIN, sPring	1	
16	J38-23508-00	FRONT LOWER ARM SUB-ASSY (R.H)	1	
17	90338-17170	.PLUG	1	
18	90386-15139	.BUSH	1	
19	J38-23526-00	.BUSH	2	
20	J38-23521-00	KNUCKLE, steering 2	1	
21	J38-23512-00	ARM, knuckle 1	1	
22	90105-10360	BOLT, washer based	2	
23	90185-10130	NUT, self-locking	2	
24	91402-25020	PIN, cotter	2	
25	J38-23527-00	SEAL, dust 1	1	
26	J38-23516-00	KING PIN, steering knuckle	1	
27	90201-156J2	WASHER, Plate	1	
28	J38-23528-00	SEAL, dust 2	1	

B15

FIG. 12 FRONT SUSPENSION, WHEEL

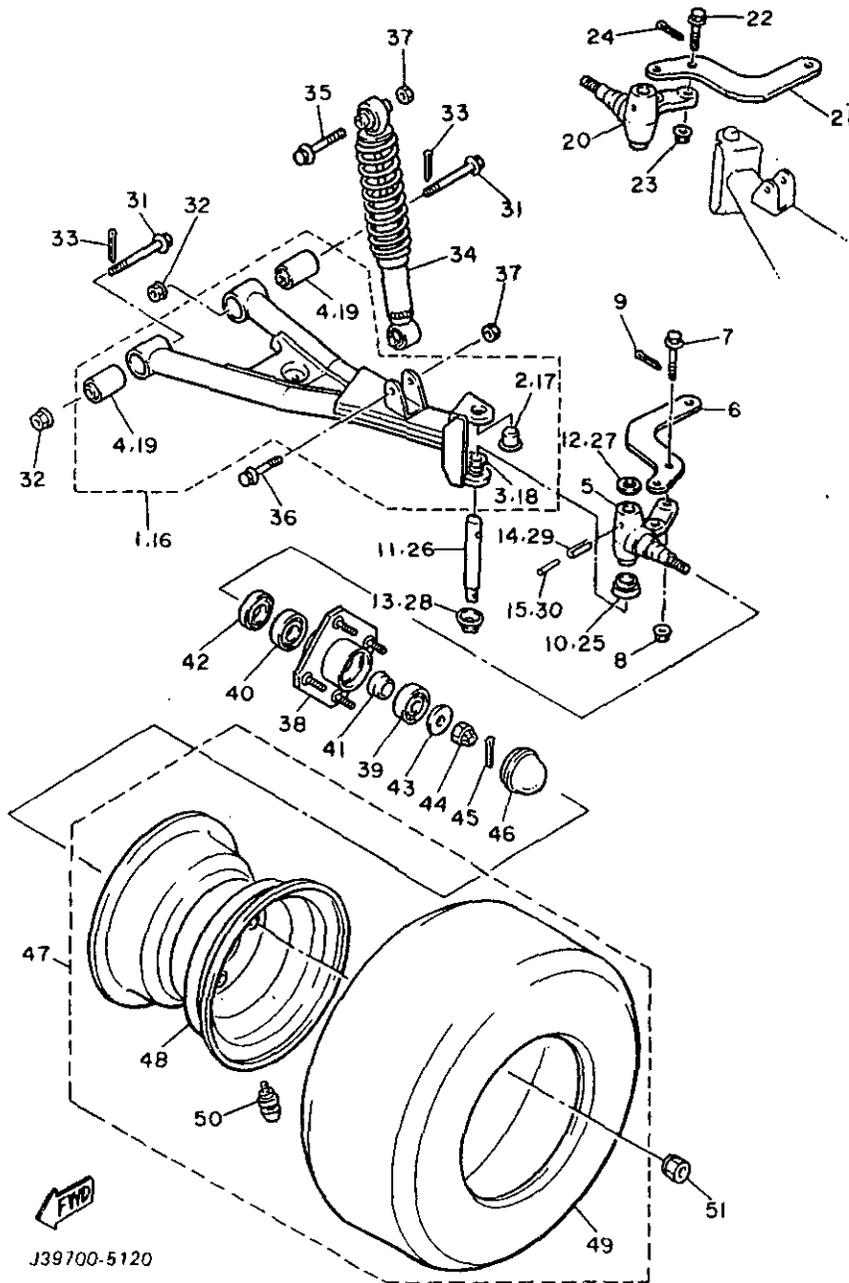


J39700-5120

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	91609-60028	PIN, sPring	1	
30	91609-35028	PIN, sPring	1	
31	90105-10357	BOLT, washer based	4	
32	90185-10130	NUT, self-locking	4	
33	91402-25020	PIN, cotter	4	
34	J38-23350-00	SHOCK ABSORBER ASSY	2	
35	97002-10065	BOLT	2	
36	97002-10050	BOLT	2	
37	95602-10100	NUT, u	4	
38	J38-W2511-00	HUB, front	2	
39	93306-20401	BEARING (B6204)	2	
40	93306-00510	BEARING	2	
41	90387-241M7	COLLAR	2	
42	93102-30083	OIL SEAL	2	
43	90209-32271	WASHER	2	
44	95602-14100	NUT, u	2	
45	91402-25020	PIN, cotter	2	
46	J17-25118-00	COVER, hub dust	2	
47	J39-25100-00	FRONT WHEEL ASSY	2	(511)
48	J11-25102-00	•WHEEL RIM ASSY, front	1	
49	94118-853H4	•TIRE	1	(855 07)
50	93900-00014	•VALVE, rim	1	bridgestone
51	90179-12262	NUT	8	


FIG. 13 STEERING

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-23811-00	COLUMN, steering	1	
2	J38-23816-00	ARM, Pitman	1	
3	93102-22082	OIL SEAL	1	
4	J38-23876-00	BOLT	1	
5	93332-00010	BEARING	2	
6	J10-23877-00	NUT	1	
7	J10-23444-00	WASHER	1	
8	J38-23818-00	COVER, steering	1	
9	J38-23462-00	SEAL, steering	1	
10	J10-23459-00	BOLT	1	
11	90170-08024	NUT	1	
12	95802-06020	BOLT, flange	4	
13	J38-23814-00	HOLDER, handle upper	1	
14	J10-23840-00	STEERING SHAFT ASSY	1	
15	J10-23838-00	WHEEL, steering	1	
16	90185-12061	NUT, self-locking	1	
17	92902-12200	WASHER	1	
18	J38-23826-01	ARM, idler	1	
19	95701-16300	NUT, flange	1	
20	90215-16252	WASHER, lock	1	
21	95802-10050	BOLT, flange	4	
22	J38-23831-00	ROD, tie	1	
23	J38-23841-00	JOINT, universal 1	1	
24	J38-23845-00	JOINT, universal 2	1	
25	95302-10700	NUT	1	
26	90170-10186	NUT	1	
27	J38-23837-00	ROD, tie 2	1	
28	J38-23841-00	JOINT, universal 1	1	

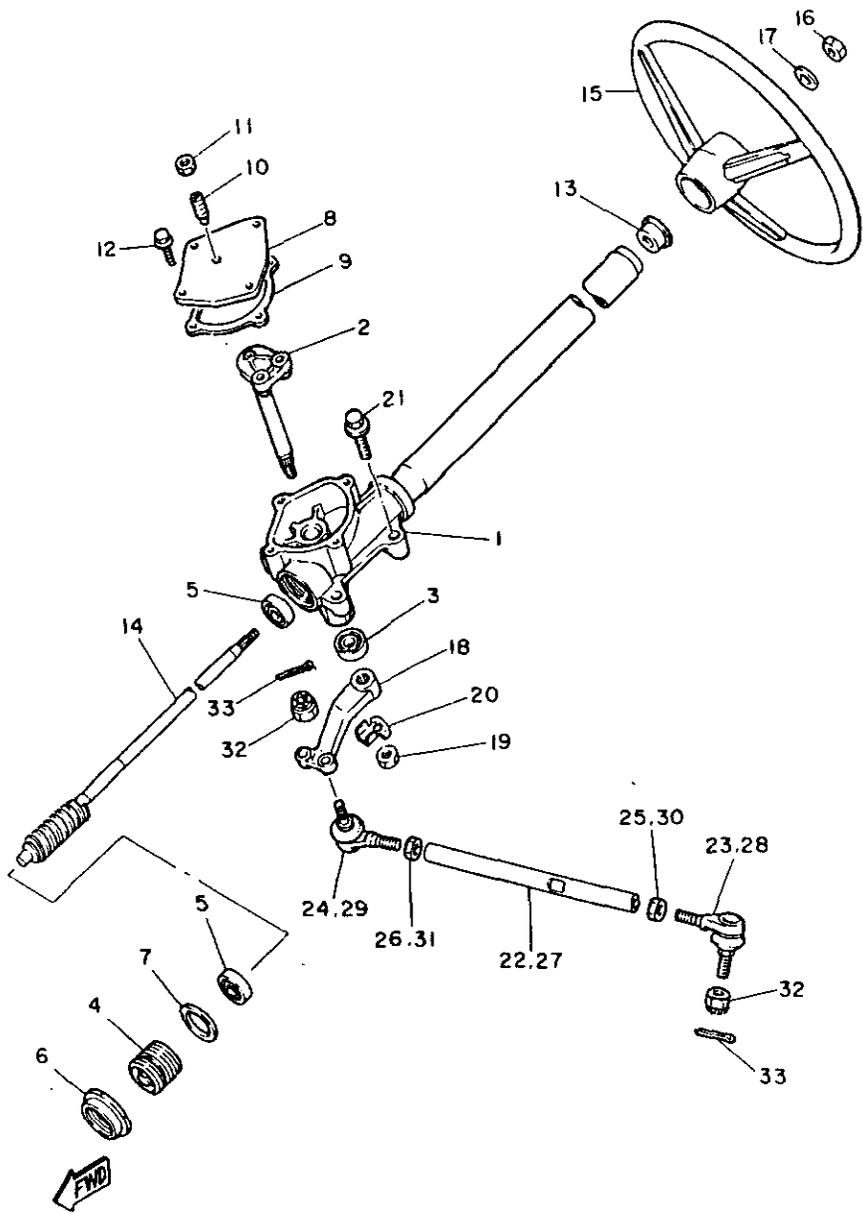

J41110-5040

FIG. 13 STEERING

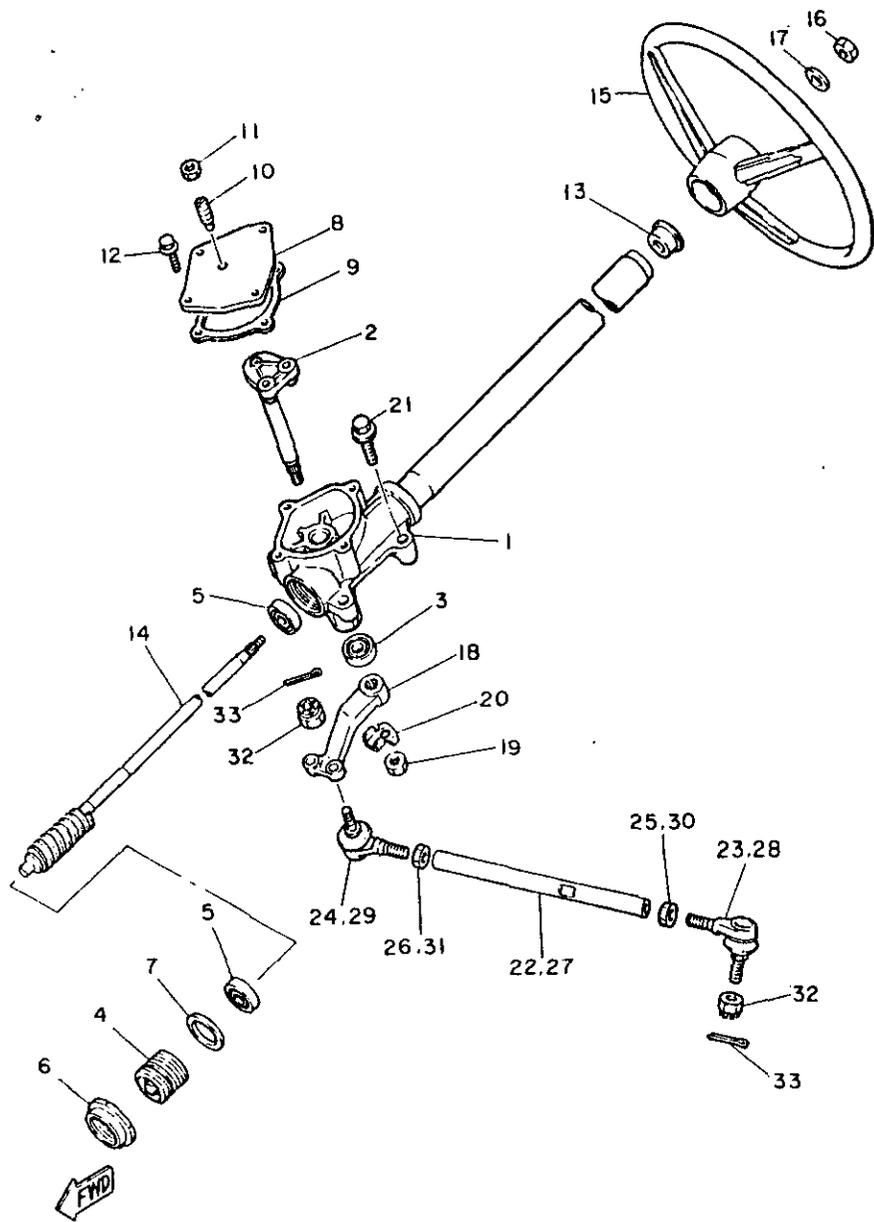


J41110-5040

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J38-23845-00	JOINT, universal 2	1	
30	95302-10700	NUT	1	
31	90170-10186	NUT	1	
32	95602-10100	NUT, u	4	
33	91402-25020	PIN, cotter	4	

C4


FIG. 14 FUEL TANK

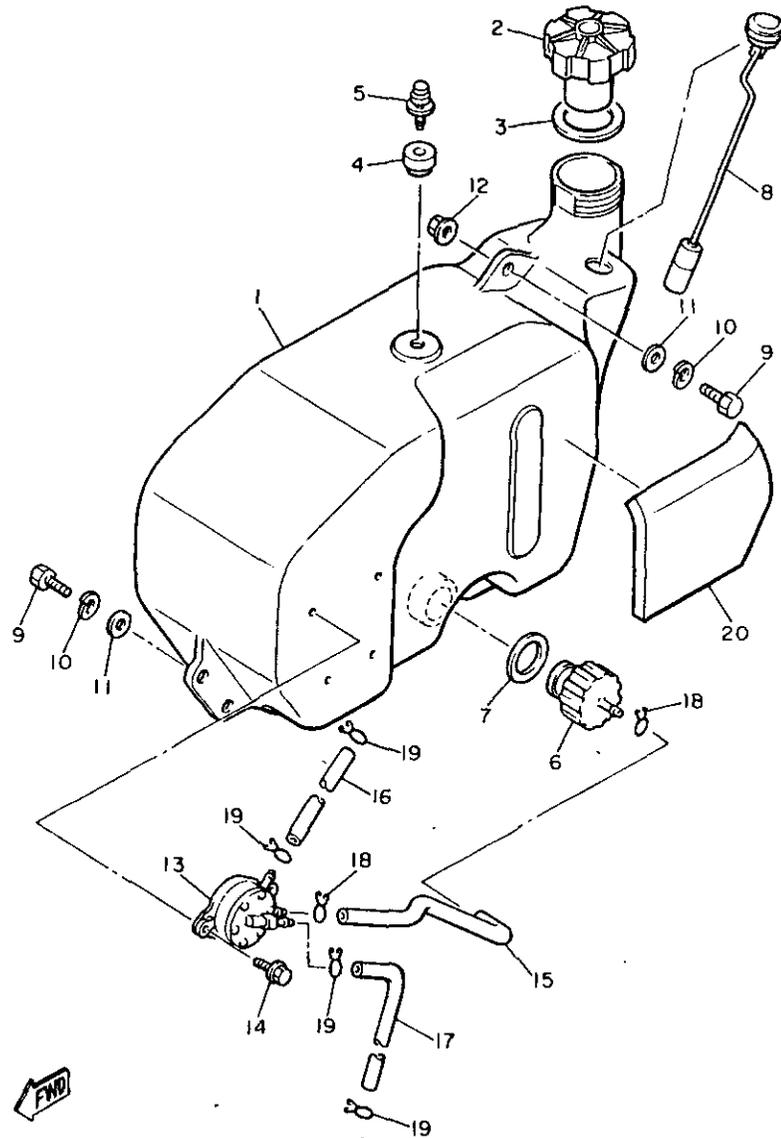

J38110-5140

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-24111-00	TANK, fuel	1	
2	J24-24620-01	BODY CAP ASSY	1	
3	J10-24612-00	GASKET, caP	1	
4	J10-21773-00	GROMMET	1	
5	J24-24460-00	RELEASE VALVE ASSY	1	
6	8R4-24560-00	FILTER ASSY	1	
7	8F3-24564-00	GASKET	1	
8	J38-85710-02	FUEL LEVEL GAUGE ASSY	1	
9	97302-08025	BOLT	3	
10	92902-08100	WASHER, sPrInG	3	
11	90201-08748	WASHER, Plate	3	
12	95702-08500	NUT, flange	1	
13	J38-24410-00	FUEL PUMP ASSY	1	
14	95802-06016	BOLT, flange	2	
15	J38-24311-00	PIPE, fuel 1	1	
16	90445-09225	HOSE	1	
17	90445-09085	HOSE	1	
18	90467-11009	CLIP	2	
19	90467-08017	CLIP	4	
20	J38-24129-00	COVER, side 1	1	


FIG. 15 BRAKE

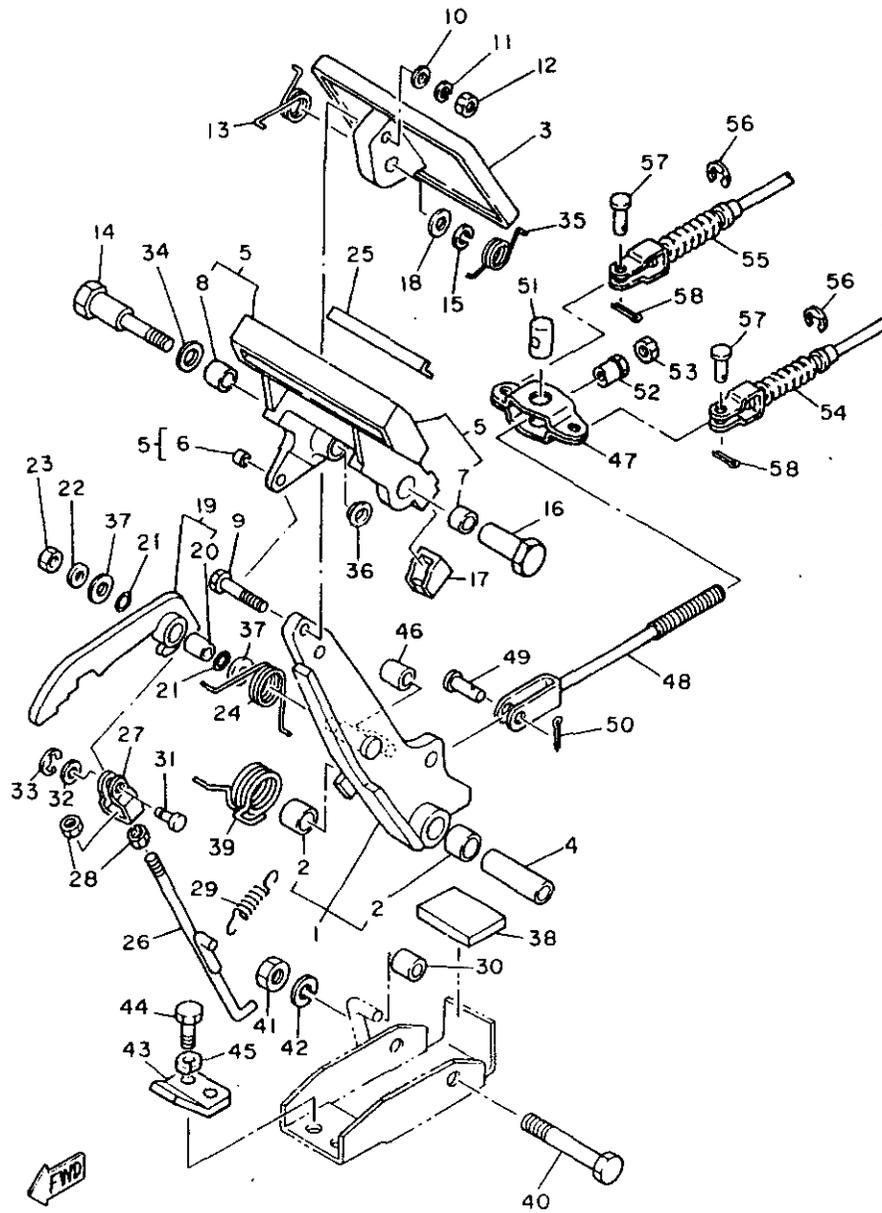

J41110-5050

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J17-27250-00	BRAKE ARM COMP.	1	
2	90384-14080	.BUSH, bimetal formed	2	
3	J10-27211-00	PEDAL, brake	1	
4	90387-107F8	COLLAR	1	
5	J17-25670-00	PARKING PEDAL COMP.	1	
6	90384-05163	.BUSH, bimetal formed	1	
7	90384-12164	.BUSH, bimetal formed	1	
8	90380-12051	.BUSH, solid	1	
9	90101-06555	BOLT	1	
10	92990-06200	WASHER, Plain	1	
11	92990-06100	WASHER, sPring	1	
12	95302-06600	NUT	1	
13	90508-23542	SPRING, torsion	1	
14	90109-08669	BOLT	1	
15	92902-08100	WASHER, sPring	1	
16	90179-08378	NUT	1	
17	J17-25679-00	DAMPER	2	
18	92990-08200	WASHER, Plain	1	
19	J17-W2561-00	SECTOR, Parking brake	1	
20	90384-10162	.BUSH, bimetal formed	1	
21	J17-27221-00	SEAL, shaft	2	
22	90201-064H0	WASHER, Plate	1	
23	95602-06100	NUT, u	1	
24	90508-14548	SPRING, torsion	1	
25	J17-25672-00	PAD, Parking Pedal	1	
26	J17-27231-00	RDD, brake	1	
27	J17-27232-00	END, rod 2	1	
28	95302-06700	NUT	2	

FIG. 15 BRAKE

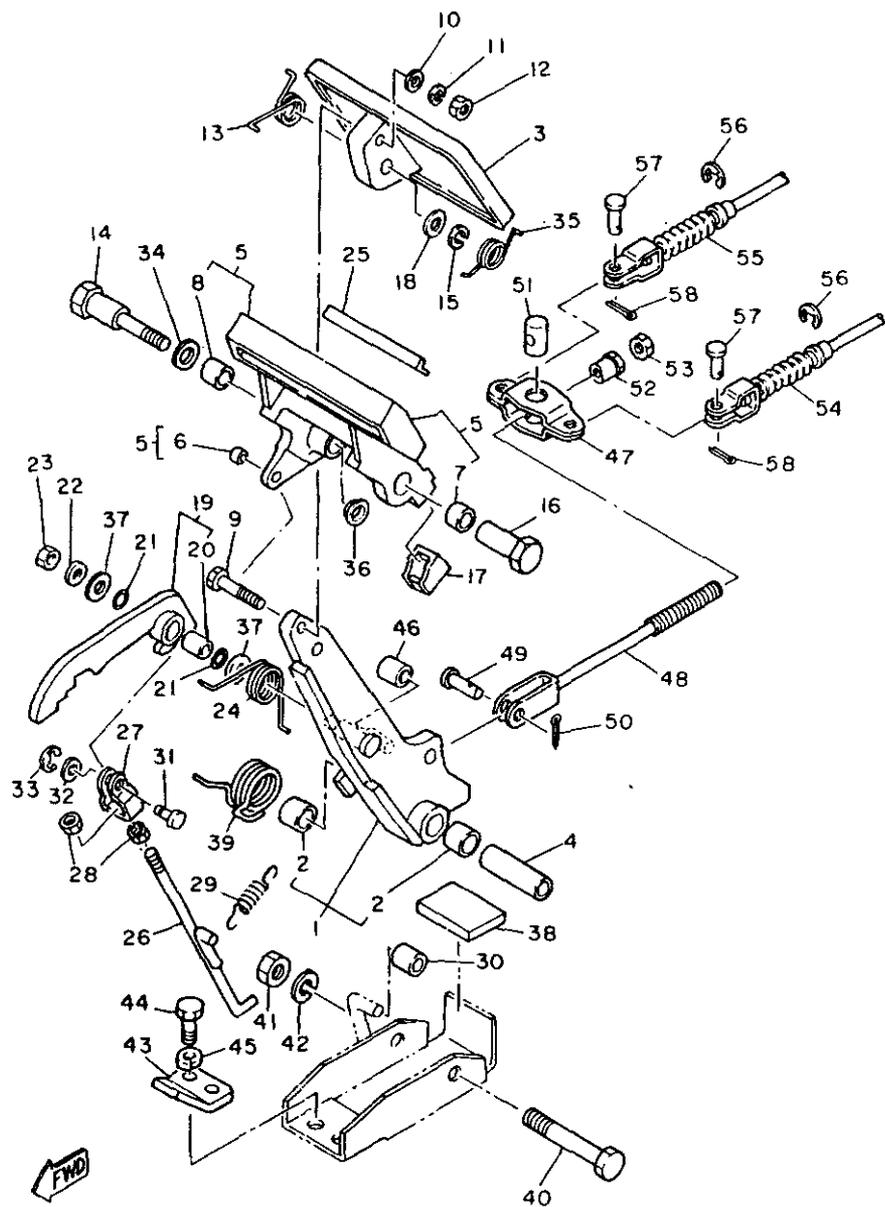


J41110-5050

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	90506-12277	SPRING, tension	1	
30	J17-25673-00	DAMPER, brake	1	
31	J17-27228-00	PIN, joint	1	
32	92901-05600	WASHER, plate	1	
33	99001-04600	CIRCLIP	1	
34	90201-123F2	WASHER, plate	1	
35	90508-26557	SPRING, torsion	1	
36	90380-12105	BUSH, solid	1	
37	90201-104G8	WASHER, plate	2	
38	J17-27245-00	PAD, brake Pedal	1	
39	90508-40543	SPRING, torsion	1	
40	90101-10447	BOLT	1	
41	95602-10100	NUT, u	1	
42	92901-10100	WASHER, sPring	1	
43	J17-27246-00	NAIL, brake	1	
44	97302-08020	BOLT	2	
45	92902-08100	WASHER, sPring	2	
46	J17-25673-00	DAMPER, brake	1	
47	J10-25681-00	EQUALIZER, brake	1	
48	J20-25685-00	ROD	1	
49	91701-10022	PIN, clevis	1	
50	91490-30015	PIN, cotter	1	
51	90249-14129	PIN	1	
52	90179-08261	NUT	1	
53	95301-08700	NUT	1	
54	J38-26341-00	CABLE, brake	1	
55	J38-26351-00	CABLE, brake	1	
56	99002-09600	CIRCLIP	4	

C7


FIG. 15 BRAKE

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
57	91701-08018	PIN, clevis	4	
58	91490-25015	PIN, cotter	4	

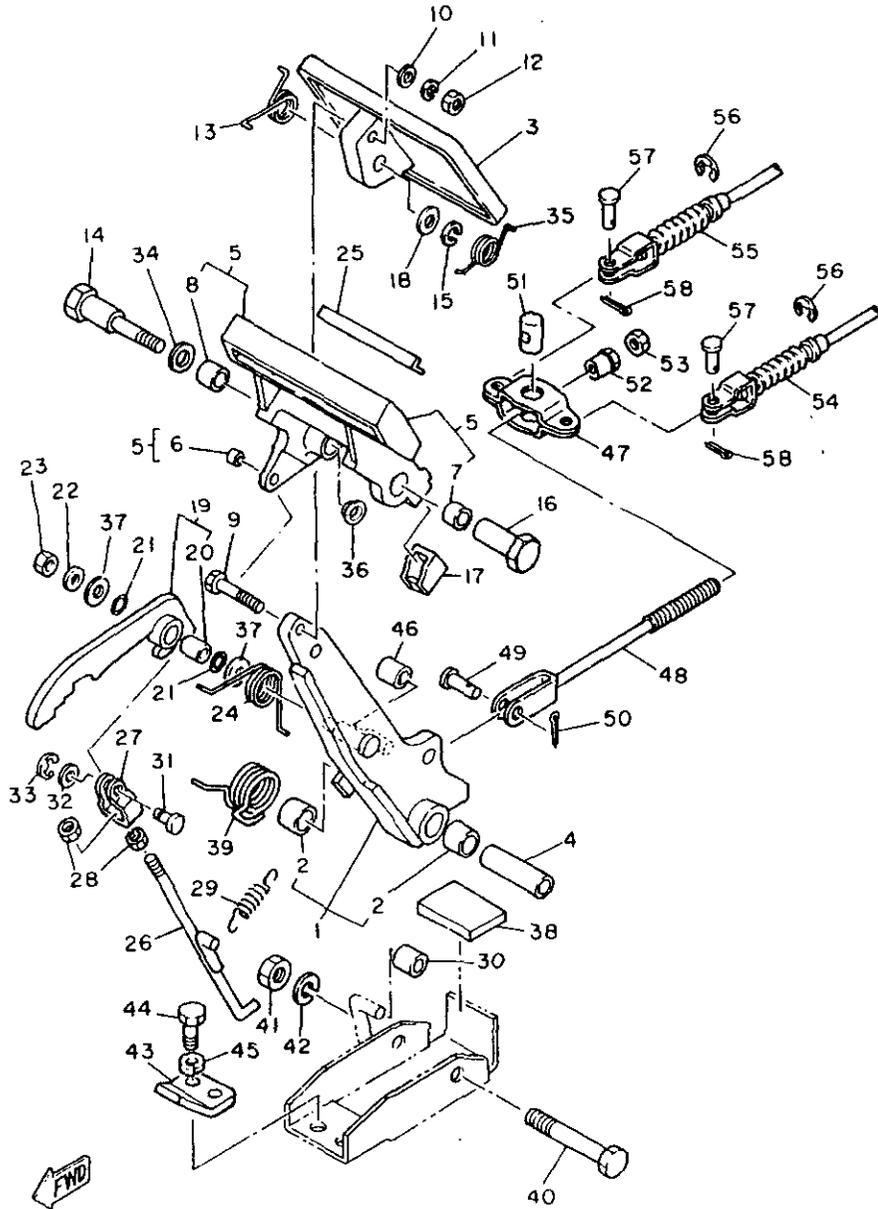

J41110-5050

FIG. 16 BRAKE 2

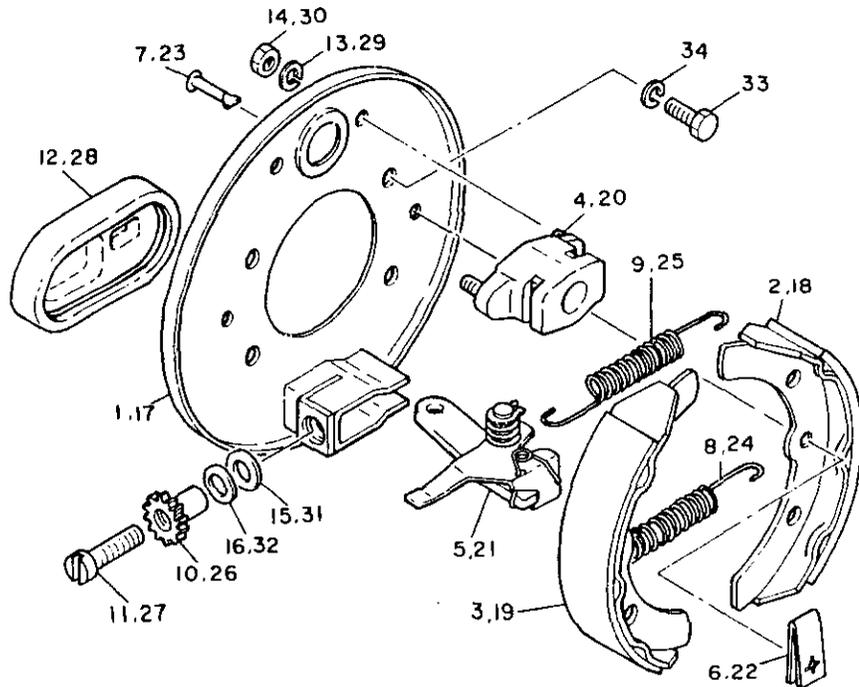


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J17-27208-00	BACKING PLATE SUB ASSY 1	1	
2	J17-25330-00	BRAKE SHOE COMP.	1	
3	J17-25340-00	BRAKE SHOE COMP.	1	
4	J17-27206-00	ANCHOR BODY COMP.	1	
5	J38-27204-00	LEVER ASSY 1	1	
6	J10-27281-00	SPRING, shoe clamp	2	
7	J10-27282-00	PIN, shoe hold down	2	
8	90506-20281	SPRING, tension	1	
9	90506-26191	SPRING, tension	1	
10	J17-27238-00	NUT, adjusting	1	
11	90109-08657	BOLT	1	
12	J10-27286-00	COVER, dust	1	
13	92990-06100	WASHER, spring	2	
14	95302-06600	NUT	2	
15	90201-121H8	WASHER, plate	1	
16	90201-121H9	WASHER, plate	1	
17	J17-27209-00	BACKING PLATE SUB ASSY 2	1	
18	J17-25330-00	BRAKE SHOE COMP.	1	
19	J17-25340-00	BRAKE SHOE COMP.	1	
20	J17-27206-00	ANCHOR BODY COMP.	1	
21	J38-27205-00	LEVER ASSY 2	1	
22	J10-27281-00	SPRING, shoe clamp	2	
23	J10-27282-00	PIN, shoe hold down	2	
24	90506-20281	SPRING, tension	1	
25	90506-26191	SPRING, tension	1	
26	J17-27258-00	NUT, adjusting	1	
27	90109-08659	BOLT	1	
28	J10-27286-00	COVER, dust	1	



J41110-5060

FIG. 16 BRAKE 2

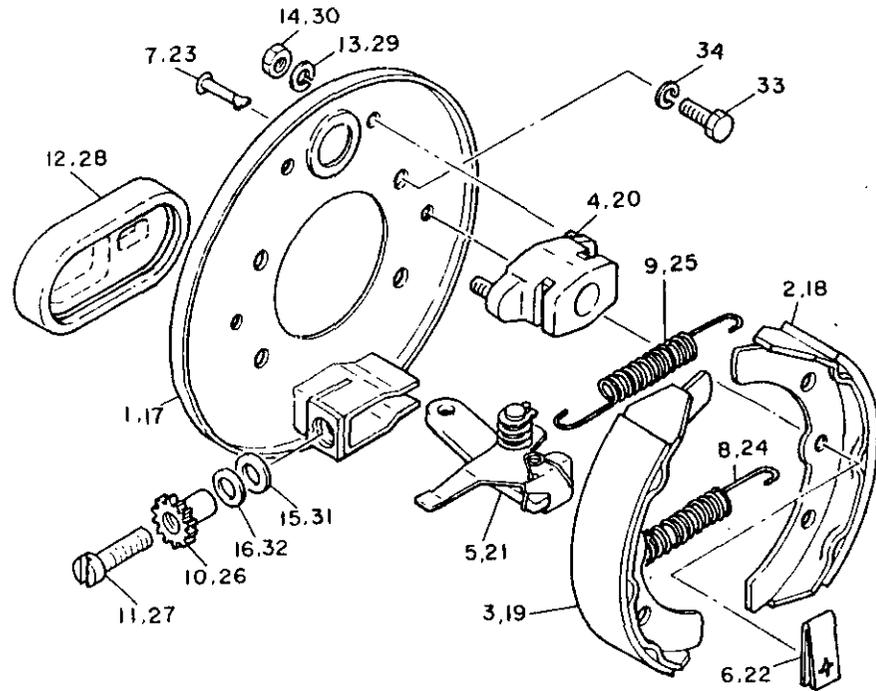


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	92990-06100	WASHER, sPring	2	
30	95302-06600	NUT	2	
31	90201-121H8	WASHER, Plate	1	
32	90201-121H9	WASHER, Plate	1	
33	97022-08016	BOLT	8	
34	92902-08100	WASHER, sPring	8	



J41110-5060

C10


FIG. 17 ACCELERATOR

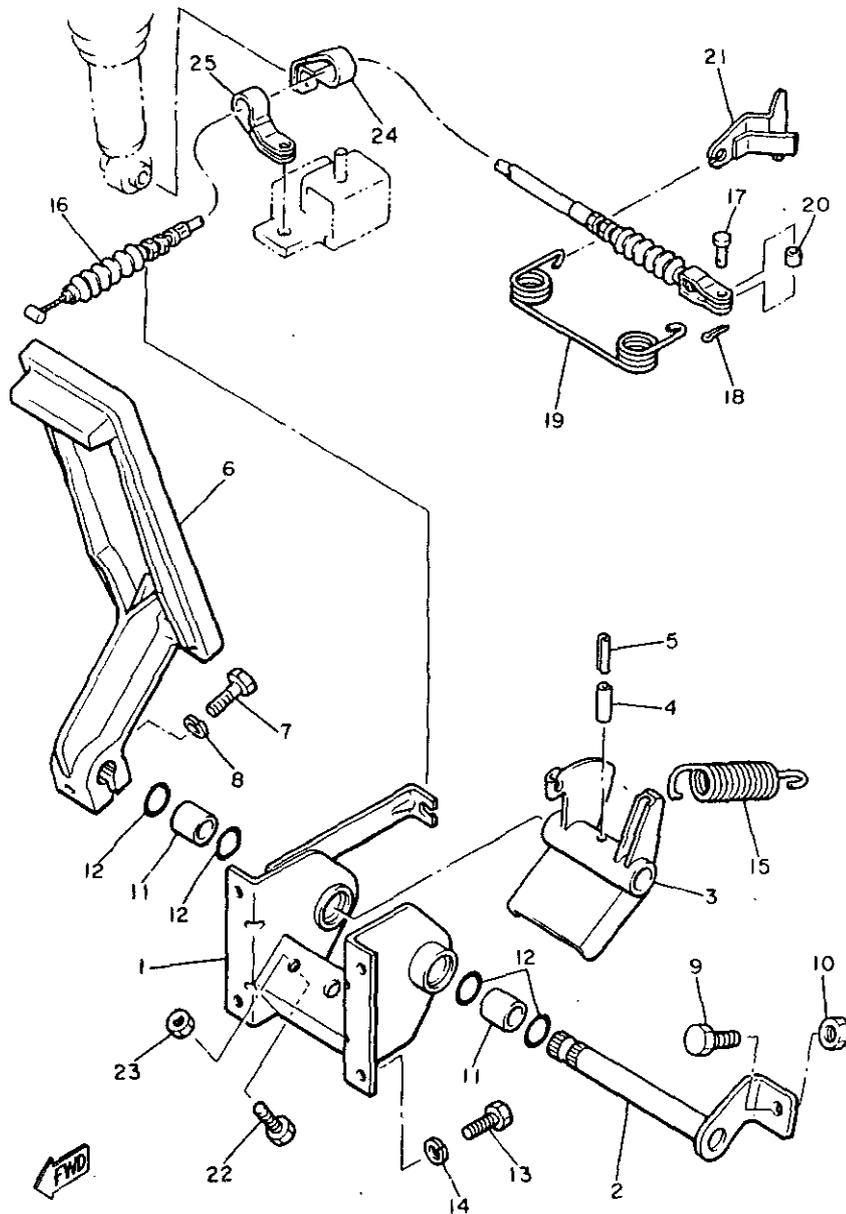

J38110-5170

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-27874-00	BRACKET, accelerator Pedal	1	
2	J17-27853-00	SHAFT, Pedal 1	1	
3	J38-27872-00	ARM, accelerator Pedal	1	
4	91609-60028	PIN, sPring	1	
5	91609-35028	PIN, sPring	1	
6	J14-27871-00	PEDAL, accelerator	1	
7	97302-06025	BOLT	1	
8	92990-06100	WASHER, sPring	1	
9	90106-08040	BOLT	1	
10	95301-08700	NUT	1	
11	90384-14080	BUSH, bimetal formed	2	
12	93210-14104	O-RING	4	
13	97301-06016	BOLT	4	
14	92990-06100	WASHER, sPring	4	
15	90506-26282	SPRING, tension	1	
16	J38-26311-00	CABLE, throttle 1	1	
17	91702-05012	PIN, clevis	1	
18	90468-10049	CLIP	1	
19	90508-16460	SPRING, torsion	1	
20	90560-05001	SPACER	1	
21	J38-27981-00	BRACKET, throttle	1	
22	97302-06025	BOLT	1	
23	95302-06700	NUT	1	
24	90461-08048	CLAMP	1	
25	90461-08106	CLAMP	1	

FIG. 18 GOVERNOR

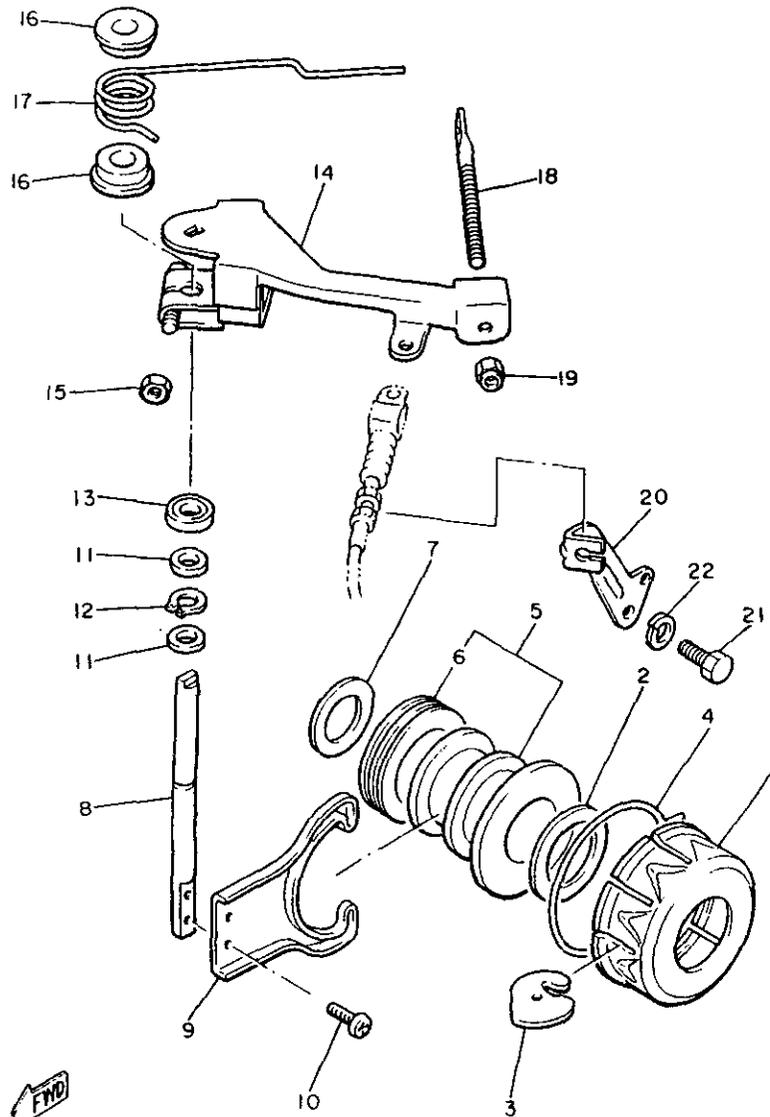


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J10-27912-00	RETAINER	1	
2	90387-21690	COLLAR	1	
3	J10-27913-00	WEIGHT	12	
4	J10-27911-00	HOLDER	1	
5	J10-27927-00	LIFTER	1	
6	93342-22502	BEARING	1	
7	90201-20275	WASHER, Plate	1	
8	J38-27921-00	SHAFT, Governor	1	
9	J10-27922-00	FORK, Governor	1	
10	98501-04008	SCREW, Pan head	2	
11	90202-08110	WASHER, Plate	2	
12	99001-06600	CIRCLIP	1	
13	93109-08008	OIL SEAL	1	
14	J38-27951-00	LEVER, speed limiter	1	
15	95302-06600	NUT	1	
16	90386-08141	BUSH	2	
17	90508-40678	SPRING, torsion	1	
18	J38-27959-00	SCREW, adjusting	1	
19	95702-06300	NUT, nylon	1	
20	J38-27982-00	BRACKET, wire	1	
21	97022-08016	BOLT	1	
22	92902-08100	WASHER, spring	1	

FWD
J38110-5180


FIG. 19 PRIMARY SHEAVE

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-46210-00	PRIMARY FIXED SHEAVE COMP.	1	
2	J38-46220-00	PRIMARY SLIDING SHEAVE COMP.	1	
3	93102-28348	.OIL SEAL	2	
4	J38-46253-00	.SLIDER	3	
5	98901-05008	.SCREW, bind	3	
6	93700-06004	.NIPPLE, Grease	1	
7	J38-46251-00	SPIDER	1	
8	J38-46231-00	CAP	1	
9	J38-46205-00	WEIGHT LINK ASSY	3	
10	J38-46236-00	PIN, weight	3	
11	J38-46237-00	PIN, weight 2	3	
12	90113-04050	BOLT, set	12	
13	98501-05008	SCREW, Pan head	6	
14	92901-05100	WASHER, spring	6	
15	J38-46249-00	BOLT	1	
16	90202-07164	WASHER, plate	6	
17	J38-46241-00	V-BELT	1	

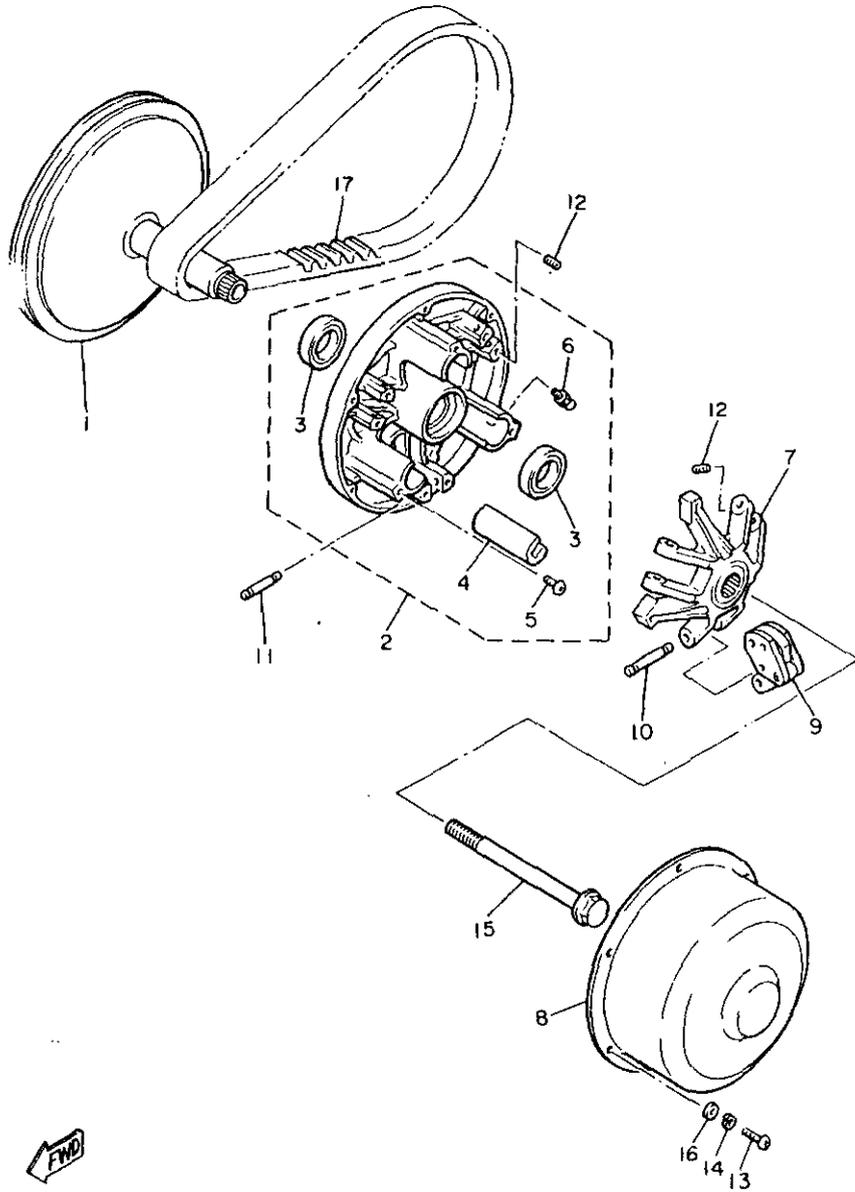

J38110-5191

FIG. 20 SECONDARY SHEAVE

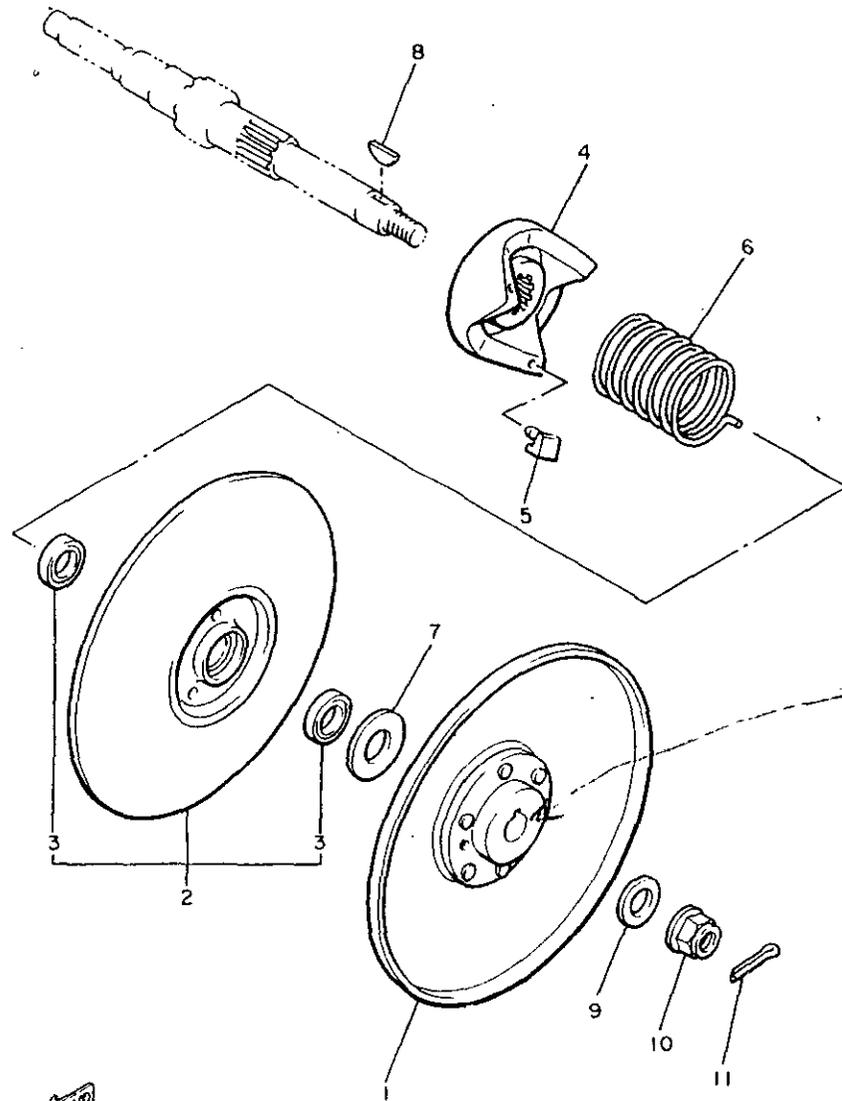

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-46260-00	SECONDARY FIXED SHEAVE COMP.	1	
2	J38-46270-00	SECONDARY SLIDING SHEAVE COMP.	1	
3	93102-20309	OIL SEAL	2	
4	J38-46284-00	SEAT, secondary spring (46280)	1	
5	J17-17688-00	SHOE, ramp → Indirect	3	
6	90508-45679	SPRING, torsion	1	
7	90202-20130	WASHER, Plate	1	
8	90280-05022	KEY, woodruff	1	
9	90201-12588	WASHER, Plate	1	
10	90185-12093	NUT, self-locking	1	
11	91401-25025	PIN, cotter	1	


Bush 90384-20143



J39700-6200

C14


FIG. 21 TRANSMISSION 1

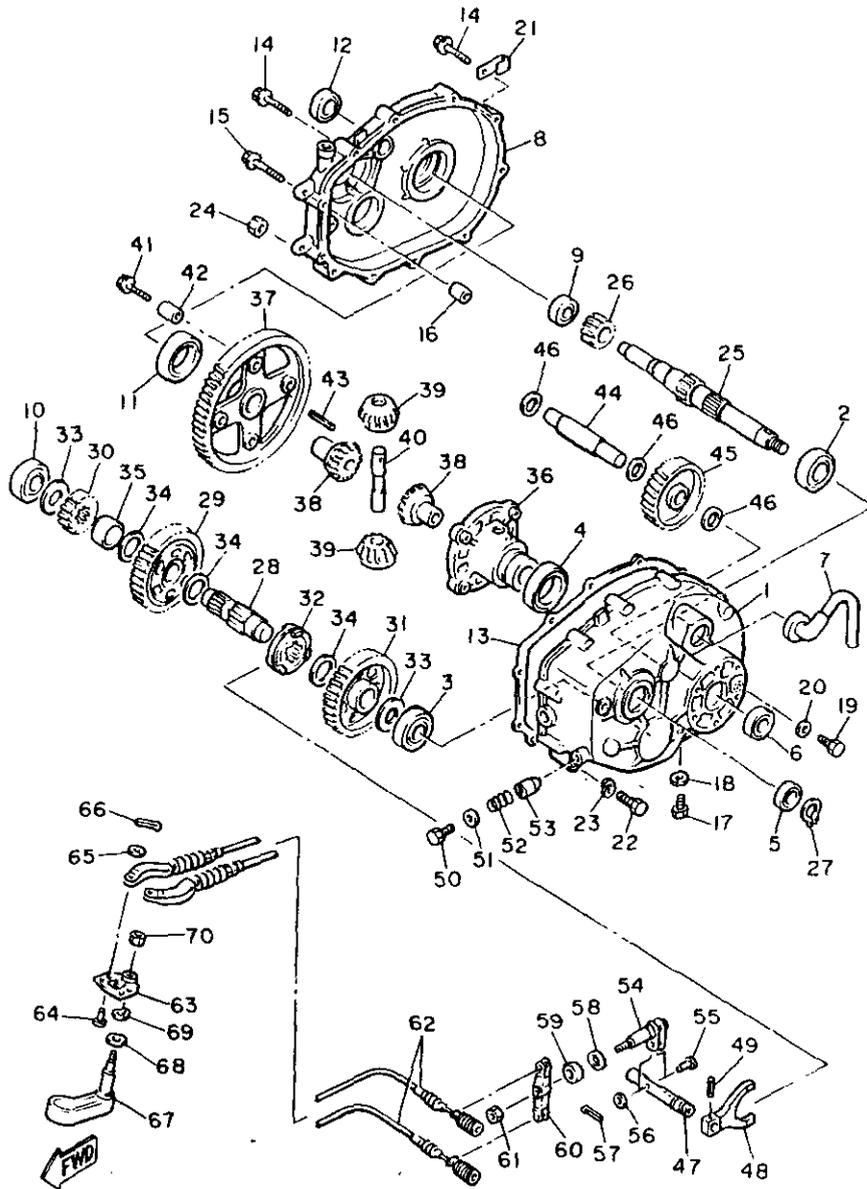

J38110-5210

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-46311-00	CASE, transmission 1	1	
2	93306-20541	BEARING (B6205)	1	
3	93306-20401	BEARING (B6204)	1	
4	93306-00801	BEARING (B6008)	1	
5	93102-25017	OIL SEAL	1	
6	93102-22189	OIL SEAL	1	
7	835-47559-00	CAP 2	1	
8	J38-46312-00	CASE, transmission 2	1	
9	93306-20324	BEARING	1	
10	93306-20401	BEARING (B6204)	1	
11	93306-00801	BEARING (B6008)	1	
12	93102-22189	OIL SEAL	1	
13	J38-46319-00	GASKET	1	
14	95822-08040	BOLT, flange	8	
15	95822-08050	BOLT, flange	2	
16	99510-12016	PIN, dowel	2	
17	90340-14036	PLUG, straight screw	1	
18	90430-14043	GASKET	1	
19	90101-08344	BOLT	1	
20	90430-08119	GASKET	1	
21	90465-06101	CLAMP	1	
22	97323-08075	BOLT	1	
23	92902-08100	WASHER, spring	1	
24	95302-08600	NUT	1	
25	J38-46321-01	SHAFT, input	1	
26	J38-46331-01	GEAR, input 1	1	
27	93410-25017	CIRCLIP	1	
28	J38-46351-00	SHAFT, counter	1	


FIG. 21 TRANSMISSION 1

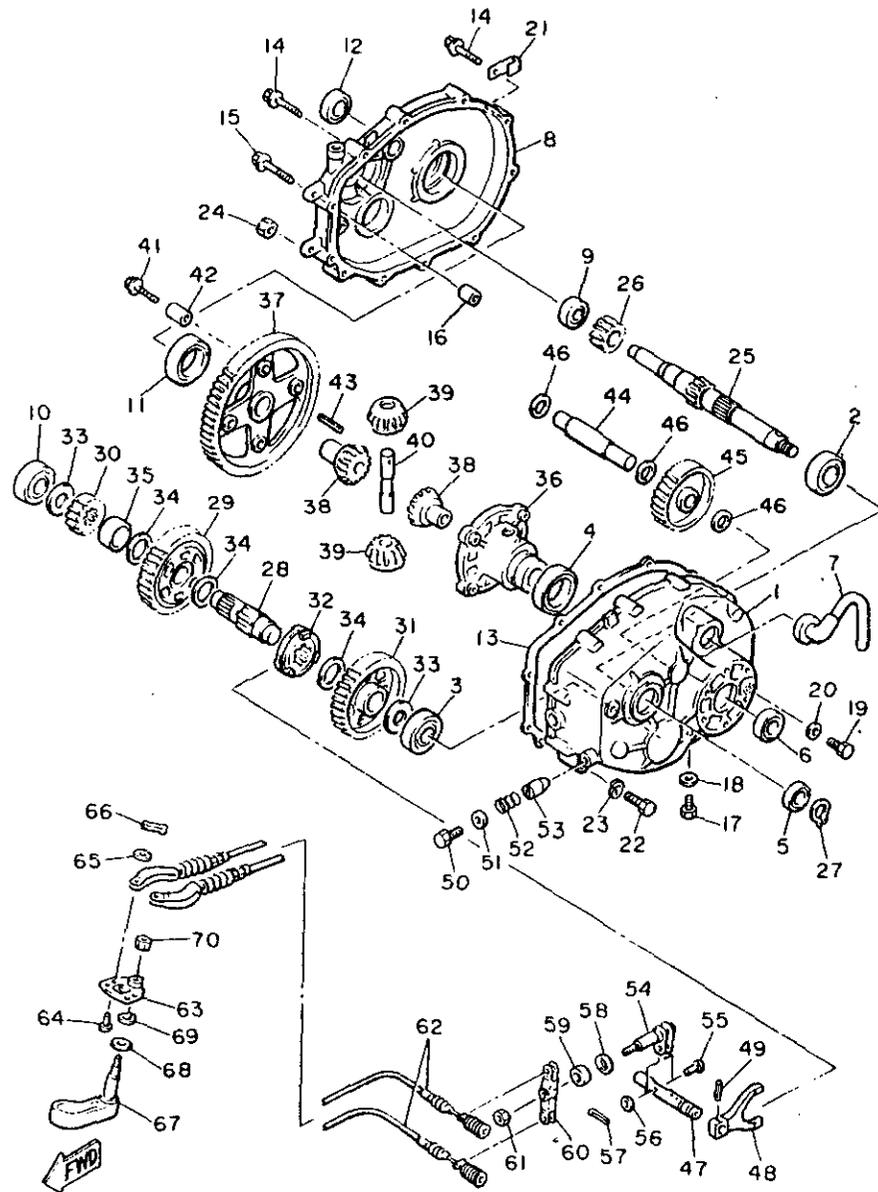

J38110-5210

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J38-46361-01	GEAR, counter 1	1	
30	J38-46362-00	GEAR, counter 2	1	
31	J38-46363-00	GEAR, reverse	1	
32	J38-4636A-00	DOG, clutch	1	
33	90201-20611	WASHER, Plate	2	
34	90201-257J2	WASHER, Plate	3	
35	90387-252M8	COLLAR	1	
36	J38-46411-01	CASE, differential	1	
37	J38-46421-01	GEAR, ring	1	
38	J38-46414-00	GEAR, differential side	2	
39	J38-46415-00	PINION, differential	2	
40	J38-46417-02	PIN, differential	1	
41	90105-08390	BOLT, washer based	4	
42	91812-16001	PIN, dowel	2	
43	91609-40040	PIN, sPring	1	
44	J38-46348-00	SHAFT 2	1	
45	J38-46356-00	GEAR, idler	1	
46	90201-17713	WASHER, Plate	3	
47	J38-4633A-00	BAR, shift fork Guide	1	
48	J38-46338-00	FORK, shaft	1	
49	91609-40020	PIN, sPring	1	
50	90101-08344	BOLT	1	
51	90430-08119	GASKET	1	
52	90501-10060	SPRING, comPression	1	
53	90249-07190	PIN	1	
54	J38-46384-00	LEVER, shift 3	1	
55	91702-06022	PIN, clavis	1	
56	92990-06200	WASHER, Plain	1	

FIG. 21 TRANSMISSION 1

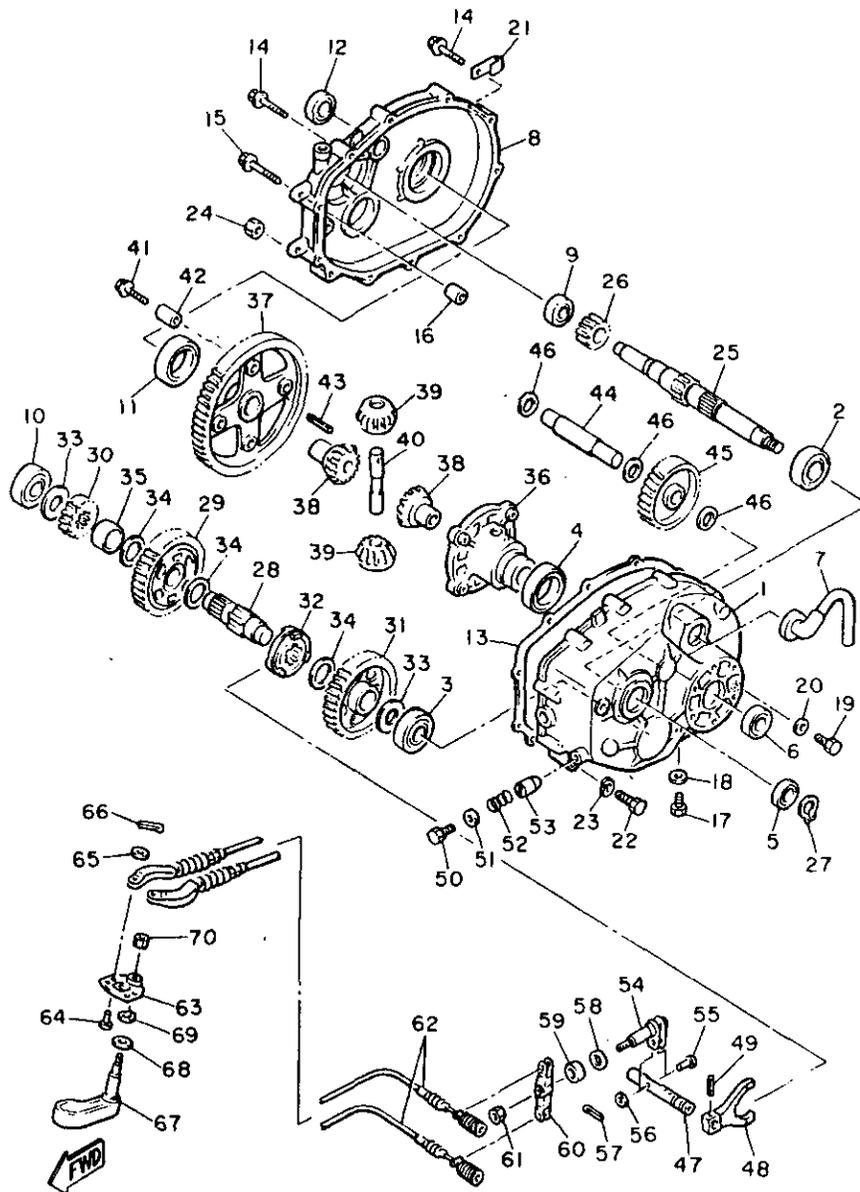


J38110-5210

D3

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
57	91402-20012	PIN, cotter	1	
58	90201-12166	WASHER, plate	1	
59	93102-12224	OIL SEAL	1	
60	J38-46383-00	LEVER, shift 2	1	
61	95602-08100	NUT, u	1	
62	J38-46371-01	WIRE, shift	2	
63	J38-46382-00	LEVER, shift 1	1	
64	91702-06014	PIN, clevis	2	
65	92990-06600	WASHER, plate	2	
66	91402-20012	PIN, cotter	2	
67	J38-46381-00	KNOB, shift	1	
68	90201-12474	WASHER, plate.	1	
69	99001-08600	CIRCLIP	1	
70	95602-08100	NUT, u	1	

FIG. 22 REAR AXLE. WHEEL

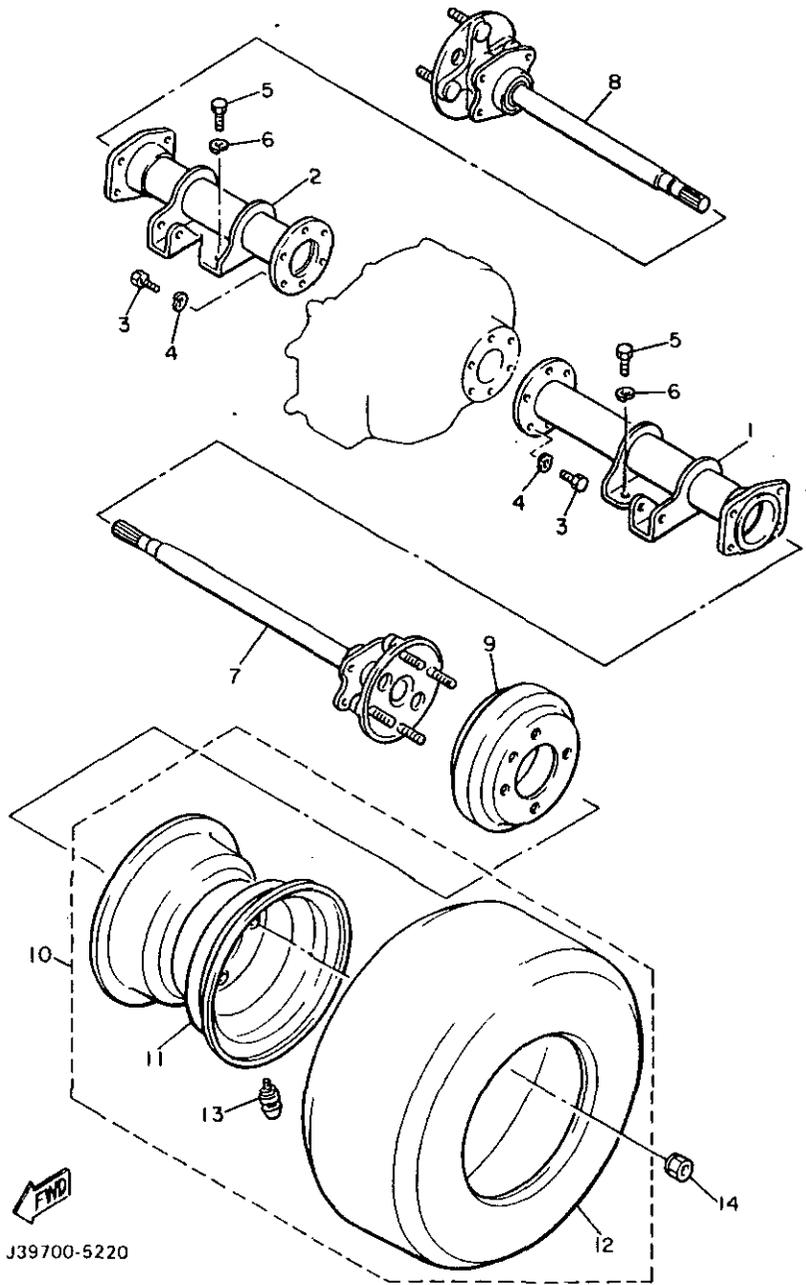


J39700-5220

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-46540-00	REAR AXLE HOUSING COMP.	1	
2	J38-46550-00	REAR AXLE HOUSING COMP. 2	1	
3	97312-08025	BOLT	12	
4	92902-08100	WASHER, sPrin8	12	
5	97322-10020	BOLT	8	
6	92901-10100	WASHER, sPrin8	8	
7	J38-46510-00	REAR AXLE SHAFT COMP.	1	
8	J38-46520-00	REAR AXLE SHAFT COMP. 2	1	
9	J17-46521-00	DRUM	2	
10	J39-25300-00	REAR WHEEL ASSY	2	
11	J11-25102-00	•WHEEL RIM ASSY, front	1	
12	94118-853H5	•TIRE	1	
13	93900-00014	•VALVE, rim	1	bridgestone
14	90179-12262	NUT	8	

D4


FIG. 23 BUMPER

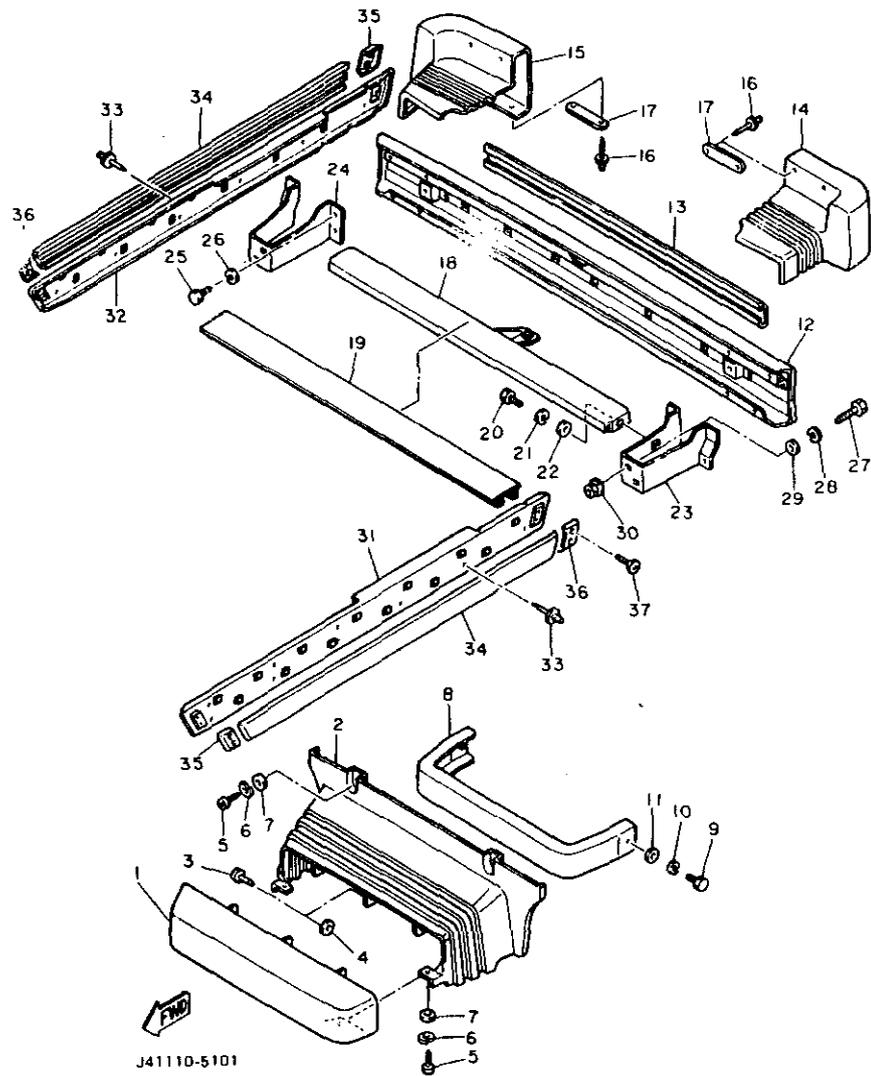

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-78162-00	PAD, front bumper	1	
2	J38-78163-00	COVER, bumper	1	
3	90269-06028	RIVET	3	
4	90201-076J4	WASHER, Plate	3	
5	98506-05020	SCREW, Pan head	4	
6	92906-05100	WASHER, sPring	4	
7	90201-05033	WASHER, Plate	4	
8	J38-77511-01	BUMPER, front 1	1	
9	97022-08016	BOLT	2	
10	92902-08100	WASHER, sPring	2	
11	92990-08600	WASHER, Plate	2	
12	J38-78107-02	BUMPER SUB-ASSY, rear	1	
13	J38-78172-00	PAD, rear bumper	1	
14	J38-78167-00	BUMPER, rubber 1	1	
15	J38-78168-00	BUMPER, rubber 2	1	
16	90267-40077	RIVET, blind	8	
17	J17-77525-00	WASHER 1	4	
18	J38-78179-01	PLATE, extension	1	
19	J38-78178-00	COVER, extension Plate	1	
20	97306-08016	BOLT	3	
21	92906-08100	WASHER, sPring	3	
22	92906-08600	WASHER, Plate	3	
23	J38-78174-01	STAY, rear bumper	1	
24	J38-78175-01	STAY, rear bumper 2	1	
25	97326-08016	BOLT	6	
26	92906-08100	WASHER, sPring	6	
27	97326-08050	BOLT	4	
28	92906-08100	WASHER, sPring	4	

D5


FIG. 23 BUMPER

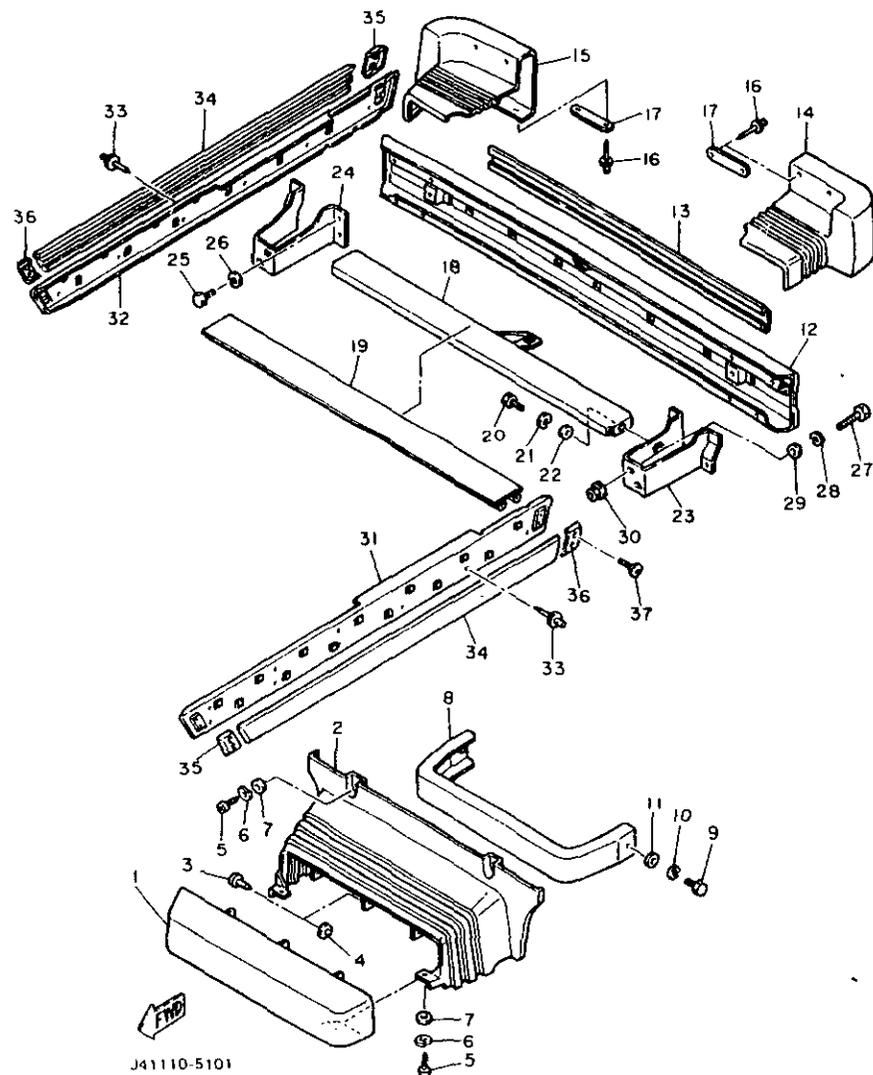

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	92906-08600	WASHER, Plate	4	
30	95706-08500	NUT, flange	4	
31	J38-78183-00	PLATE, side sill (L.H)	1	
32	J38-78184-00	PLATE, side sill (R.H)	1	
33	90267-48132	RIVET, blind	18	
34	J38-7818A-00	PROTECTOR, side Plate	2	
35	J38-7818E-00	CAP, Protector end 1	2	
36	J38-7818F-00	CAP, Protector end 2	2	
37	92606-06014	SCREW, oval head	8	

D6

FIG. 24 BODY

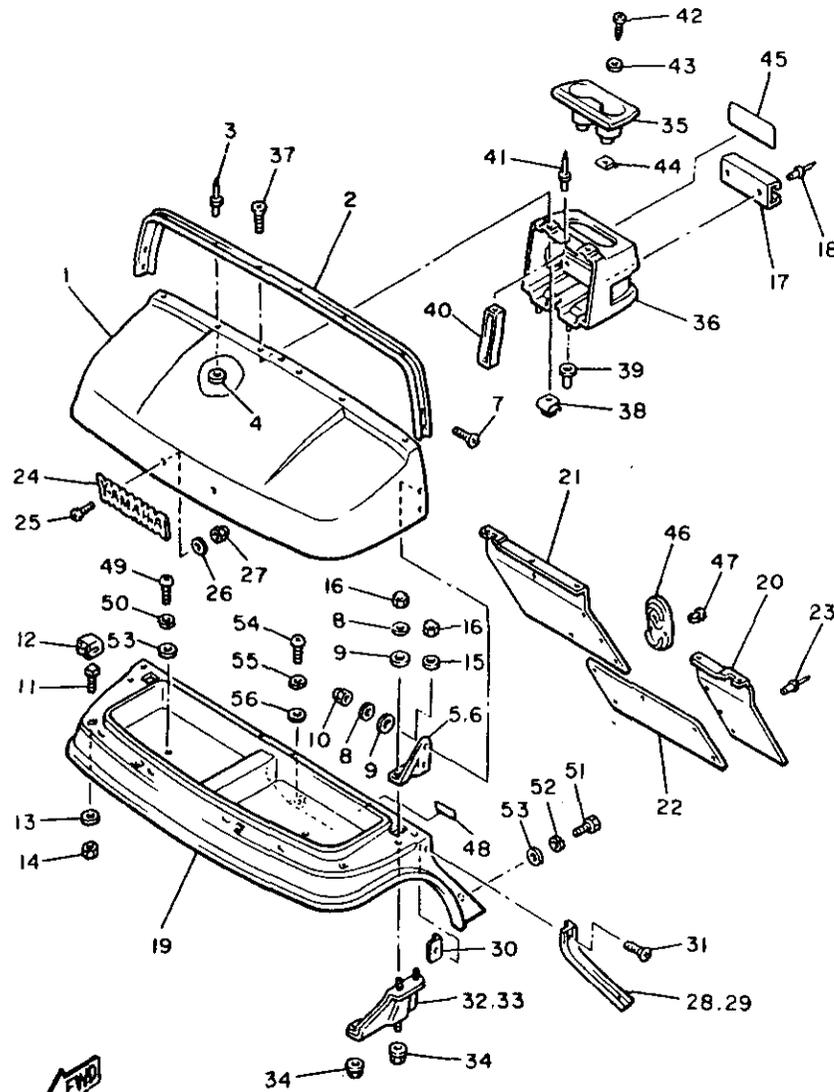


J39700-6240

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-78116-01	CDWL, front upper	1	
2	J38-7811A-01	TRIM, upper cowl	1	
3	90267-48051	RIVET, blind	4	
4	90201-046J3	WASHER, Plate	4	
5	J38-7811E-00	STAY, upper cowl (L.H)	1	
6	J38-7811F-00	STAY, upper cowl (R.H)	1	
7	90151-06039	SCREW, countersunk	4	
8	92990-06200	WASHER, Plain	6	
9	90202-06172	WASHER, Plate	6	
10	95380-06800	NUT	4	
11	J38-7811G-00	BOLT, cowl fitting	4	
12	J38-7811H-00	RETAINER, cowl fitting	4	
13	90201-065F3	WASHER, Plate	4	
14	95602-06100	NUT, u	4	
15	90201-062G3	WASHER, Plate	2	
16	95380-06800	NUT	4	
17	J38-7835A-01	HOLDER, ball	1	
18	90267-63047	RIVET, blind	2	
19	J39-78115-02	CDWL, front	1	
20	J39-78231-01	MAT, main floor 1	1	
21	J39-78232-01	MAT, main floor 2	1	
22	J38-78236-01	MAT, Pedal floor	1	
23	90267-63047	RIVET, blind	18	
24	J38-24161-00	EMBLEM 1	1	
25	90152-04015	SCREW, countersunk	2	
26	92906-04200	WASHER, Plain	2	
27	95606-04100	NUT, u	2	
28	J38-7811L-00	TRIM, cowl side (L.H)	1	

D7

FIG. 24 BODY

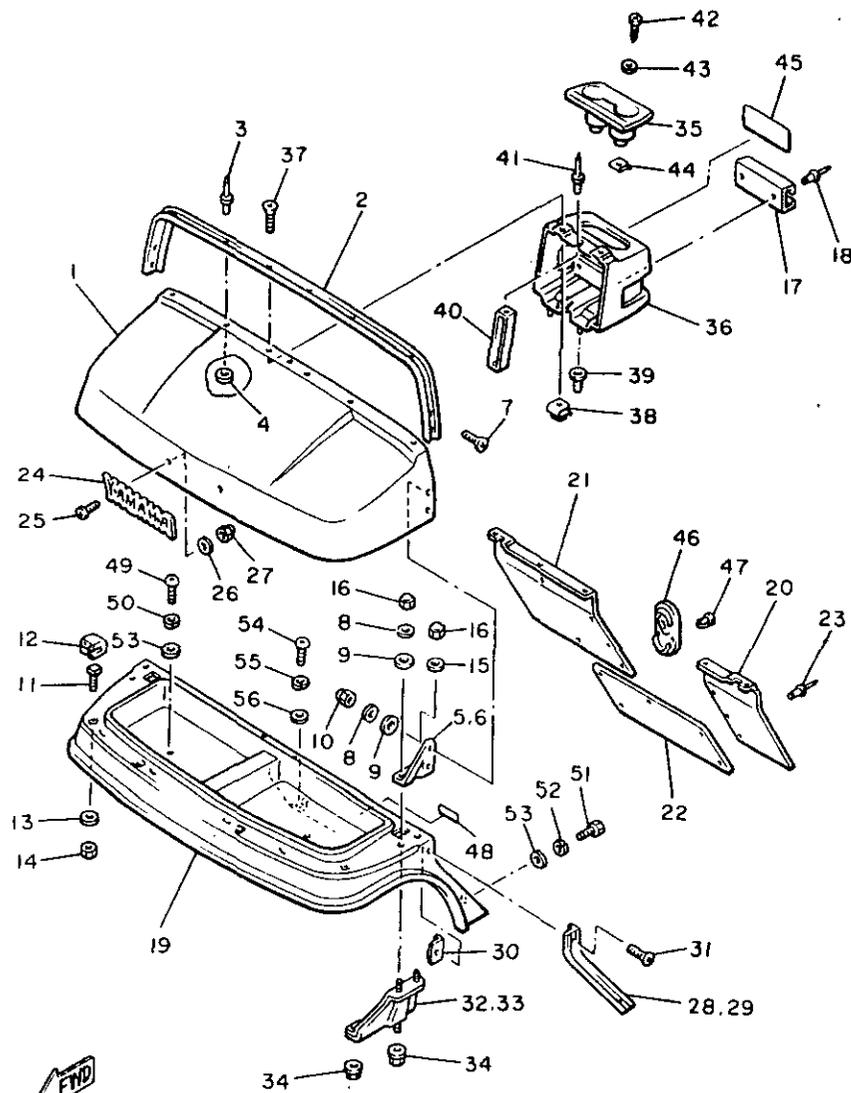


J39700-6240

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J38-7811M-00	TRIM, cowl side (R.H)	1	
30	J38-7811K-00	NUT, trim fitting	4	
31	90151-06039	SCREW, countersunk	4	
32	J38-7812E-00	SUPPORT, upper cowl (L.H)	1	
33	J38-7812F-00	SUPPORT, upper cowl (R.H)	1	
34	95702-08500	NUT, flange	4	
35	J38-7835E-03	HOLDER, beverage	1	
36	J38-7835G-01	HOUSING, holder	1	
37	90151-06040	SCREW, countersunk	2	
38	J38-78145-00	NUT, rear body mounting	2	
39	90480-12355	GROMMET	2	
40	J38-7834A-00	REINF., holder	1	
41	90267-48086	RIVET, blind	2	
42	97780-50525	SCREW, tapping	2	
43	90201-05586	WASHER, plate	2	
44	90183-05001	NUT, spring	2	
45	J38-77768-00	LABEL, warning	1	
46	J38-78273-00	COVER, hole	1	
47	90269-11042	RIVET	2	
48	J38-77767-00	LABEL, warning 7	1	
49	92580-06020	SCREW, Pan head	2	
50	92990-06100	WASHER, spring	2	
51	97395-06020	BOLT	2	
52	92990-06100	WASHER, spring	2	
53	90201-06697	WASHER, plate	4	
54	92580-06020	SCREW, Pan head	1	
55	92990-06100	WASHER, spring	1	
56	90201-06049	WASHER, plate	1	

D8

FIG. 25 BODY 2

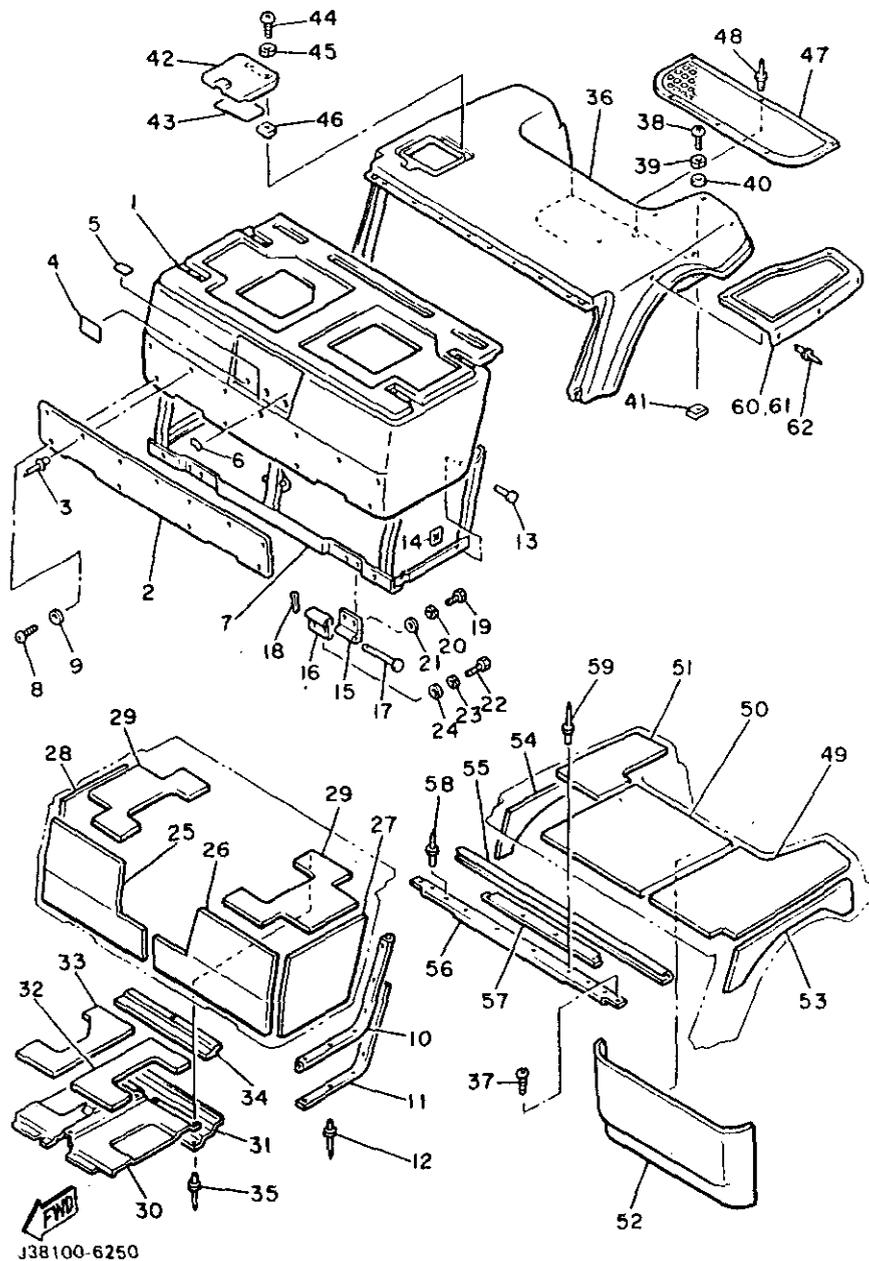


J38100-6250

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-78141-01	PANEL, intermediate body	1	
2	J38-7814N-00	PLATE, ornament	1	
3	90267-40131	RIVET, blind	7	
4	J41-77458-00	LABEL, warning	1	
5	J38-77741-00	INDICATOR 1	1	
6	J38-77742-00	INDICATOR 2	1	
7	J38-78121-00	REINFORCEMENT 1	1	
8	98980-06016	SCREW, blind	4	
9	90201-06697	WASHER, Plate	4	
10	J38-7814F-00	SEAL, body side 2	2	
11	J38-7815A-00	PLATE, seal support 1	2	
12	90267-40054	RIVET, blind	12	
13	90338-06169	PLUG	2	
14	90183-06011	NUT, spring	2	
15	J38-78143-00	HINGE, intermediate body 1	2	
16	J38-78144-00	HINGE, intermediate body 2	2	
17	91790-06125	PIN, clevis	2	
18	91490-20015	PIN, cotter	2	
19	97302-06012	BOLT	4	
20	92990-06100	WASHER, spring	4	
21	92990-06600	WASHER, Plate	4	
22	97302-06020	BOLT	4	
23	92990-06100	WASHER, spring	4	
24	92990-06600	WASHER, Plate	4	
25	J38-78251-00	PAD, silencer 1	1	
26	J38-78252-00	PAD, silencer 2	1	
27	J38-78253-00	PAD, silencer 3	1	
28	J38-78254-00	PAD, silencer 4	1	


D9

FIG. 25 BODY 2

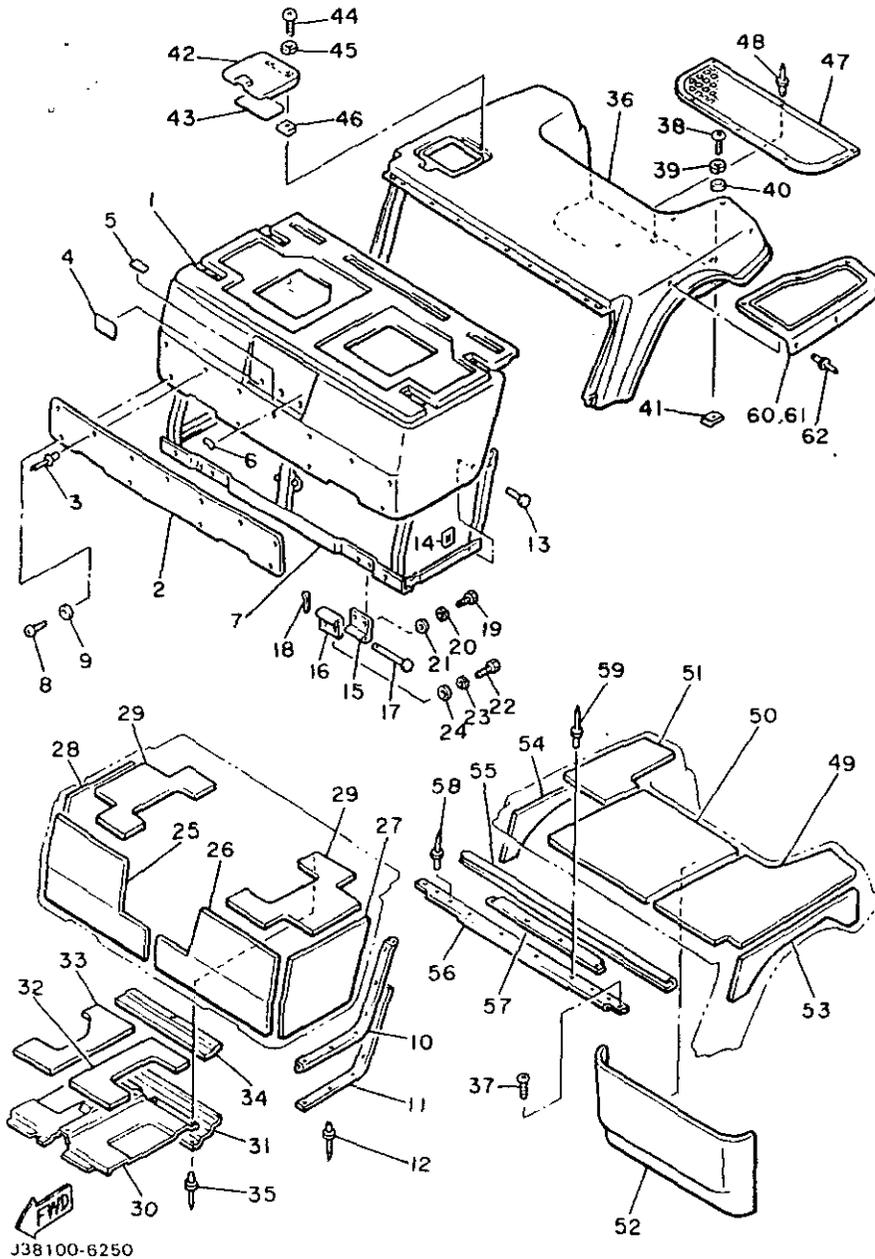

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J38-7825K-00	PAD, silencer 16	2	
30	J38-78261-00	PLATE, body Protect 1	1	
31	J38-78262-00	PLATE, body Protect 2	1	
32	J38-7826A-00	PAD, body Protect 1	1	
33	J38-7826E-00	PAD, body Protect 2	1	
34	J38-7826F-00	PAD, body Protect 3	1	
35	90267-40054	RIVET, blind	10	
36	J38-78142-01	PANEL, rear body	1	
37	98902-06025	SCREW, blind	3	
38	92580-06020	SCREW, Pan head	2	
39	92990-06100	WASHER, sPring	2	
40	90201-065F3	WASHER, Plate	2	
41	90183-06028	NUT, sPring	2	
42	J38-78272-00	COVER, fuel inlet	1	
43	J38-77764-01	LABEL, warning 4	1	
44	98511-04012	SCREW, Pan head	2	
45	92902-04100	WASHER, sPring	2	
46	J38-78276-00	NUT, inlet fitting	2	
47	J38-78241-00	MAT, rear floor	1	
48	90267-63047	RIVET, blind	6	
49	J38-78255-00	PAD, silencer 5	1	
50	J38-78256-00	PAD, silencer 6	1	
51	J38-78257-00	PAD, silencer 7	1	
52	J38-78258-00	PAD, silencer 8	1	
53	J38-7825L-00	PAD, silencer 17	1	
54	J38-7825J-00	PAD, silencer 15	1	
55	J38-7814A-00	SEAL, body upper	1	
56	J38-7815F-00	PLATE, seal support 3	1	

FIG. 25 BODY 2

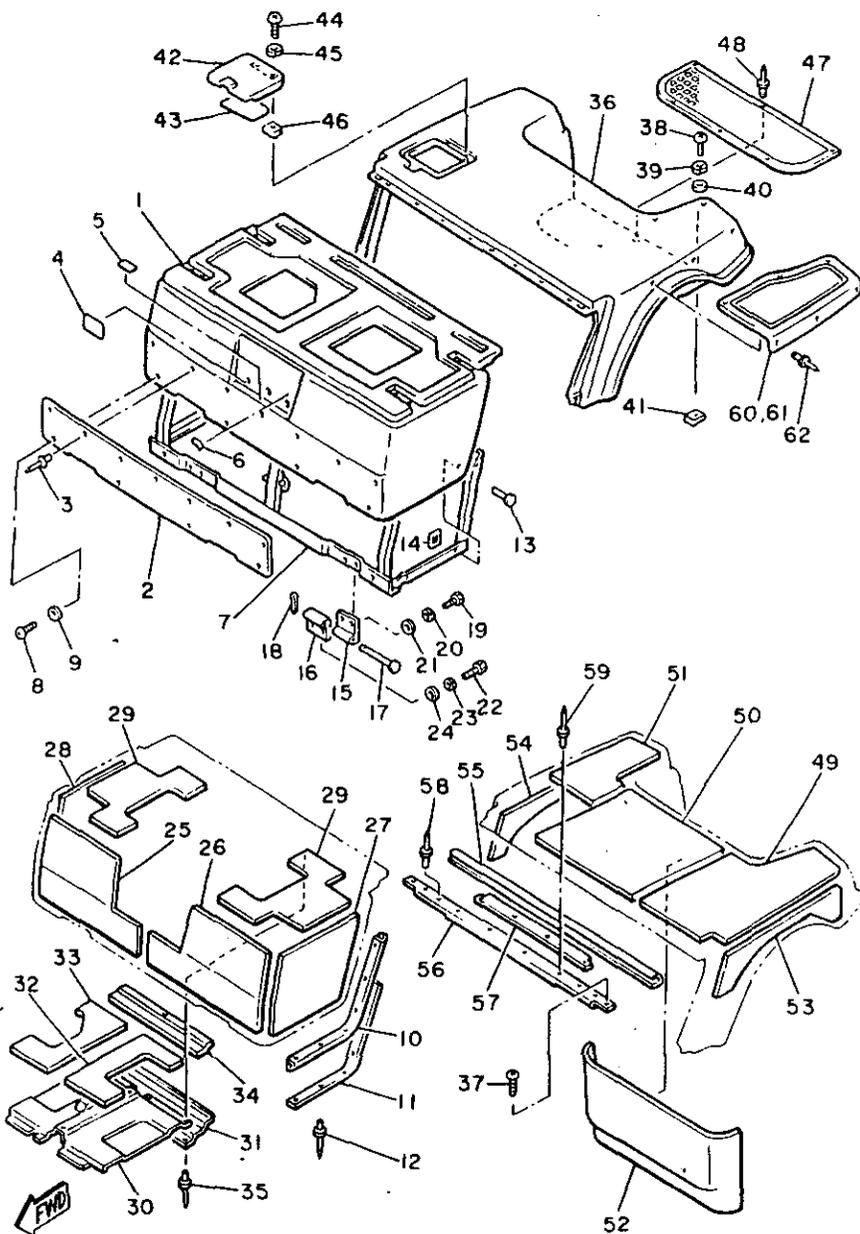


J38100-6250

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
57	J38-7826G-00	PAD, body Protect 4	1	
58	90267-40077	RIVET, blind	4	
59	90267-40129	RIVET, blind	3	
60	J38-78243-01	MAT, rear body side (LH)	1	
61	J38-78244-01	MAT, rear body side (RH)	1	
62	90267-63047	RIVET, blind	12	

D11


FIG. 26 BODY FITTING

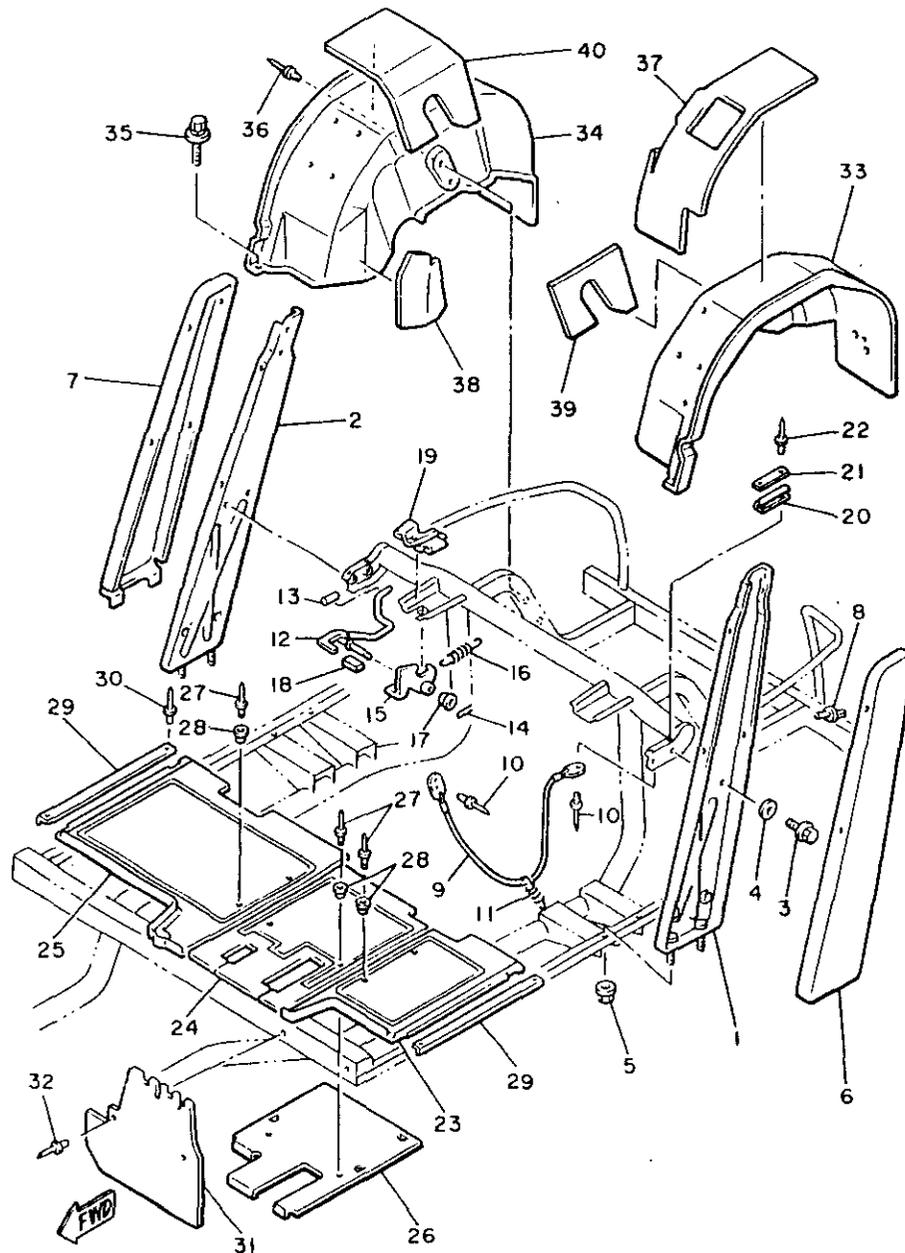

J39700-6260

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-7813A-00	PILLAR, side (L.H)	1	
2	J38-7813E-00	PILLAR, side (R.H)	1	
3	95822-08016	BOLT, flange	4	
4	90201-08730	WASHER, Plate	4	
5	95702-06500	NUT, flange	4	
6	J39-7813F-02	COVER, side Pillar (L.H)	1	
7	J39-7813G-02	COVER, side Pillar (R.H)	1	
8	90267-63134	RIVET, blind	8	
9	J38-78229-00	WIRE, seat stopper	1	
10	90267-40087	RIVET, blind	2	
11	90507-08037	SPRING, tension	1	
12	J38-7814G-01	LEVER, body lock	1	
13	90445-11147	HOSE	1	
14	90468-18008	CLIP	1	
15	J38-7814H-01	HOOK, body lock	1	
16	90506-18374	SPRING, tension	1	
17	J38-7814L-01	BUSH, lever end	2	
18	J38-7815H-00	DAMPER, lock	1	
19	J38-78221-00	SHEET, body mounting 1	2	
20	J38-7814E-00	SEAL, body side 1	2	
21	J38-7815E-00	PLATE, seal support 2	2	
22	90267-40054	RIVET, blind	4	
23	J38-78203-00	FLOOR MAT COMP. 3	1	
24	J38-78234-01	MAT, main floor 4	1	
25	J38-78205-00	FLOOR MAT COMP. 5	1	
26	J38-78271-02	SERVICE LID, Pedal	1	
27	90267-48086	RIVET, blind	6	
28	90387-081R2	COLLAR	6	

FIG. 26 BODY FITTING

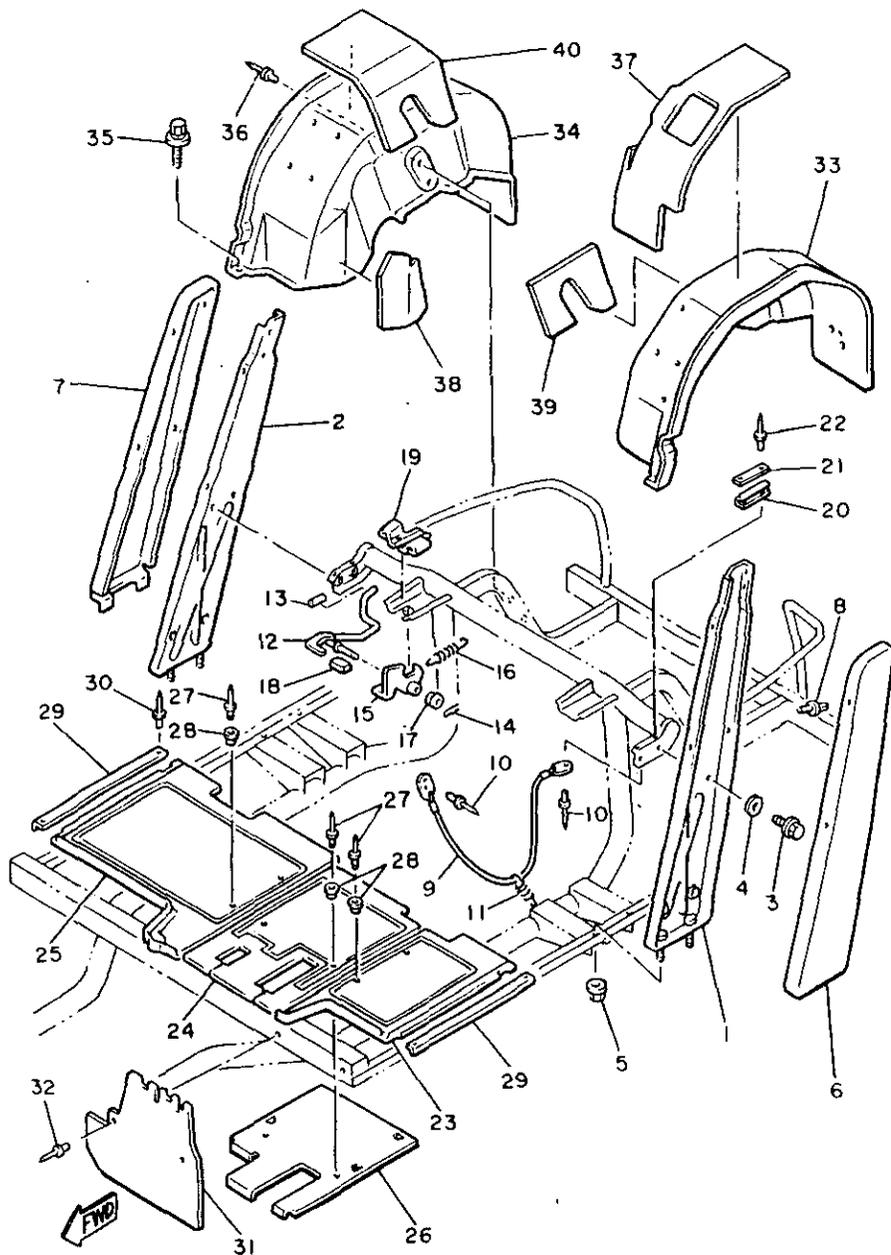


J39700-6260

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J38-78215-00	PLATE, side trim	2	
30	90267-40115	RIVET, blind	4	
31	J38-78187-01	FLAP, front fender	2	
32	90267-48101	RIVET, blind	4	
33	J38-78191-01	PANEL, rear fender 1	1	
34	J38-78192-01	PANEL, rear fender 2	1	
35	90119-06108	BOLT, with washer	2	
36	90267-48101	RIVET, blind	6	
37	J38-78259-00	PAD, silencer 9	1	
38	J38-7825A-00	PAD, silencer 10	1	
39	J38-7825F-00	PAD, silencer 12	1	
40	J38-7825G-00	PAD, silencer 13	1	

D13


FIG. 27 SUN ROOF

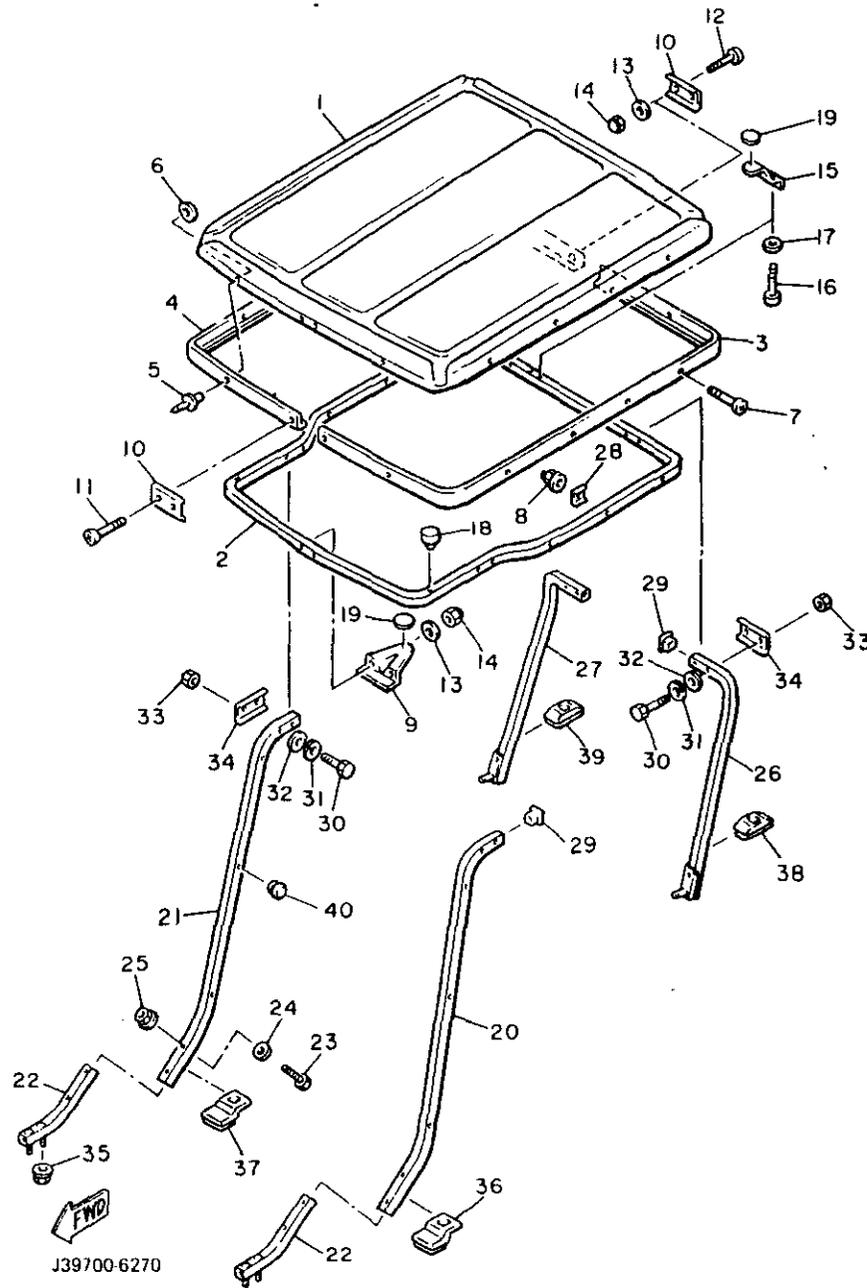

J39700-6270

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J39-78314-00	COVER, sun roof	1	
2	J39-78311-00	FRAME, sun roof	1	
3	J39-78315-00	TRIM, roof	1	
4	J39-7831J-00	TRIM, roof	1	
5	90267-48078	RIVET, blind	6	
6	90201-046J3	WASHER, Plate	6	
7	98980-05030	SCREW, bind	6	
8	90176-05057	NUT, crown	6	
9	J39-7831G-00	STAY, sunroof cover 1	1	
10	J39-7831K-00	END, roof trim	2	
11	98980-06035	SCREW, bind	2	
12	98980-06014	SCREW, bind	2	
13	90201-065F3	WASHER, Plate	4	
14	90176-06041	NUT, crown	4	
15	J39-7831H-00	STAY, sunroof cover 2	2	
16	98980-06030	SCREW, bind	4	
17	90201-065F3	WASHER, Plate	4	
18	90480-08162	GROMMET	2	
19	J39-78316-00	DAMPER	3	
20	J39-78312-00	SUPPORT, sun roof 1	1	
21	J39-78313-00	SUPPORT, sun roof 2	1	
22	J39-7831F-00	SUPPORT, roof 5	2	
23	97375-08030	BOLT	4	
24	92990-08600	WASHER, Plate	4	
25	90179-08512	NUT	4	
26	J39-7831A-00	SUPPORT, roof 3	1	
27	J39-7831E-00	SUPPORT, roof 4	1	
28	J39-7831U-00	PLATE, roof	6	


FIG. 27 SUN ROOF

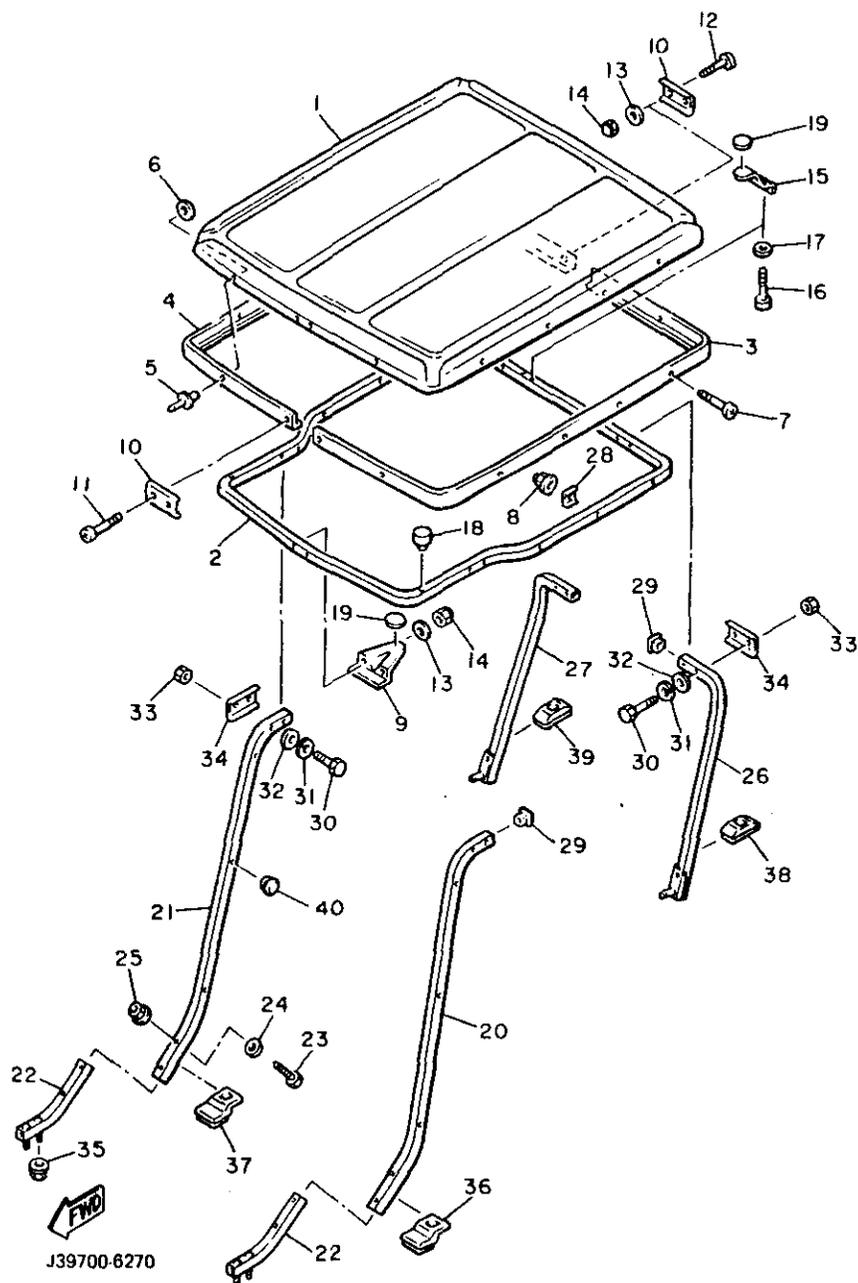

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J39-78349-00	CAP, suPPort roof	4	
30	97325-06055	BOLT	8	
31	92990-06100	WASHER, sPring	8	
32	92990-06600	WASHER, Plate	8	
33	90179-06511	NUT	8	
34	J39-7831L-00	REINFORCEMENT, roof suPPort 1	4	
35	95702-08500	NUT, flange	2	
36	J39-7832F-00	GROMMET, roof suPPort 1	1	
37	J39-7832G-00	GROMMET, roof suPPort 2	1	
38	J39-7832H-00	GROMMET, roof suPPort 3	1	
39	J39-7833H-00	GROMMET, roof suPPort 4	1	
40	90338-07043	PLUG	12	

D15


FIG. 28 CARRIER

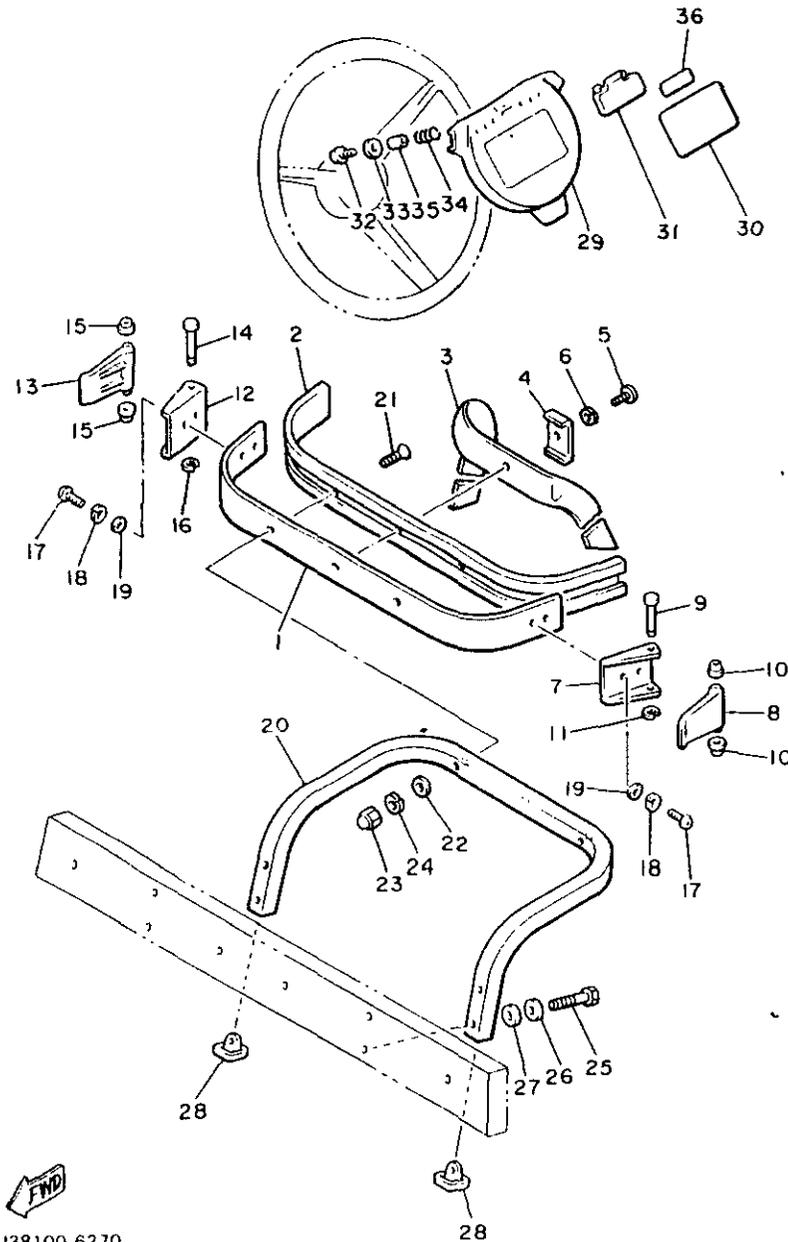

J38100-6270

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-78351-00	SUPPORT, bag upper	1	
2	J38-78356-00	PAD, bag support	1	
3	J38-78355-00	BAND	1	
4	J38-78367-00	PLATE, anchor	1	
5	98980-06016	SCREW, bind	1	
6	92990-06100	WASHER, spring	1	
7	J17-78157-00	BASE, lock	1	
8	J17-78368-00	LEVER, lock	1	
9	J17-78369-00	PIN, lever	1	
10	90386-06108	BUSH	2	
11	99080-05600	CIRCLIP	1	
12	J17-78157-00	BASE, lock	1	
13	J17-78368-00	LEVER, lock	1	
14	J17-78369-00	PIN, lever	1	
15	90386-06108	BUSH	2	
16	99080-05600	CIRCLIP	1	
17	92580-06010	SCREW, Pan head	4	
18	92990-06100	WASHER, spring	4	
19	92990-06200	WASHER, plain	4	
20	J38-78352-00	SUPPORT, bag lower 1	1	
21	92701-08040	SCREW, flat head	2	
22	90202-08022	WASHER, plate	2	
23	95380-08800	NUT, crown	2	
24	92990-08100	WASHER, spring	2	
25	90101-08649	BOLT	4	
26	90202-08022	WASHER, plate	4	
27	90202-08171	WASHER, plate	6	
28	J38-7835H-00	CAP, bag support lower	2	

FIG. 28 CARRIER

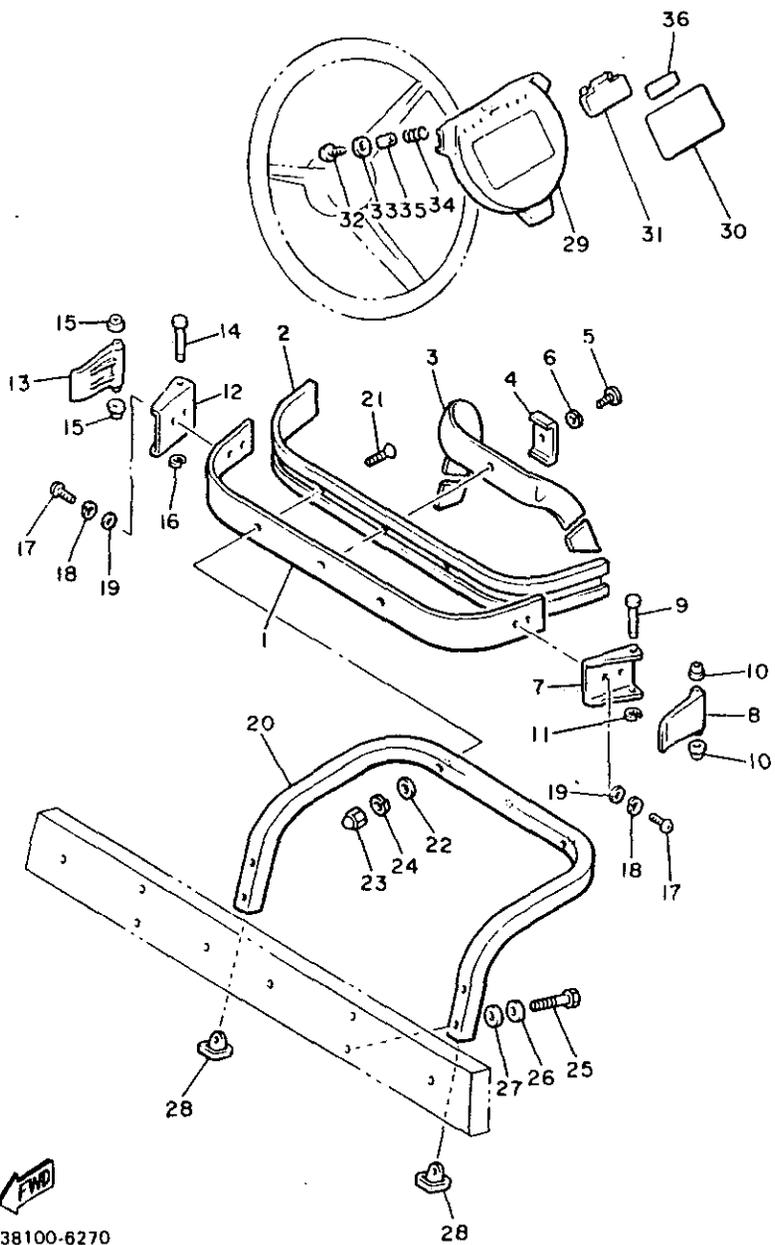


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J38-78357-00	HOLDER 1	1	
30	J38-77762-01	LABEL, warning 2	1	
31	J38-78358-01	HOLDER 2	1	
32	97706-40525	SCREW, tapping	2	
33	90201-044H9	WASHER, Plate	2	
34	90502-10013	SPRING, conical	2	
35	90387-046N7	COLLAR	2	
36	J38-77763-00	LABEL, warning 3	1	

 J38100-6270

E3


FIG. 29 SEAT

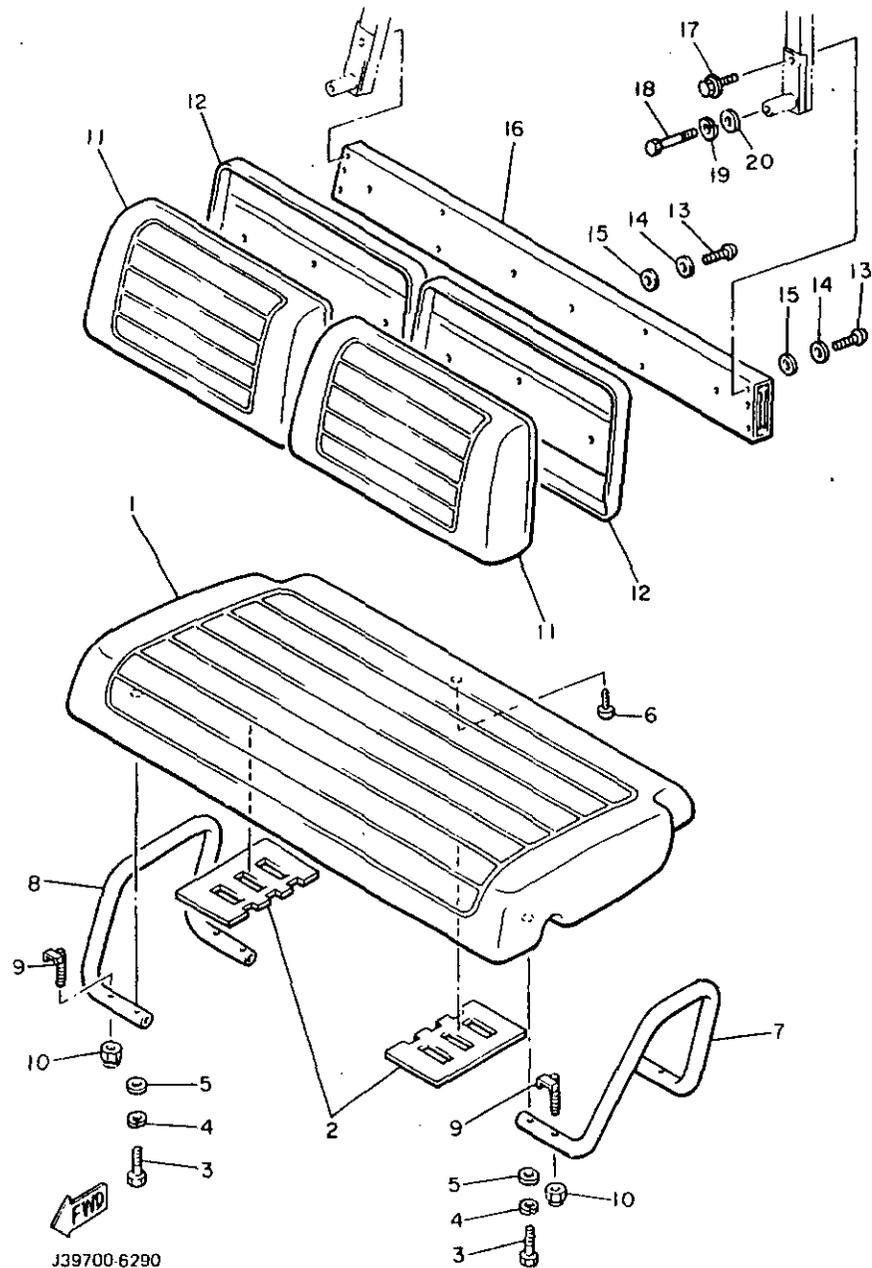

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-78401-01	SEAT SUB-ASSY, cushion	1	
2	J38-78419-00	PAD, seat Protector	2	
3	97302-08065	BOLT	4	
4	92902-08100	WASHER, spring	4	
5	92990-08600	WASHER, Plate	4	
6	97780-50516	SCREW, tapping	1	
7	J38-78361-00	ARM REST 1	1	
8	J38-78362-00	ARM REST 2	1	
9	J38-78384-00	BOLT	4	
10	90185-08106	NUT, self-locking	4	
11	J38-78402-00	SEAT SUB ASSY, back	2	
12	J38-78413-00	COVER, seat back	2	
13	98980-06045	SCREW, blind	4	
14	90201-065F3	WASHER, Plate	4	
15	90202-06170	WASHER, Plate	4	
16	J38-78423-00	SUPPORT, seat back	1	
17	91022-08040	BOLT, flange	2	
18	97323-08075	BOLT	2	
19	92902-08100	WASHER, spring	2	
20	92990-08600	WASHER, Plate	2	

E4

FIG. 30 STARTING MOTOR

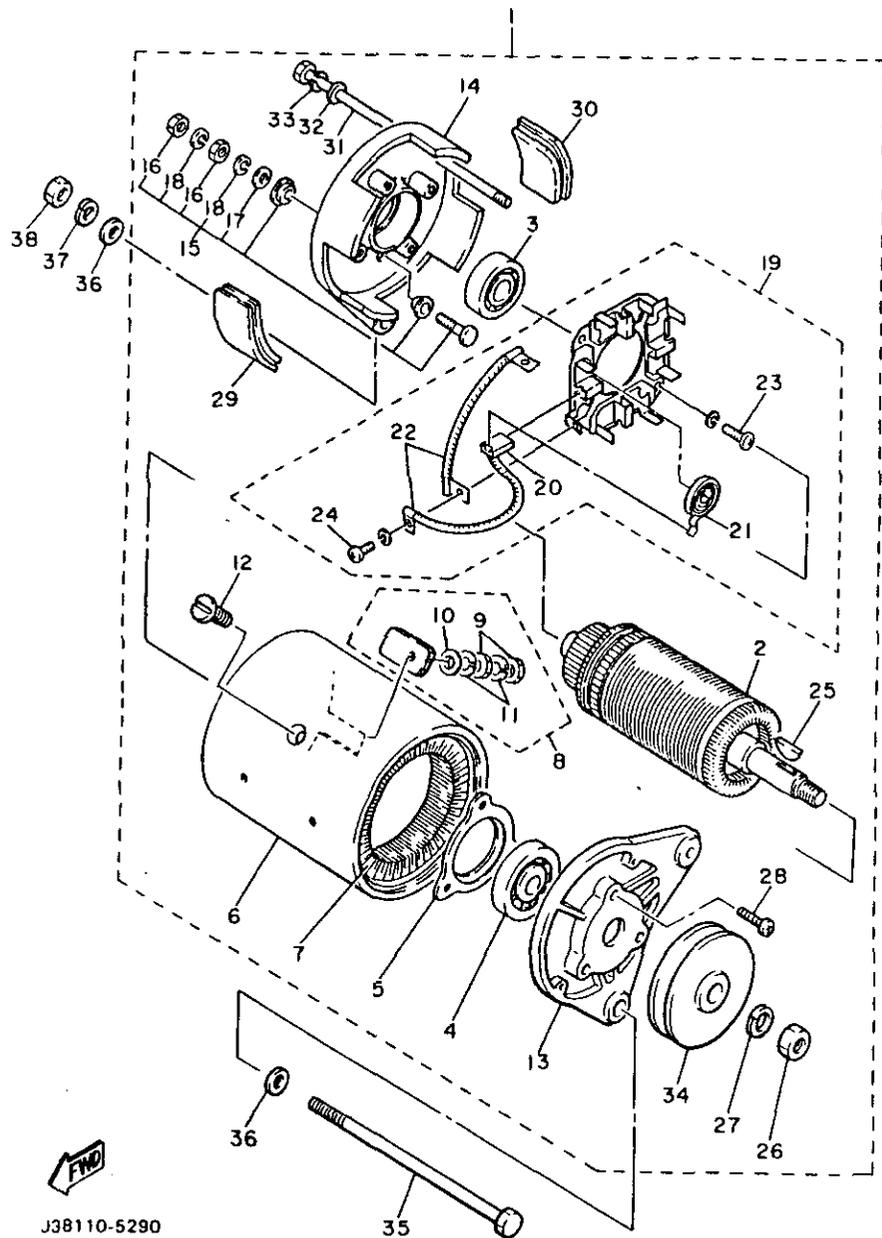


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-81100-10	STARTER GENERATOR ASSY	1	
2	J10-81150-10	•ARMATURE ASSY	1	
3	J10-81157-10	•BEARING 1 (6202 SD)	1	
4	J10-81158-10	•BEARING 2 (6203 SD)	1	
5	J10-81159-10	•HOLDER, bearing	1	
6	J38-81110-10	•STATOR ASSY	1	
7	J38-81160-10	•FIELD COIL ASSY	1	
8	J10-81148-10	•SCREW 4	2	
9	95302-06600	••NUT	4	
10	92990-06600	••WASHER, Plate	2	
11	92990-06100	••WASHER, sPring	4	
12	J10-81146-10	•SCREW 2	4	
13	J38-81165-10	•BRACKET, starter Generator 1	1	
14	J10-81166-10	•BRACKET, starter Generator 2	1	
15	J10-81147-10	•SCREW 3	2	
16	95302-06600	••NUT	4	
17	92990-06600	••WASHER, Plate	2	
18	92990-06100	••WASHER, sPring	4	
19	J38-81119-10	•BRUSH HOLDER ASSY	1	
20	J38-81111-10	••BRUSH	4	
21	J10-81113-10	••SPRING, brush	4	
22	J10-81115-10	••WIRE, lead	2	
23	98501-05016	••SCREW, Pan head	2	
24	98503-04010	••SCREW, Pan head	4	
25	J38-81163-10	•KEY	1	
26	95302-14600	•NUT	1	
27	92901-14100	•WASHER, sPring	1	
28	98501-05018	•SCREW, Pan head	3	

J38110-5290

E5


FIG. 30 STARTING MOTOR

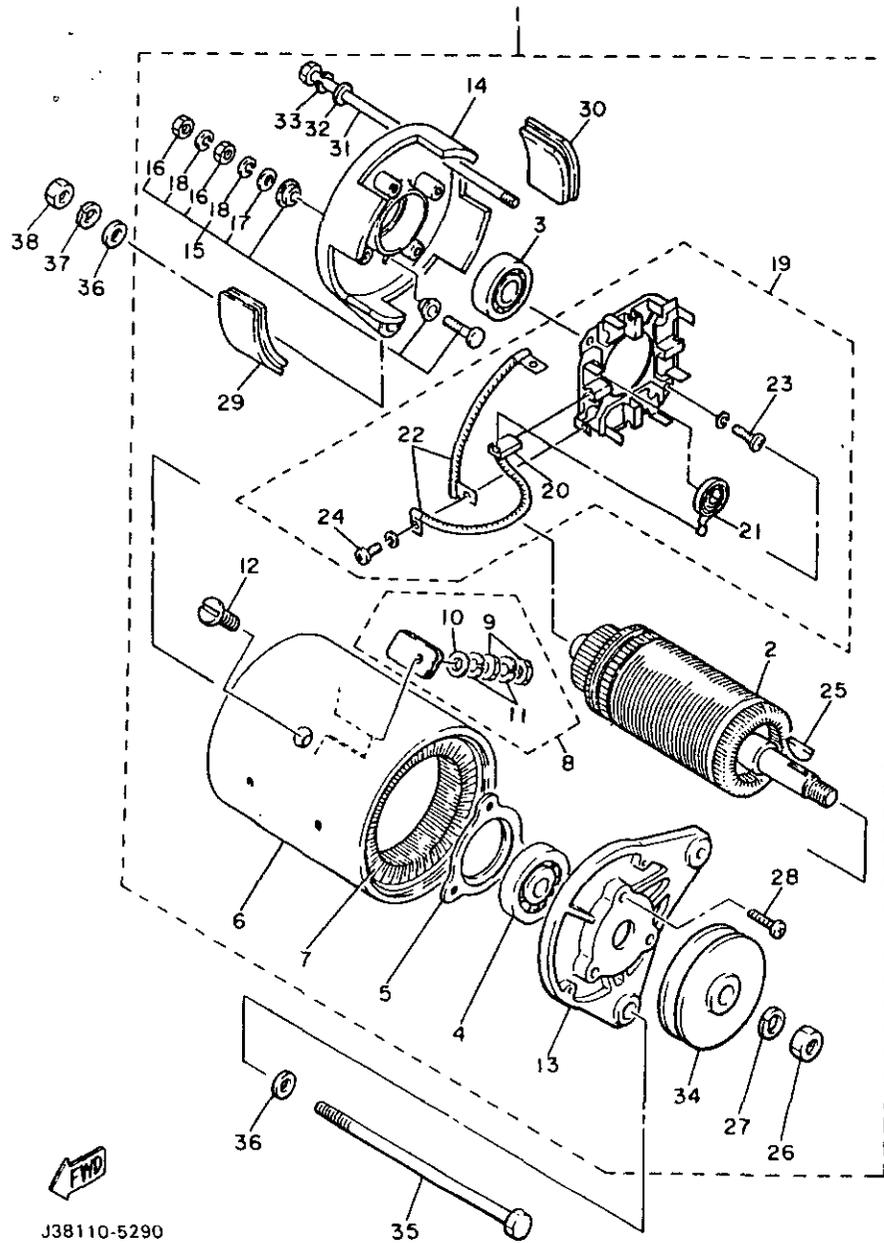

J38110-5290

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	J10-81129-10	•COVER, brush	3	
30	J10-81139-10	•COVER, brush 2	1	
31	J10-81145-10	•SCREW 1	2	
32	92990-06600	•WASHER, Plate	2	
33	92990-06100	•WASHER, sPring	2	
34	J38-81161-10	•PULLEY	1	
35	90101-12545	BOLT	1	
36	92902-12600	WASHER, Plate	2	
37	92902-12100	WASHER, sPring	1	
38	95302-12600	NUT	1	


FIG. 31 ELECTRICAL 1

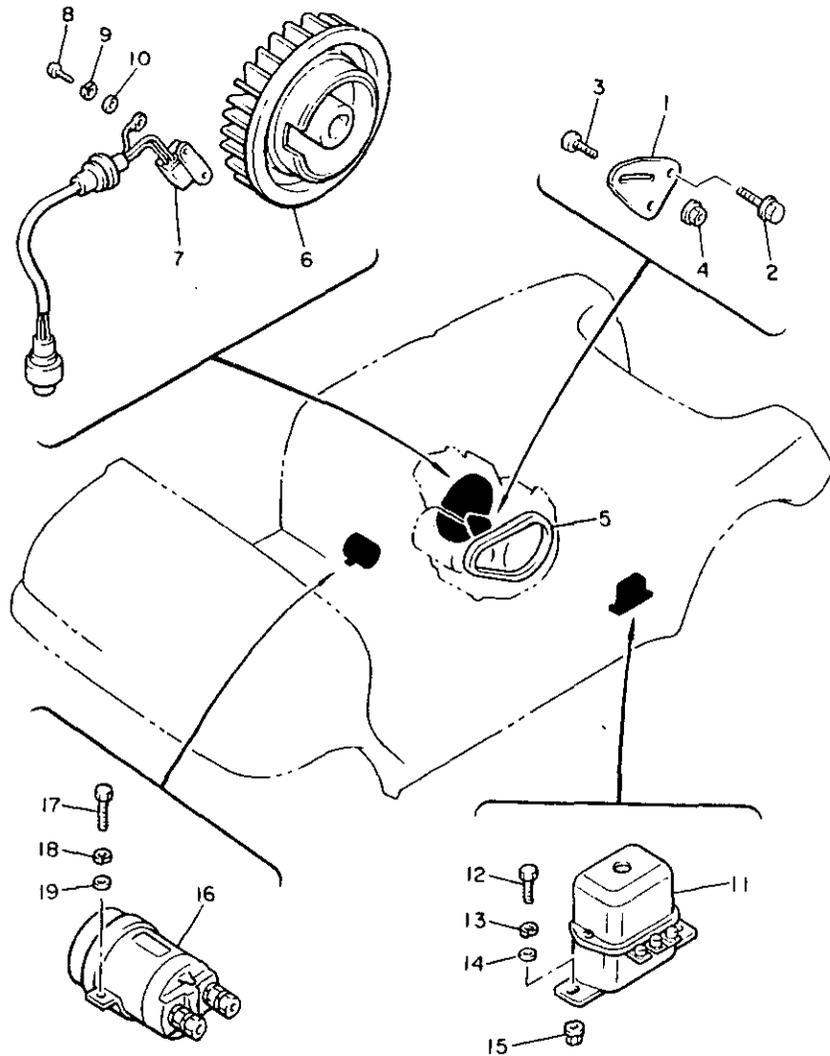

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J38-81170-00	TENSIONER ASSY	1	
2	95822-08025	BOLT, flange	2	
3	90109-087A5	BOLT	1	
4	95702-08500	NUT, flange	1	
5	J38-81173-00	BELT	1	
6	J38-81350-20	ROTOR ASSY	1	
7	J38-85580-20	COIL, Pulser	1	
8	98501-05016	SCREW, Pan head	2	
9	92990-05100	WASHER, sPring	2	
10	92901-05600	WASHER, Plate	2	
11	J10-81910-10	VOLTAGE REGULATOR ASSY	1	
12	97002-06016	BOLT	2	
13	92990-06100	WASHER, sPring	2	
14	92990-06600	WASHER, Plate	2	
15	95702-06600	NUT, with washer	2	
16	J38-81950-00	RELAY ASSY	1	
17	97002-06020	BOLT	2	
18	92990-06100	WASHER, sPring	2	
19	92990-06600	WASHER, Plate	2	


J38100-6300

FIG. 32 ELECTRICAL 2

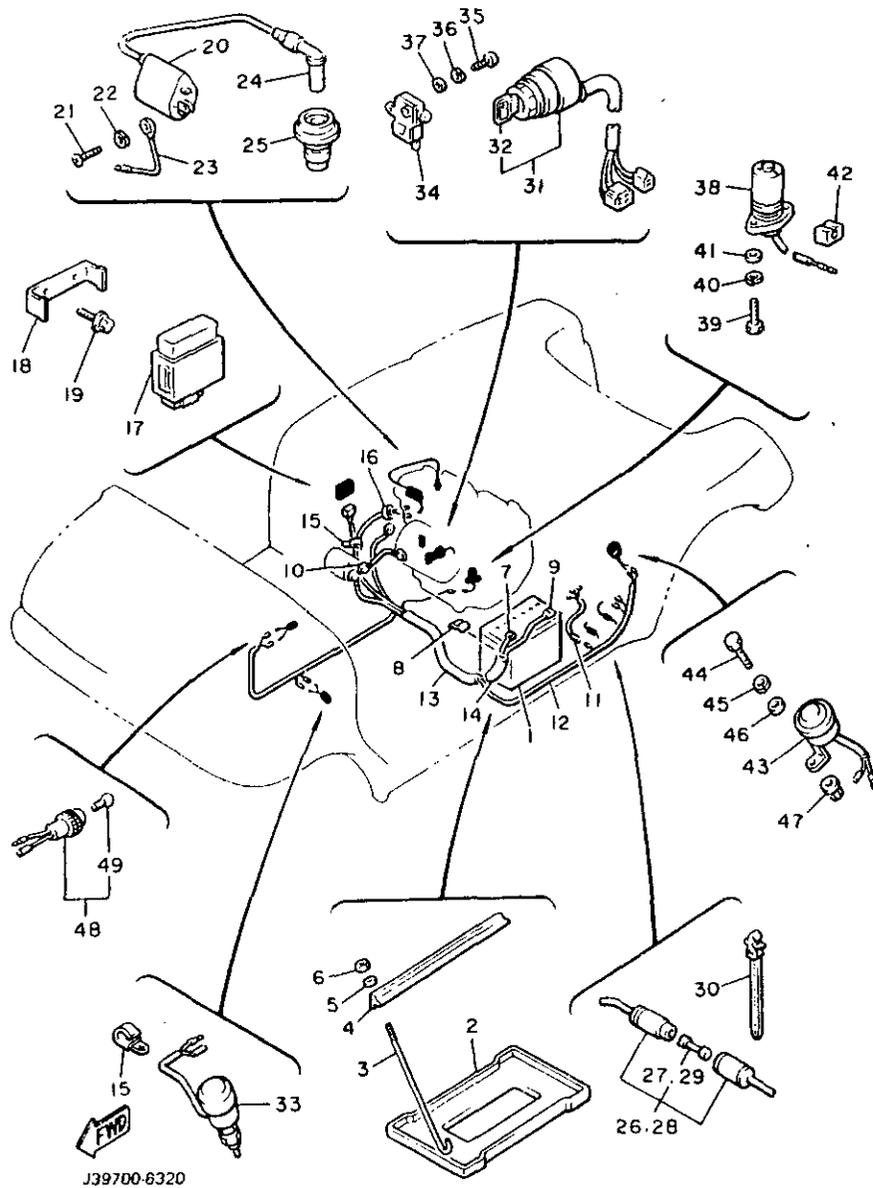


REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J16-82110-70	BATTERY ASSY	1	
2	J17-82122-00	SEAT, battery	1	
3	J17-82133-00	SCREW, fitting	2	
4	J17-82136-00	PLATE, battery fitting	1	
5	92990-06200	WASHER, Plain	2	
6	95702-06300	NUT, nylon	2	
7	J38-82115-00	WIRE, Plus lead	1	
8	881-82361-00	CLAMP, cord	1	
9	J38-82116-00	WIRE, minus lead	1	
10	J38-82117-00	WIRE, lead	1	
11	J38-82105-00	WIRE HARNESS	1	
12	J38-82590-20	WIRE HARNESS ASSY	1	
13	J38-87196-00	TUBE 1	1	
14	J38-87197-00	TUBE 2	1	
15	90465-06038	CLAMP	2	
16	90464-23041	CLAMP	1	
17	J38-82305-20	IGNITOR UNIT ASSY	1	
18	J38-8553A-00	STAY UNIT	1	
19	95802-06010	BOLT, flange	2	
20	J38-82310-20	IGNITION COIL ASSY	1	
21	98501-05020	SCREW, Pan head	2	
22	92990-05100	WASHER, Spring	2	
23	J38-82318-00	WIRE, sub-lead	1	
24	8K1-82370-20	PLUG CAP ASSY	1	
25	J38-82372-00	SEAL, Plug cap	1	
26	1E6-82150-00	FUSE HOLDER ASSY	1	
27	1E6-82151-00	FUSE (10A)	2	
28	1E6-82150-00	FUSE HOLDER ASSY	1	

FIG. 32 ELECTRICAL 2

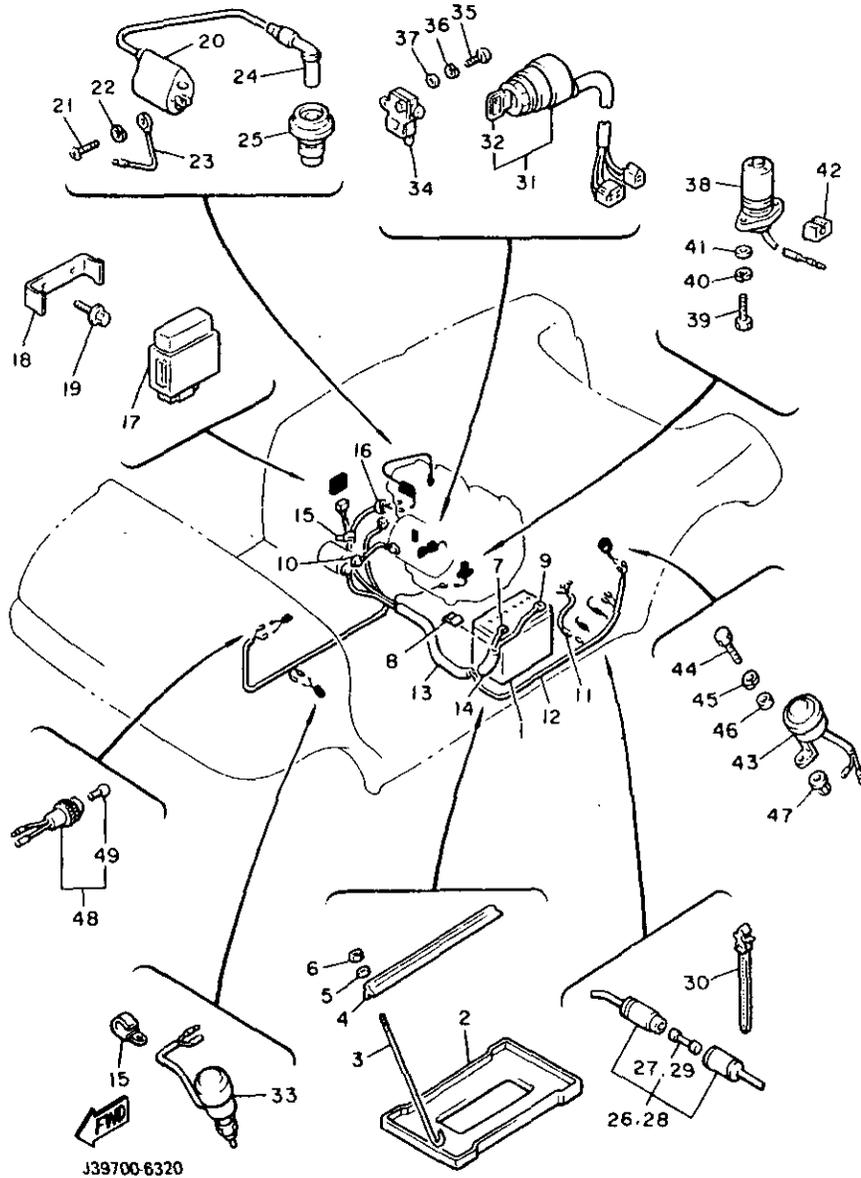

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
29	1E6-82151-00	•FUSE (10A)	2	
30	90464-12036	CLAMP	2	
31	J38-82510-00	MAIN SWITCH ASSY	1	
32	J17-82511-20	•KEY, main switch	2	
33	J41-82550-00	STOP SWITCH ASSY	1	
34	J38-82617-00	SWITCH	1	
35	98511-04025	SCREW, Pan head	1	
36	92902-04100	WASHER, sPring	1	
37	92901-04600	WASHER, Plate	1	
38	J38-85720-00	OIL LEVEL GAUGE ASSY	1	
39	97302-06020	BOLT	2	
40	92990-06100	WASHER, sPring	2	
41	92990-06600	WASHER, plate	2	
42	J38-82598-00	GROMMET	1	
43	J10-83383-02	BUZZER	1	
44	97301-06016	BOLT	1	
45	92990-06100	WASHER, sPring	1	
46	92990-06600	WASHER, plate	1	
47	95702-06600	NUT, with washer	1	
48	70R-83530-00	PILOT LIGHT ASSY	1	
49	123-83516-21	•BULB (12V-3.4W)	1	

FIG. 33 ALTERNATE

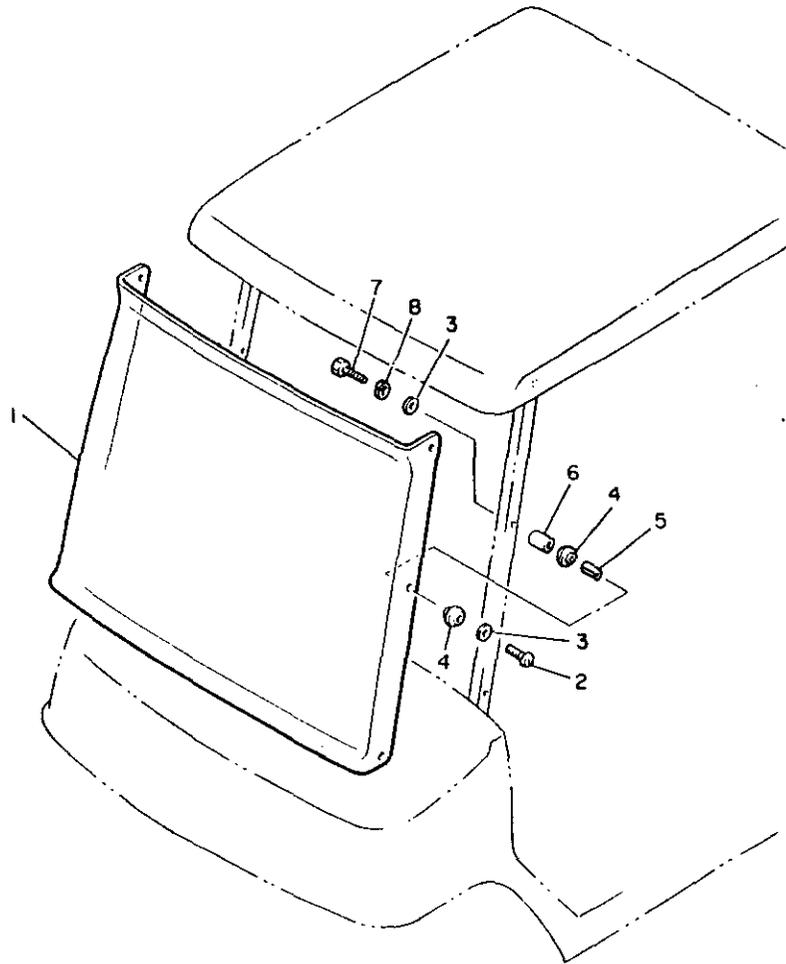

REF. NO.	PART NO.	DESCRIPTION	Q'TY	REMARKS
1	J40-77211-00	WINDSHIELD	1	
2	92580-06030	SCREW, Pan head	6	
3	90201-06697	WASHER, Plate	12	
4	J40-77237-01	GROMMET	12	
5	90387-066N6	COLLAR	6	
6	J40-77217-00	NUT, wind shield	6	
7	97390-06035	BOLT	6	
8	92990-06100	WASHER, sPring	6	



J39700-6330

E10

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.	PART NO.	GRID NO.
J38-W2511-00	C-2	J38-13455-00	B-10	J38-15363-00	B-10
J17-W2561-00	C-6	J38-13556-00	B-6	J38-15411-00	B-10
J38-Y1111-00	B-2	J38-13557-00	B-6	J38-15451-00	B-10
J38-Y1165-00	B-3	J38-13596-00	B-6	J17-17688-00	C-14
J38-Y2210-00	B-13	J38-14101-00	B-8	J38-2141A-00	B-12
J38-11116-00	B-2	J10-14122-00	B-8	J38-21411-00	B-12
J38-11166-00	B-2	J38-14133-00	B-8	J38-21419-01	B-12
J38-11181-00	B-2	J38-14141-00	B-8	J38-21486-00	B-12
J38-11191-00	B-2	620-14142-67	B-8	J38-21488-00	B-12
J38-11193-00	B-2	620-14142-72	B-8	J10-21773-00	C-5
J38-11355-00	B-11	J38-14150-00	B-8	J38-2211E-00	B-13
J38-11400-00	B-3	7R1-14162-00	B-8	J38-2211G-00	B-13
J38-11496-00	B-3	796-14184-00	B-8	J10-22123-00	B-13
J38-11500-00	B-3	J38-14185-00	B-8	J38-22128-00	B-13
J38-11531-00	B-3	J38-14186-00	B-8	J17-2214F-00	B-12
J38-11610-00	B-3	127-14198-00	B-8	J17-2217J-00	B-12
J38-11610-10	B-3	75G-14211-00	B-8	J38-22210-00	B-13
J38-11610-20	B-3	620-14212-00	B-8	J38-22501-00	B-14
J38-11631-00-A0	B-3	3G2-1423E-41	B-8	J38-22571-01	B-14
2F1-11633-00	B-3	3G2-1423E-42	B-8	J38-22572-01	B-14
J38-11635-00	B-3	J38-14243-00	B-8	J38-22592-00	B-14
J38-11636-00	B-3	J38-14291-00	B-8	J38-22593-00	B-14
J38-11654-00	B-3	J38-14388-00	B-10	J38-23350-00	C-2
J38-11656-00	B-3	J38-1441F-00	B-6	J10-23444-00	C-3
J38-11656-10	B-3	J38-14410-00	B-6	J10-23459-00	C-3
J38-11656-20	B-3	J38-14412-00	B-6	J38-23462-00	C-3
J38-11657-00	B-3	J38-14416-00	B-6	J38-23507-00	B-15
J38-12111-00	B-4	J10-14417-00	B-6	J38-23508-00	B-15
J38-12117-00	B-4	J38-14419-00	B-6	J38-23511-00	B-15
4G0-12118-00	B-4	J10-14436-00	B-6	J38-23512-00	B-15
5H0-12119-00	B-4	J38-14450-00	B-6	J38-23516-00	B-15
J38-12121-00	B-4	J38-14452-00	B-6	J38-23521-00	B-15
J38-12151-00	B-4	J38-14453-00	B-6	J38-23526-00	B-15
J38-12152-00	B-4	J38-1446A-00	B-6	J38-23527-00	B-15
J38-12153-00	B-4	J38-14479-00	B-6	J38-23528-00	B-15
J38-12154-00	B-4	J38-14484-00	B-6	J38-23811-00	C-3
J38-12156-00	B-4	J38-14581-00	B-8	J38-23814-00	C-3
J38-12159-00	B-4	J10-14597-00	B-8	J38-23816-00	C-3
J38-12161-00	B-4	J38-14613-00	B-9	J38-23818-00	C-3
J38-12171-00	B-4	J38-14710-00	B-9	J38-23826-01	C-3
J38-12219-00	B-4	J38-14738-00	B-9	J38-23831-00	C-3
J38-12621-00	B-5	J38-14771-00	B-9	J38-23837-00	C-3
J38-12631-00	B-5	J38-15100-01	B-10	J10-23838-00	C-3
J38-12640-00	B-5	J38-15112-00	B-10	J10-23840-00	C-3
J38-12651-00	B-5	J38-15123-00	B-10	J38-23841-00	C-3
J38-12652-00	B-5	J38-15148-00	B-10	J38-23845-00	C-3
J38-13115-00	B-10	J38-15155-00	B-10	J38-23876-00	C-3
J38-13161-00	B-10	J38-15361-00	B-10		

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.	PART NO.	GRID NO.
J10-23877-00	C-3	J10-27286-00	C-9	J38-46414-00	D-2
J38-24111-00	C-5	J17-27853-00	C-11	J38-46415-00	D-2
J38-24129-00	C-5	J14-27871-00	C-11	J38-46417-02	D-2
J38-24161-00	D-7	J38-27872-00	C-11	J38-46421-01	D-2
J38-24311-00	C-5	J38-27874-00	C-11	J38-46510-00	D-4
807-24376-00	B-10	J10-27911-00	C-12	J38-46520-00	D-4
J38-24410-00	C-5	J10-27912-00	C-12	J17-46521-00	D-4
J24-24460-00	C-5	J10-27913-00	C-12	J38-46540-00	D-4
J38-24461-00	B-2	J38-27921-00	C-12	J38-46550-00	D-4
8R4-24560-00	C-5	J10-27922-00	C-12	835-47559-00	C-15
8F3-24564-00	C-5	J10-27927-00	C-12	J40-77211-00	E-10
J10-24612-00	C-5	J38-27951-00	C-12	J40-77217-00	E-10
J24-24620-01	C-5	J38-27959-00	C-12	J40-77237-01	E-10
J39-25100-00	C-2	J38-27981-00	C-11	J41-77458-00	D-9
J11-25102-00	C-2	J38-27982-00	C-12	J38-77511-01	D-5
	D-4	J38-46205-00	C-13	J17-77525-00	D-5
J17-25118-00	C-2	J38-46210-00	C-13	J38-77741-00	D-9
J39-25300-00	D-4	J38-46220-00	C-13	J38-77742-00	D-9
J17-25330-00	C-9	J38-46231-00	C-13	J38-77762-01	E-3
J17-25340-00	C-9	J38-46236-00	C-13	J38-77763-00	E-3
J17-25670-00	C-6	J38-46237-00	C-13	J38-77764-01	D-10
J17-25672-00	C-6	J38-46241-00	C-13	J38-77767-00	D-8
J17-25673-00	C-7	J38-46249-00	C-13	J38-77768-00	D-8
J17-25679-00	C-6	J38-46251-00	C-13	J38-78107-02	D-5
J10-25681-00	C-7	J38-46253-00	C-13	J38-7811A-01	D-7
J20-25685-00	C-7	J38-46260-00	C-14	J38-7811E-00	D-7
J38-26311-00	C-11	J38-46270-00	C-14	J38-7811F-00	D-7
J38-26312-00	B-7	J38-46284-00	C-14	J38-7811G-00	D-7
J38-26331-00	B-7	J38-46311-00	C-15	J38-7811H-00	D-7
J38-26341-00	C-7	J38-46312-00	C-15	J38-7811K-00	D-8
J38-26351-00	C-7	J38-46319-00	C-15	J38-7811L-00	D-7
J38-27204-00	C-9	J38-46321-01	C-15	J38-7811M-00	D-8
J38-27205-00	C-9	J38-4633A-00	D-2	J39-78115-02	D-7
J17-27206-00	C-9	J38-46331-01	C-15	J38-78116-01	D-7
J17-27208-00	C-9	J38-46338-00	D-2	J38-7812E-00	D-8
J17-27209-00	C-9	J38-46348-00	D-2	J38-7812F-00	D-8
J10-27211-00	C-6	J38-46351-00	C-15	J38-78121-00	D-9
J17-27221-00	C-6	J38-46356-00	D-2	J38-7813A-00	D-12
J17-27228-00	C-7	J38-4636A-00	D-2	J38-7813E-00	D-12
J17-27231-00	C-6	J38-46361-01	D-2	J39-7813F-02	D-12
J17-27232-00	C-6	J38-46362-00	D-2	J39-7813G-02	D-12
J17-27238-00	C-9	J38-46363-00	D-2	J38-7814A-00	D-10
J17-27245-00	C-7	J38-46371-01	D-3	J38-7814E-00	D-12
J17-27246-00	C-7	J38-46381-00	D-3	J38-7814F-00	D-9
J17-27250-00	C-6	J38-46382-00	D-3	J38-7814G-01	D-12
J17-27258-00	C-9	J38-46383-00	D-3	J38-7814H-01	D-12
J10-27281-00	C-9	J38-46384-00	D-2	J38-7814L-01	D-12
J10-27282-00	C-9	J38-46411-01	D-2	J38-7814N-00	D-9

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.	PART NO.	GRID NO.
J38-78141-01	D-9	J38-78253-00	D-9	J38-78361-00	E-4
J38-78142-01	D-10	J38-78254-00	D-9	J38-78362-00	E-4
J38-78143-00	D-9	J38-78255-00	D-10	J38-78367-00	E-2
J38-78144-00	D-9	J38-78256-00	D-10	J17-78368-00	E-2
J38-78145-00	D-8	J38-78257-00	D-10	J17-78369-00	E-2
J38-7815A-00	D-9	J38-78258-00	D-10	J38-78384-00	E-4
J38-7815E-00	D-12	J38-78259-00	D-13	J38-78401-01	E-4
J38-7815F-00	D-10	J38-7826A-00	D-10	J38-78402-00	E-4
J38-7815H-00	D-12	J38-7826E-00	D-10	J38-78413-00	E-4
J17-78157-00	E-2	J38-7826F-00	D-10	J38-78419-00	E-4
J38-78162-00	D-5	J38-7826G-00	D-11	J38-78423-00	E-4
J38-78163-00	D-5	J38-7826I-00	D-10	J38-81100-10	E-5
J38-78167-00	D-5	J38-78262-00	D-10	J38-81110-10	E-5
J38-78168-00	D-5	J38-78271-02	D-12	J38-81111-10	E-5
J38-78172-00	D-5	J38-78272-00	D-10	J10-81113-10	E-5
J38-78174-01	D-5	J38-78273-00	D-8	J10-81115-10	E-5
J38-78175-01	D-5	J38-78276-00	D-10	J38-81119-10	E-5
J38-78178-00	D-5	J39-7831A-00	D-14	J10-81129-10	E-6
J38-78179-01	D-5	J39-7831E-00	D-14	J10-81139-10	E-6
J38-7818A-00	D-6	J39-7831F-00	D-14	J10-81145-10	E-6
J38-7818E-00	D-6	J39-7831G-00	D-14	J10-81146-10	E-5
J38-7818F-00	D-6	J39-7831H-00	D-14	J10-81147-10	E-5
J38-78183-00	D-6	J39-7831J-00	D-14	J10-81148-10	E-5
J38-78184-00	D-6	J39-7831K-00	D-14	J10-81150-10	E-5
J38-78187-01	D-13	J39-7831L-00	D-15	J10-81157-10	E-5
J38-78191-01	D-13	J39-7831U-00	D-14	J10-81158-10	E-5
J38-78192-01	D-13	J39-7831I-00	D-14	J10-81159-10	E-5
J38-78203-00	D-12	J39-78312-00	D-14	J38-81160-10	E-5
J38-78205-00	D-12	J39-78313-00	D-14	J38-81161-10	E-6
J38-78215-00	D-13	J39-78314-00	D-14	J38-81163-10	E-5
J38-78221-00	D-12	J39-78315-00	D-14	J38-81165-10	E-5
J38-78229-00	D-12	J39-78316-00	D-14	J10-81166-10	E-5
J39-78231-01	D-7	J39-7832F-00	D-15	J38-81170-00	E-7
J39-78232-01	D-7	J39-7832G-00	D-15	J38-81173-00	E-7
J38-78234-01	D-12	J39-7832H-00	D-15	J38-81350-20	E-7
J38-78236-01	D-7	J39-7833H-00	D-15	J10-81910-10	E-7
J38-78241-00	D-10	J38-7834A-00	D-8	J38-81950-00	E-7
J38-78243-01	D-11	J39-78349-00	D-15	J38-82105-00	E-8
J38-78244-01	D-11	J38-7835A-01	D-7	J16-82110-70	E-8
J38-7825A-00	D-13	J38-7835E-03	D-8	J38-82115-00	E-8
J38-7825F-00	D-13	J38-7835G-01	D-8	J38-82116-00	E-8
J38-7825G-00	D-13	J38-7835H-00	E-2	J38-82117-00	E-8
J38-7825H-00	B-14	J38-7835I-00	E-2	J17-82122-00	E-8
J38-7825J-00	D-10	J38-78352-00	E-2	J17-82133-00	E-8
J38-7825K-00	D-10	J38-78355-00	E-2	J17-82136-00	E-8
J38-7825L-00	D-10	J38-78356-00	E-2	1E6-82150-00	E-8
J38-78251-00	D-9	J38-78357-00	E-3	1E6-82151-00	E-8
J38-78252-00	D-9	J38-78358-01	E-3		E-9

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.	PART NO.	GRID NO.
J38-82305-20	E-8	90170-10186	C-3	90201-114E6	B-7
J38-82310-20	E-8		C-4	90201-121H8	C-9
J38-82318-00	E-8	90170-16182	B-3		C-10
861-82361-00	E-8	90176-05057	D-14	90201-121H9	C-9
8K1-82370-20	E-8	90176-06041	D-14		C-10
J38-82372-00	E-8	90179-06511	D-15	90201-12166	D-3
J38-82510-00	E-9	90179-08261	C-7	90201-123F2	C-7
J17-82511-20	E-9	90179-08327	B-3	90201-12474	D-3
J41-82550-00	E-9	90179-08378	C-6	90201-12588	C
J38-82590-20	E-8	90179-08512	D-14	90201-127J1	
J38-82598-00	E-9	90179-12262	C-2	90201-156J2	B-7
J38-82617-00	E-9		D-4	90201-17713	D-2
J10-83383-02	E-9	90183-05001	D-8	90201-201G9	B-3
123-83516-21	E-9	90183-06011	D-9	90201-20275	C-12
70R-83530-00	E-9	90183-06028	D-10	90201-20611	D-2
J38-8553A-00	E-8	90185-06098	B-6	90201-257J2	D-2
J38-85580-20	E-7	90185-08106	B-12	90202-06170	E-4
J38-85710-02	C-5		E-4	90202-06172	D-7
J38-85720-00	E-9	90185-10130	B-12	90202-07164	C-13
J38-87196-00	E-8		B-13	90202-08022	E-2
J38-87197-00	E-8		B-15	90202-08110	C-12
90101-08555	C-6		C-2	90202-08171	E-2
90101-08344	C-15	90185-12061	C-3	90202-20130	C-14
	D-2	90185-12093	C-14	90209-32271	C-2
90101-08649	E-2	90201-04325	B-5	90215-16252	C-3
90101-10447	C-7	90201-044H9	E-3	90249-07190	D-2
90101-12545	E-6	90201-046J3	D-7	90249-14129	C-7
90105-08390	D-2		D-14	90267-40054	B-14
90105-10357	C-2	90201-05033	D-5		D-9
90105-10359	B-13	90201-05556	D-8		D-10
90105-10360	B-15	90201-06049	D-8		D-12
90106-08040	C-11	90201-062G3	D-7	90267-40073	B-6
90109-06513	B-5	90201-064H0	C-6	90267-40077	D-5
90109-08657	C-9	90201-065F3	D-7		D-11
90109-08659	C-9		D-10	90267-40087	D-12
90109-08669	C-6		D-14	90267-40115	D-13
90109-087A5	E-7		E-4	90267-40127	B-13
90113-04050	C-13	90201-06697	D-8	90267-40129	D-11
90119-06097	B-6		D-9	90267-40131	D-9
90119-06108	D-13		E-10	90267-48040	B-7
90119-08119	B-9	90201-06778	B-12	90267-48051	D
90151-06039	D-7	90201-076J4	D-5	90267-48078	D-1
	D-8	90201-08730	D-12	90267-48086	D-8
	D-8	90201-08748	C-5		D-12
90151-06040	D-7	90201-10136	B-12	90267-48101	D-13
90152-04015	D-7	90201-104G8	C-7	90267-48132	D-6
90159-05117	B-10			90267-63047	D-7
90170-06128	B-4				D-10
90170-08024	C-3				

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.
90267-63047	D-11	90465-10129	B- 5
90267-63134	D-12	90465-10292	B-10
90269-06028	D- 5	90467-08017	B-11
90269-11042	D- 8		C- 5
90280-05013	B- 3	90467-10035	B-10
90280-05022	C-14	90467-11009	C- 5
90338-06169	D- 9	90467-11044	B- 2
90338-07043	D-15	90468-07179	B- 7
90338-17170	B-15	90468-08104	B-10
90340-14036	C-15	90468-10049	B- 7
90380-12051	C- 6		C-11
90380-12105	C- 7	90468-18008	D-12
90384-05163	C- 6	90468-60180	B-11
90384-10162	C- 6	90468-80181	B- 7
90384-12164	C- 6	90480-08162	D-14
90384-14080	C- 6	90480-12355	D- 8
	C-11	90480-13238	B- 6
90386-06108	E- 2	90480-14100	B- 6
90386-08141	C-12	90480-18277	B- 6
90386-15139	B-15	90501-10060	D- 2
90387-046N7	E- 3	90501-21133	B- 3
90387-066N6	E-10	90501-264A9	B- 4
90387-07390	B- 7	90502-10013	E- 3
90387-081R2	D-12	90506-12277	C- 7
90387-107F8	C- 6	90506-18374	D-12
90387-152M7	B- 3	90506-20281	C- 9
90387-21690	C-12	90506-26191	C- 9
90387-241M7	C- 2	90506-26282	C-11
90387-252M8	D- 2	90507-08037	D-12
90430-08119	C-15	90508-14548	C- 6
	D- 2	90508-16460	C-11
90430-13138	B-10	90508-23542	C- 6
90430-14043	C-15	90508-26557	C- 7
90445-09073	B-11	90508-40543	C- 7
90445-09085	C- 5	90508-40678	C-12
90445-09225	C- 5	90508-45679	C-14
90445-110E6	B-10	90560-05001	C-11
90445-11147	D-12	91022-08040	E- 4
90445-113E4	B-10	91316-06025	B- 2
90460-43279	B- 6	91401-25025	C-14
90460-53239	B- 6	91402-20012	D- 3
90461-08048	C-11	91402-25020	B-15
90461-08106	C-11		C- 2
90464-12036	E- 9		C- 4
90464-13066	B- 5	91490-20015	D- 9
90464-23041	E- 8	91490-25015	C- 8
90465-06038	E- 8	91490-30015	C- 7
90465-06101	C-15	91609-35028	B-15

PART NO.	GRID NO.	PART NO.	GRID NO.
91609-35028	C- 2		
	C-11		
91609-40020	D- 2		
91609-40040	D- 2		
91609-60028	B-15		
	C- 2		
	C-11		
91701-08018	C- 8		
91701-10022	C- 7		
91702-05010	B- 7		
91702-05012	C-11		
91702-06014	D- 3		
91702-06022	D- 2		
91790-06125	D- 9		
91810-09014	B- 4		
91812-16001	D- 2		
92501-06010	B- 8		
92501-06030	B- 6		
92502-06016	B- 5		
92580-06010	E- 2		
92580-06012	B- 9		
92580-06020	D- 8		
	D-10		
92580-06030	E-10		
92606-06014	D- 6		
92701-08040	E- 2		
92901-04600	E- 9		
92901-05100	C-13		
92901-05600	C- 7		
	E- 7		
92901-10100	B-12		
	C- 7		
	D- 4		
92901-14100	E- 5		
92901-16100	B- 3		
92902-04100	D-10		
	E- 9		
92902-08100	C- 5		
	C- 6		
	C- 7		
	C-10		
	C-12		
	C-15		
	D- 4		
	D- 5		
	E- 4		
92902-12100	E- 6		
92902-12200	C- 3		

NUMERICAL INDEX

PART NO.	GRID NO.	PART NO.	GRID NO.
92902-12600	E- 6	92990-08600	E- 4
92906-04200	D- 7	92990-10600	B-12
92906-05100	D- 5	93102-12224	D- 3
92906-08100	D- 5	93102-20309	C-14
92906-08600	D- 5	93102-22082	C- 3
	D- 6	93102-22189	C-15
92990-04200	B- 6	93102-25017	C-15
92990-05100	B- 8	93102-28348	C-13
	E- 7	93102-30083	C- 2
	E- 8	93102-30195	B-10
92990-06100	B- 6	93102-35191	B-10
	B- 8	93109-08008	C-12
	B- 9	93210-14104	C-11
	C- 6	93306-00510	C- 2
	C- 9	93306-00801	C-15
	C-10	93306-20324	C-15
	C-11	93306-20401	C- 2
	D- 8		C-15
	D- 9	93306-20541	C-15
	D-10	93306-30621	B-10
	D-15	93306-30709	B-10
	E- 2	93318-31507	B- 3
	E- 5	93332-00010	C- 3
	E- 6	93342-22502	C-12
	E- 7	93410-25017	C-15
	E- 9	93450-19052	B- 3
	E-10	93605-10090	B- 3
92990-06200	C- 6	93608-12063	B-10
	D- 2	93700-06004	C-13
	D- 7	93900-00014	C- 2
	E- 2		D- 4
	E- 8	94118-853H4	C- 2
92990-06600	B- 2	94118-853H5	D- 4
	B- 5	94701-00078	B- 2
	B- 6	95021-10040	B-12
	B- 9	95026-10020	B- 9
	D- 3	95301-08700	C- 7
	D- 9		C-11
	D-15	95302-06600	B-12
	E- 5		C- 6
	E- 6		C- 9
	E- 7		C-10
	E- 9		C-12
92990-08100	B- 9		E- 5
	D- 5	95302-06700	C- 6
92990-08200	C- 6		C-11
92990-08600	D- 5	95302-08600	C-15
	D-14	95302-10700	C- 3
			C- 4
		95302-12600	E- 6

PART NO.	GRID NO.	PART NO.	GRID NO.	PART NO.	GRID NO.
97301-06016	C-11	99001-08600	D- 3		
	E- 9	99002-09600	C- 7		
97302-06012	D- 9	99080-05600	E- 2		
97302-06020	D- 9	99510-12016	B- 2		
	E- 9		C-15		
97302-06025	C-11				
97302-08020	C- 7				
97302-08025	C- 5				
97302-08065	E- 4				
97302-10050	B-13				
97306-08016	D- 5				
97312-08025	D- 4				
97322-10020	D- 4				
97323-08075	C-15				
	E- 4				
97325-06055	D-15				
97326-08016	D- 5				
97326-08050	D- 5				
97375-08030	D-14				
97390-06035	E-10				
97395-06020	D- 8				
97706-40525	E- 3				
97780-50516	E- 4				
97780-50525	D- 8				
98501-04008	C-12				
98501-05008	B- 8				
	C-13				
98501-05016	E- 5				
	E- 7				
98501-05018	E- 5				
98501-05020	E- 8				
98503-04010	E- 5				
98506-05020	D- 5				
98511-04012	D-10				
98511-04025	E- 9				
98702-05008	B- 8				
98901-05008	C-13				
98902-06025	D-10				
98980-05030	D-14				
98980-06014	D-14				
98980-06016	D- 9				
	E- 2				
98980-06030	D-14				
98980-06035	D-14				
98980-06045	E- 4				
99001-04600	C- 7				
99001-06600	C-12				
99001-07600	B- 7				

M4