



**YAMAHA**

**G6-AM ( JR41 )**

18JR4-010J2

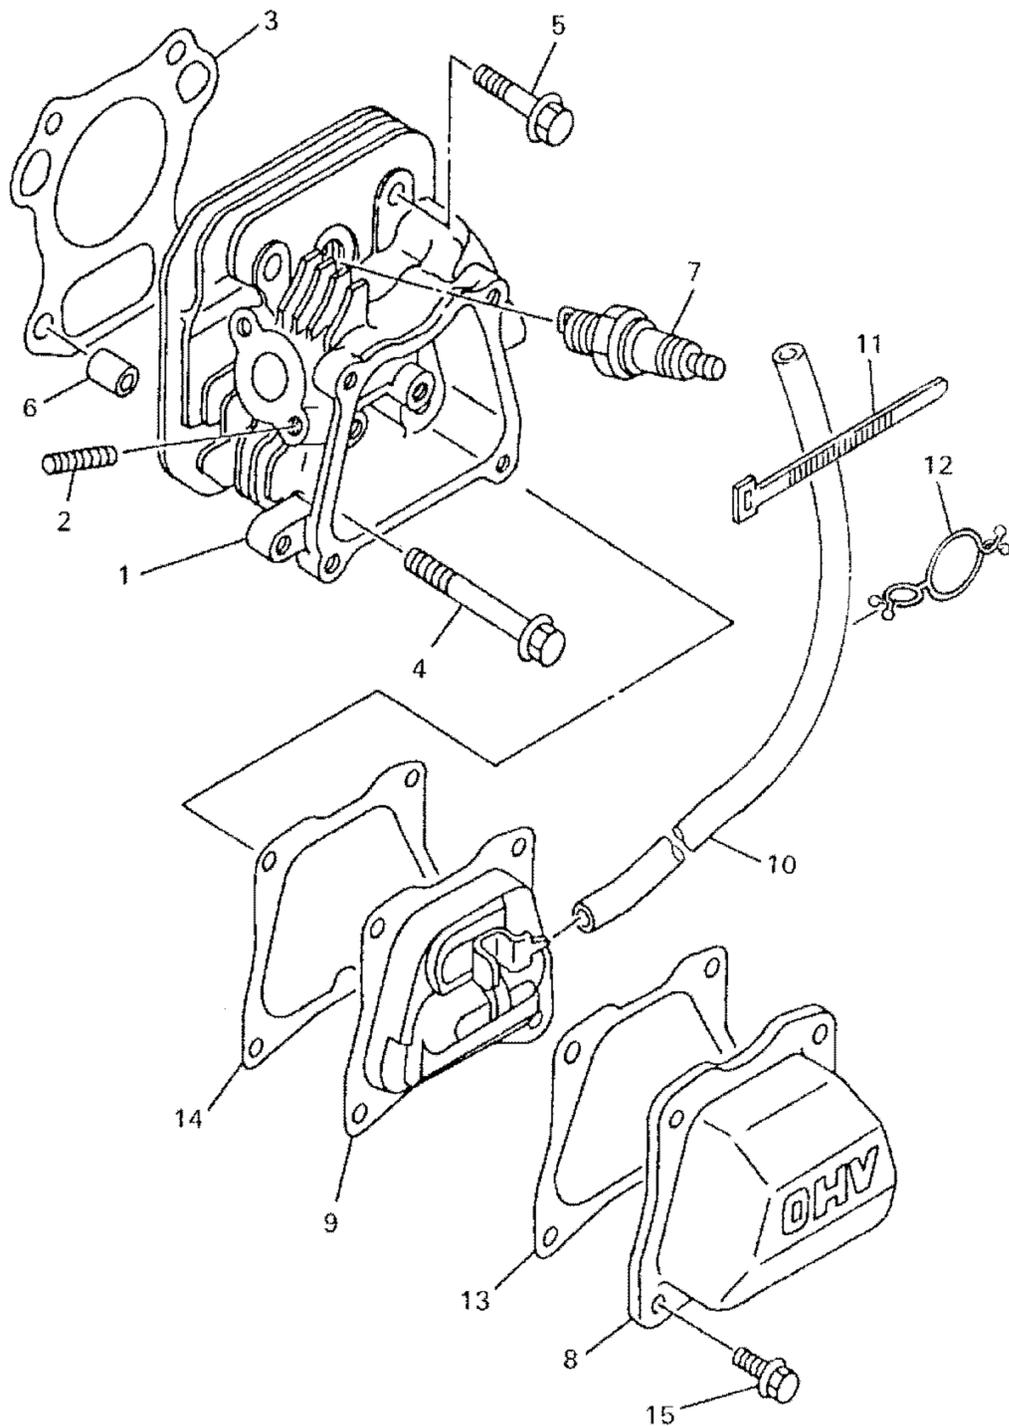


Fig. 1

Ref. No.	Part No.	Part Name		Remarks
1	7NH-11111-00	HEAD, CYLINDER 1	1	
2	50M-14651-00	BOLT, STUD	2	
3	7NH-11181-00	GASKET, CYLINDER HEAD 1	1	
4	95827-08065	BOLT, FLANGE	2	
5	95827-08045	BOLT, FLANGE	2	
<hr/>				
6	99530-10114	PIN, DOWEL	2	
7	94709-00348	PLUG, SPARK (NGK BPR2ES)	1	
8	7NJ-11191-00	COVER, CYLINDER HEAD 1	1	
9	7NJ-11160-00	BREATHER ASSY	1	
10	90445-130E3	HOSE (L470)	1	
<hr/>				
11	25G-83936-01	BAND, SWITCH CORD	1	
12	90464-27138	CLAMP	1	
13	7NJ-11169-00	GASKET, BREATHER COVER	1	
14	7NJ-11193-00	GASKET, HEAD COVER 1	1	
15	95827-06012	BOLT, FLANGE	4	
<hr/>				
<hr/>				
<hr/>				




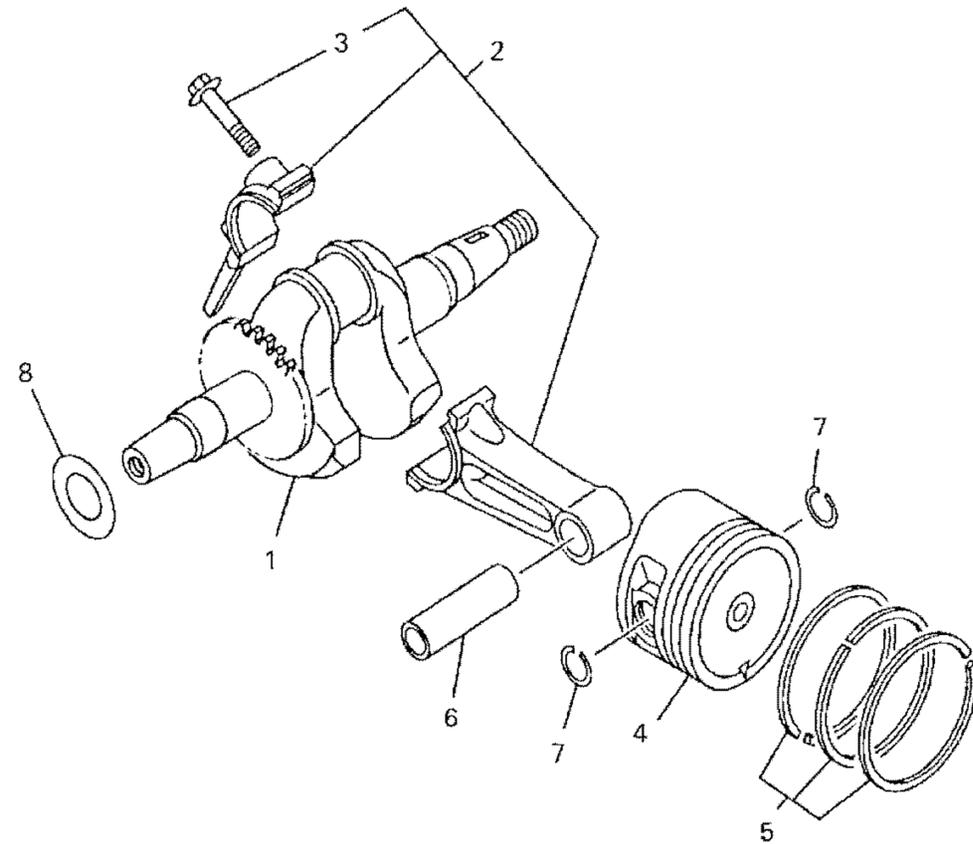


Fig. 2

Ref. No.	Part No.	Part Name	Remarks
1	JR4-11400-00	CRANKSHAFT ASSY	1
2	7NJ-11650-00	CONNECTING ROD ASSY	1
3	JA9-11654-01	BOLT, CONNECTING ROD	2
4	7NH-11631-00-98	PISTON (STD)	1 STD
	7NH-11635-00	.PISTON (0.25MM O/S)	1 AP
	7NH-11636-00	.PISTON (0.50MM O/S)	1 AP
5	7NH-11603-00	PISTON RING SET (STD)	1 STD
	7NH-11604-00	.PISTON RING SET (0.25MM O/S)	1 AP
	7NH-11605-00	.PISTON RING SET (0.50MM O/S)	1 AP
6	280-11633-00	PIN, PISTON	1
7	93450-17025	CIRCLIP	2
8	7G4-11561-00	.SHIM, CRANK 1 (T=0.1)	1 UR UN
	7G4-11561-10	.SHIM, CRANK 1 (T=0.2)	1 UR UN
	7G4-11561-20	.SHIM, CRANK 1 (T=0.3)	1 UR UN
	7G4-11561-30	SHIM, CRANK 1 (T=0.4)	1 UR UN



Fig. 3

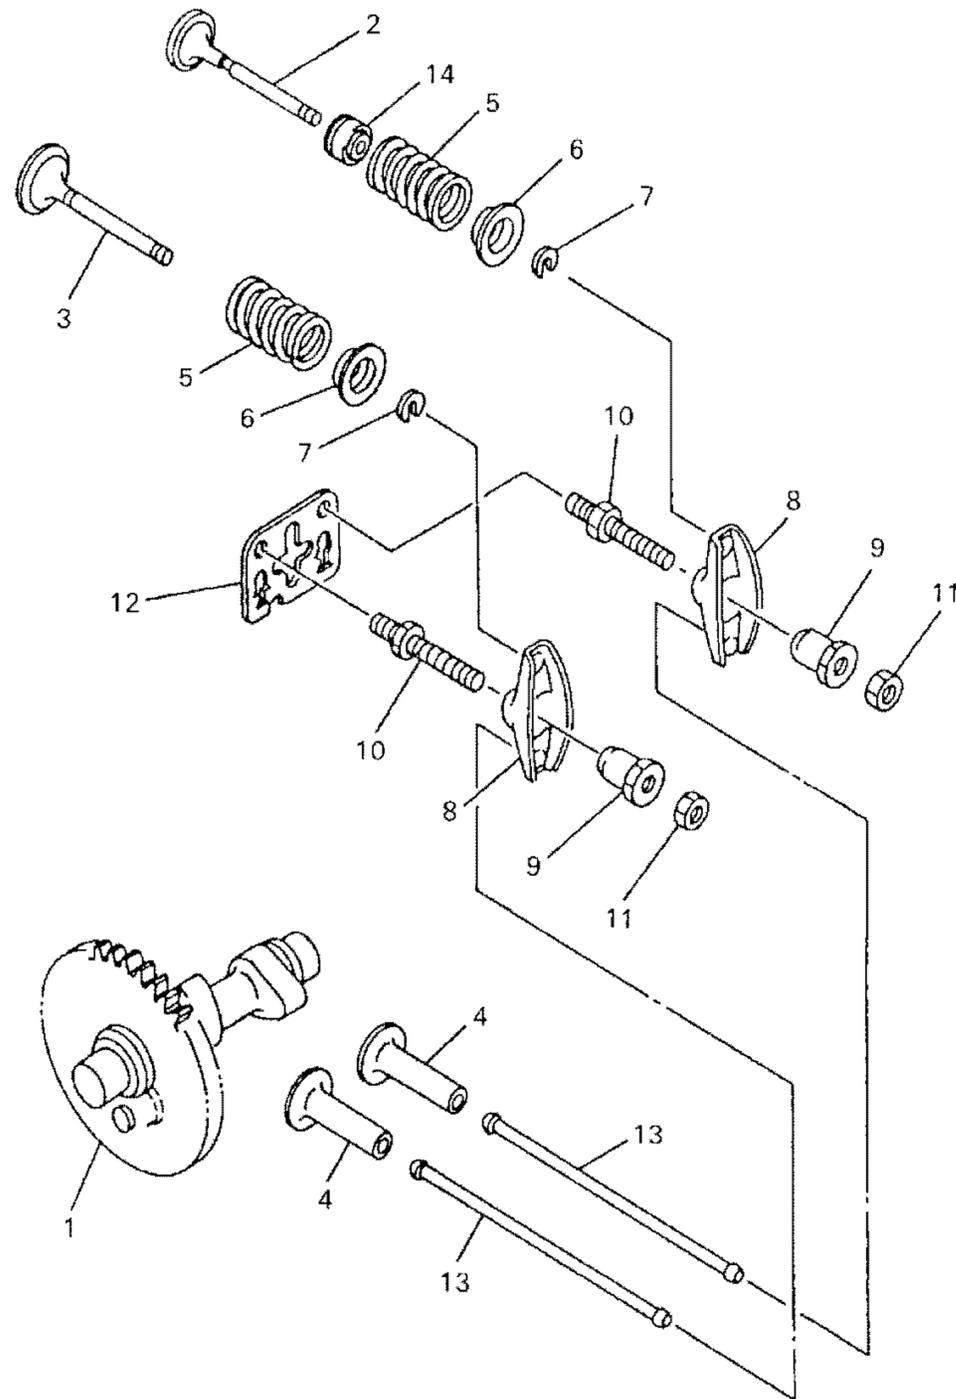

Ref. No.	Part No.	Part Name	Remarks
1	7NJ-12171-01	CAMSHAFT 1	1
2	7NH-12111-00	VALVE, INTAKE	1 (※1)
3	7NH-12121-00	VALVE, EXHAUST	1 (※1)
4	JA9-12153-00	LIFTER, VALVE	2
5	90501-205J4	SPRING, COMPRESSION	2
<hr/>			
6	7NJ-12117-00	RETAINER, VALVE SPRING	2
7	7NJ-12118-00	COTTER, VALVE	2
8	JA9-12151-00	ARM, VALVE ROCKER	2
9	7FK-12165-00	PIVOT, ROCKER ARM	2
10	7FK-12157-00	BOLT	2
<hr/>			
11	7FK-12158-00	NUT, LOCK	2
12	JA9-12155-00	GUIDE, PUSH ROD	1
13	7NJ-12154-00	ROD, VALVE PUSH	2
14	51Y-12119-00	SEAL, VALVE STEM	1
<hr/>			
<hr/>			
<hr/>			




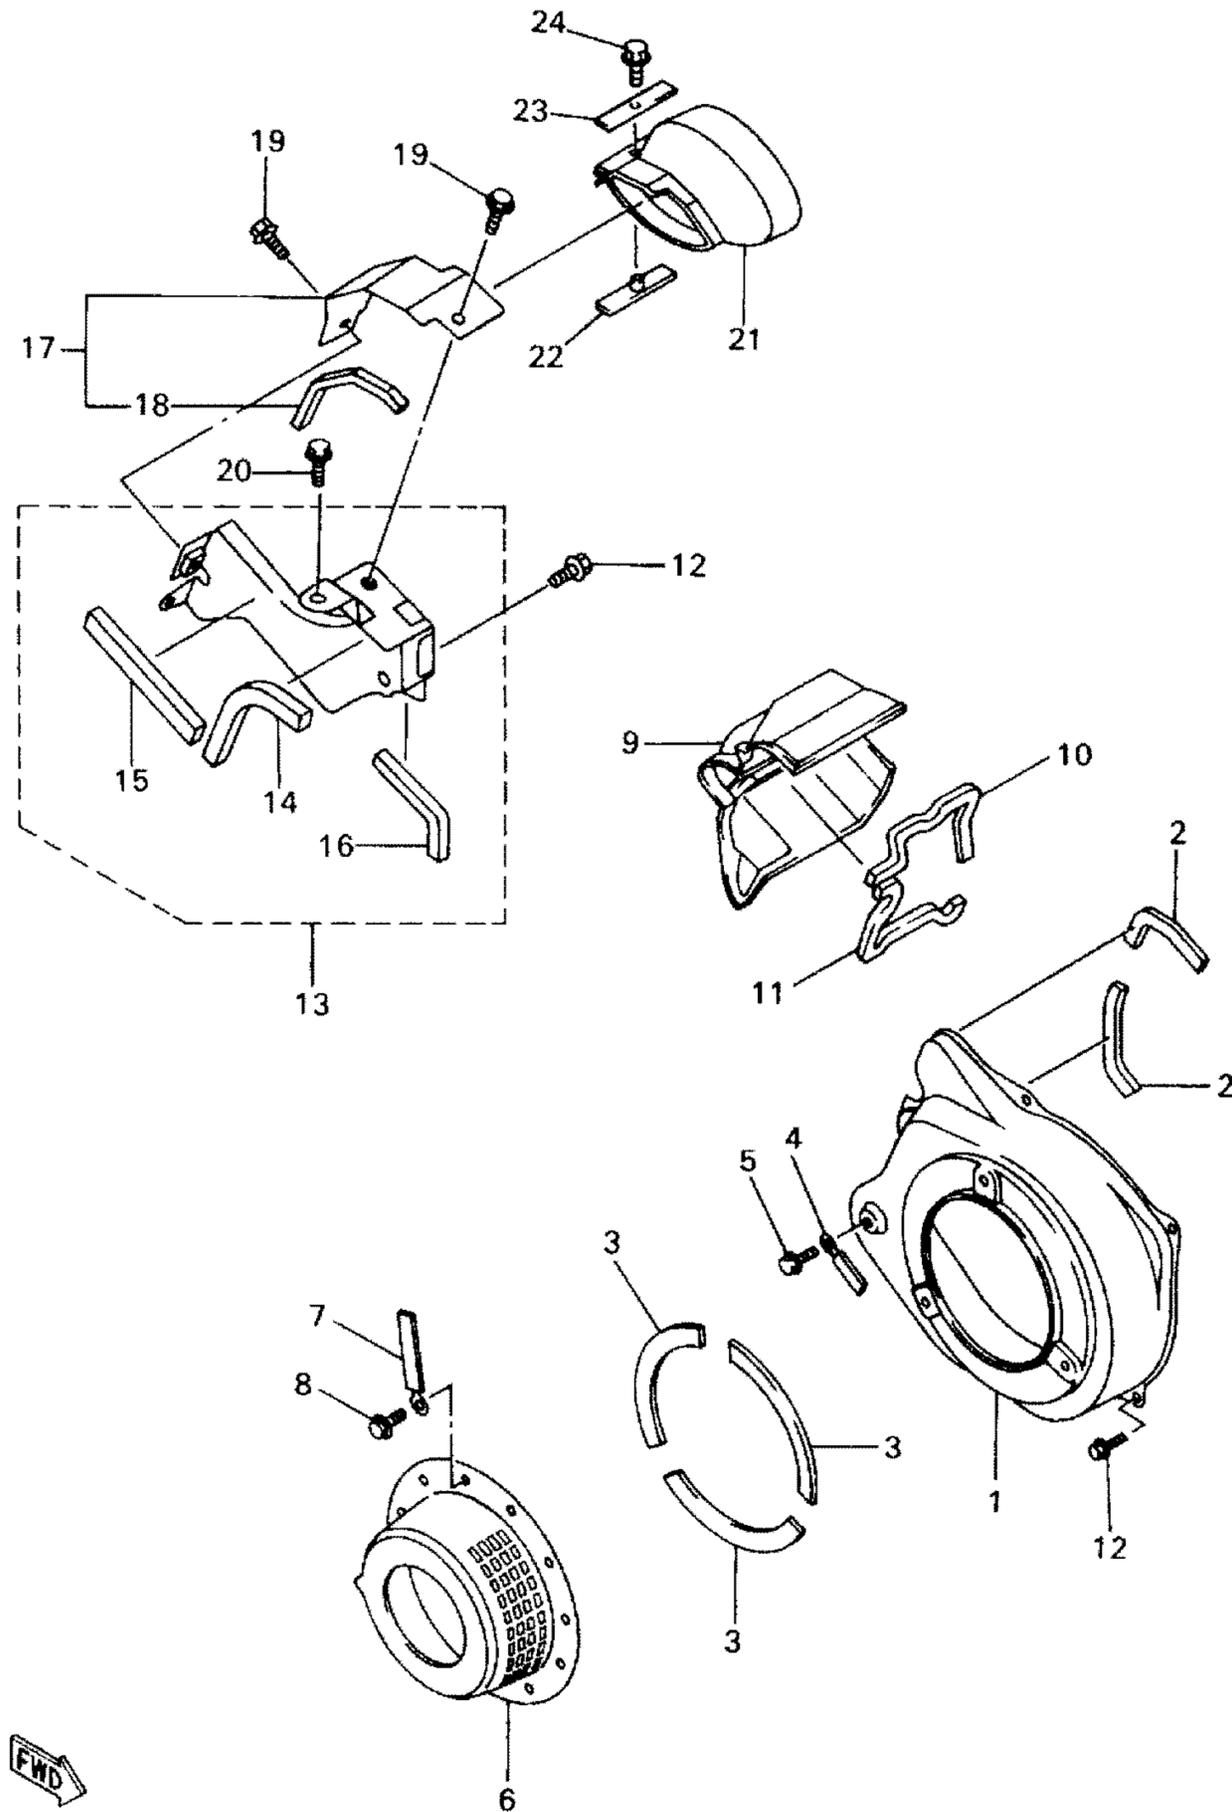


Fig. 4

Ref. No.	Part No.	Part Name		Remarks
1	7NJ-12621-00	CASE, FAN	1	
2	7TD-1262J-00	PAD, FAN CASE 3	2	
3	JR4-12626-00	PAD, FAN CASE	3	
4	90465-08125	CLAMP	1	
5	95807-06008	BOLT, FLANGE	1	
<hr/>				
6	JR4-12616-00	COVER, FAN CASE	1	
7	90462-10236	CLAMP	1	
8	95807-06008	BOLT, FLANGE	3	
9	7NJ-12651-01	AIR SHROUD, CYLINDER 1	1	
10	7TD-12658-00	DAMPER, AIR SHROUD 1	1	
<hr/>				
11	7TD-12659-00	DAMPER, AIR SHROUD 2	1	
12	95807-06012	BOLT, FLANGE	5	
13	JR4-12650-00	AIR SHROUD ASSY.,2	1	
14	JR4-12659-00	DAMPER, AIR SHROUD 2	1	
15	JR4-12668-00	DAMPER, AIR SHROUD 3	1	
<hr/>				
16	JR4-12669-00	DAMPER, AIR SHROUD 4	1	
17	JR4-12660-00	AIR SHROUD ASSY	1	
18	JR4-12678-00	DAMPER, AIR SHROUD 5	1	
19	95807-06008	BOLT, FLANGE	2	
20	95807-08012	BOLT, FLANGE	2	
<hr/>				
21	JR4-12691-00	DUCT, 1	1	
22	JF7-12633-00	PLATE	1	
23	JF7-12634-00	PLATE 2	1	
24	95807-06016	BOLT, FLANGE	1	
<hr/>				



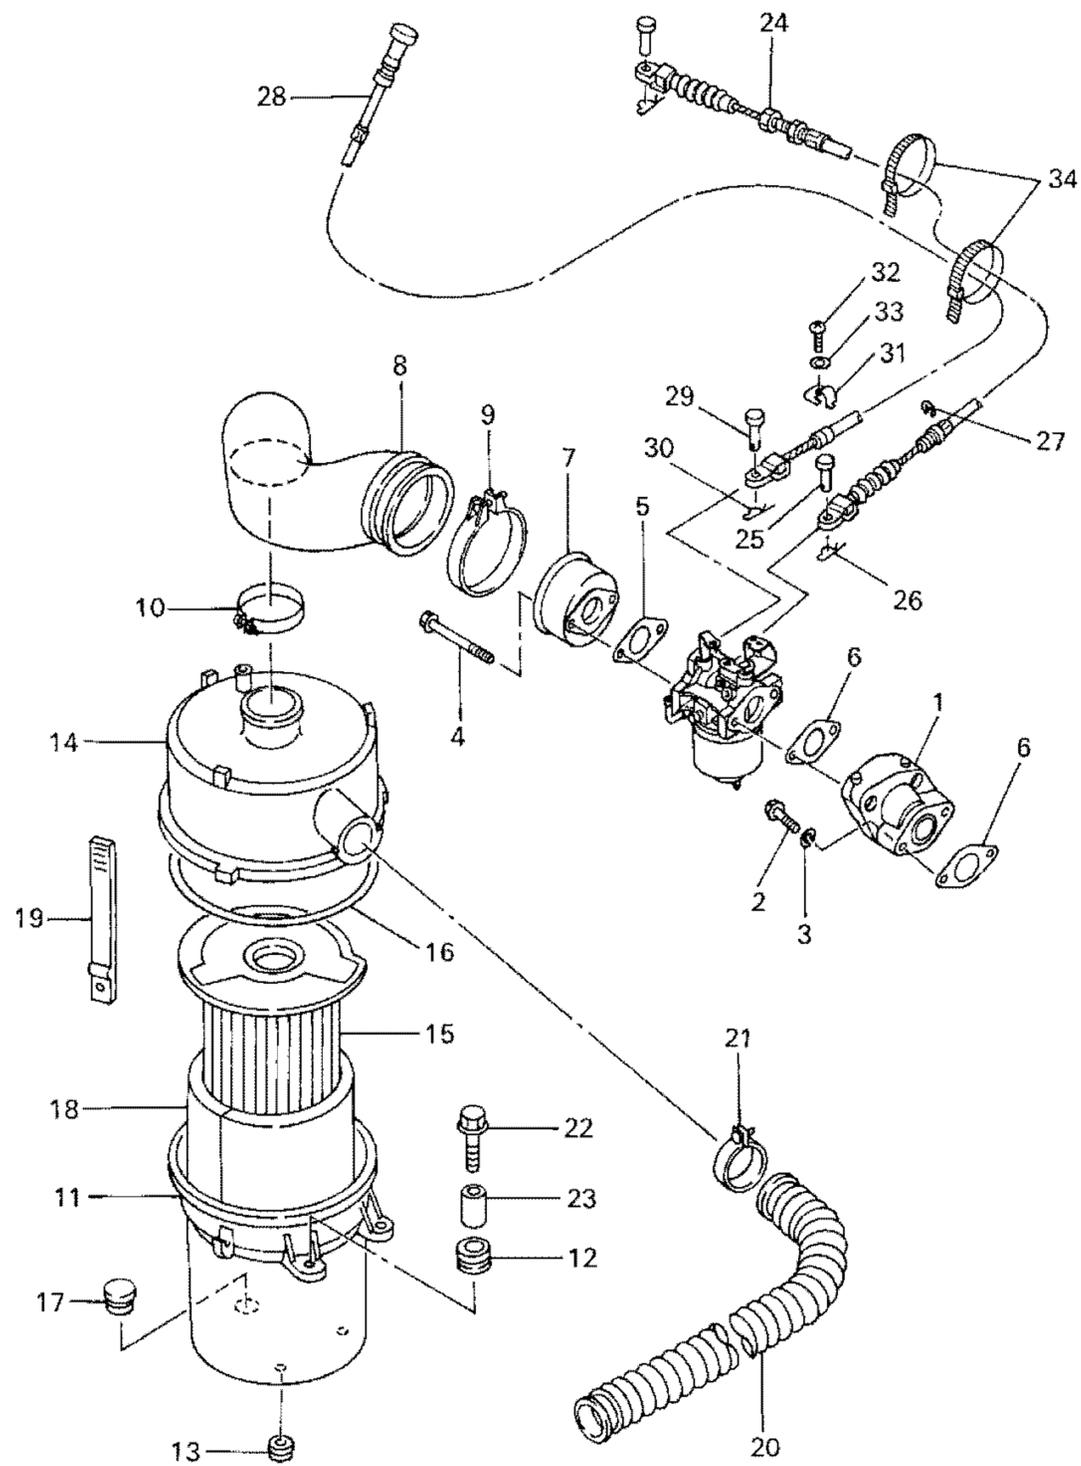


JR4010-8050

Fig. 5

Ref. No.	Part No.	Part Name		Remarks
1	JR4-13585-00	MANIFOLD	1	
2	92507-06040	SCREW, PAN HEAD	2	
3	92907-06600	WASHER, PLATE	2	
4	95807-06070	BOLT, FLANGE	2	
5	J45-13567-01	GASKET	1	
6	JA9-13557-00	GASKET	2	
7	J45-14482-00	PLATE, CARBURETOR CAP	1	
8	JR4-14453-00	JOINT, AIR CLEANER 1	1	
9	90460-68199	CLAMP, HOSE	1	
10	90460-54111	CLAMP, HOSE	1	
11	J10-14411-01	CASE, AIR CLEANER 1	1	
12	90480-13238	GROMMET	2	
13	90480-14239	GROMMET	2	
14	JN3-14412-00	CAP, CLEANER CASE 1	1	
15	JF7-14450-01	ELEMENT ASSY, AIR CLEANER	1	
16	JN3-14452-00	SEAL	1	
17	90480-14100	GROMMET	1	
18	J10-14417-00	COVER 1	1	
19	J45-14436-00	HOOK	3	
20	JN3-14437-00	DUCT	1	
21	90460-33087	CLAMP, HOSE	1	
22	90119-06097	BOLT, WITH WASHER	2	
23	90387-06026	COLLAR	2	
24	JR4-26313-00	CABLE, THROTTLE 3	1	
25	91701-05010	PIN	2	
26	90468-10049	CLIP	2	
27	99001-07600	CIRCLIP	1	
28	JR4-26331-00	CABLE, STARTER 1	1	




Fig. 6

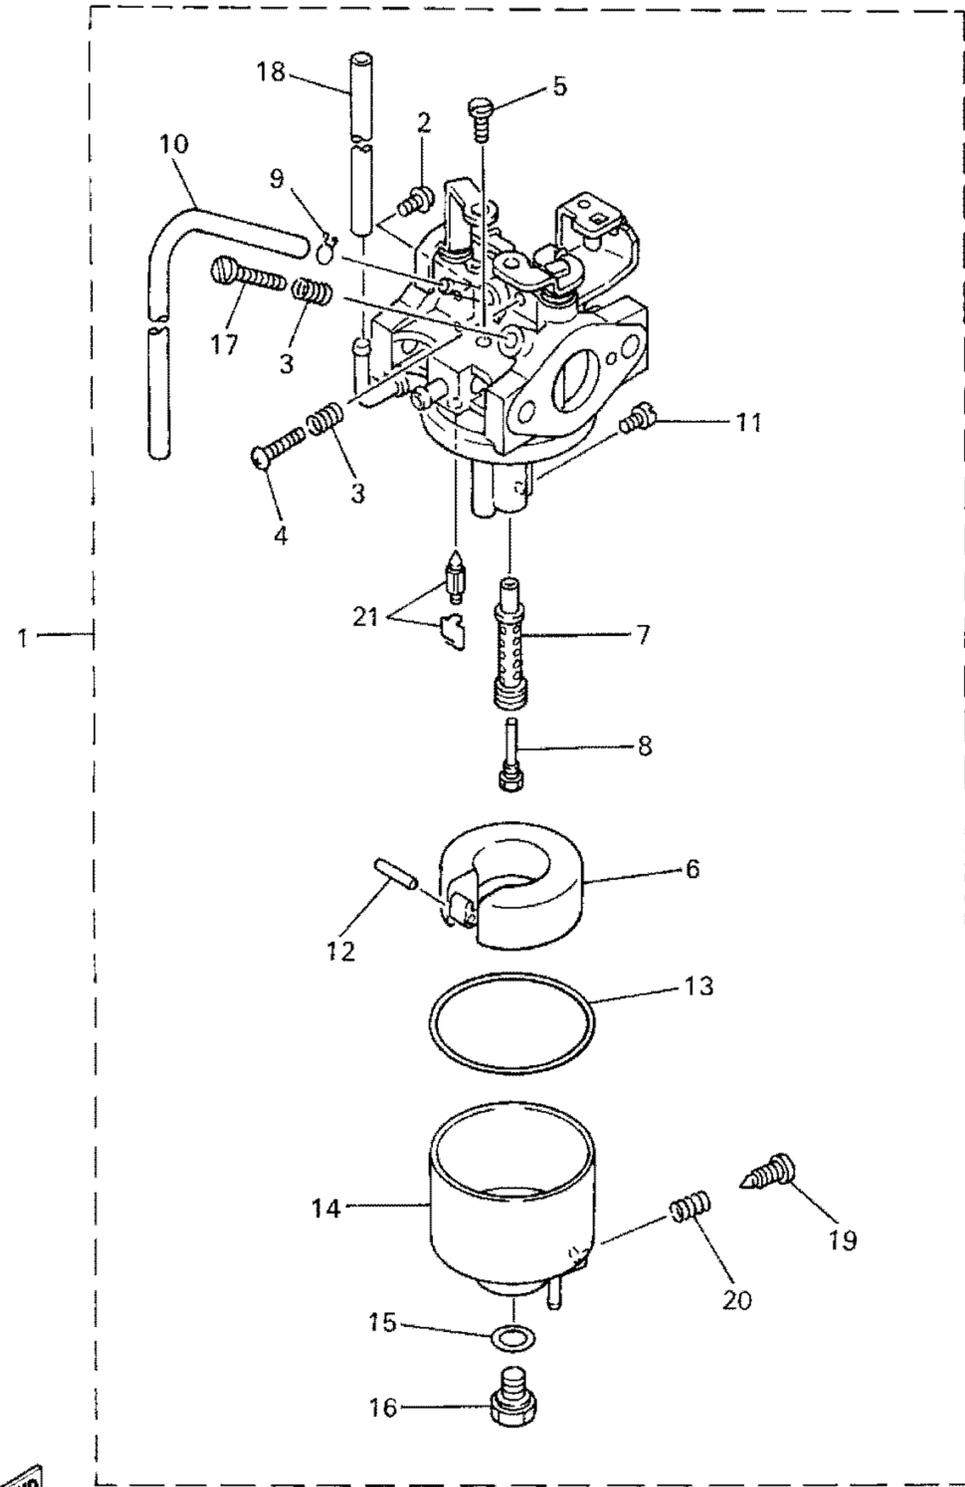

JR4010-8060


Ref. No.	Part No.	Part Name		Remarks
1	JR4-14101-00	CARBURETOR ASSY 1	1	
2	7RH-14486-00	SCREW, ROD	2	
3	73A-14212-00	SPRING	2	
4	1WG-14922-00	SCREW, THROTTLE	1	
5	620-14142-37	.JET, PILOT (# 37.5)	1	
6	7LG-14185-00	FLOAT	1	
7	JR4-1495E-7C	NOZZLE, MAIN	1	
8	J45-14489-00	NOZZLE	1	
9	14X-14937-00	CLIP	1	
10	510-14197-00	PIPE	1	
11	1HX-1423E-37	.JET, MAIN (#93.8)	1	
12	22F-14186-00	PIN, FLOAT	1	
13	7G0-14184-00	GASKET, FLOAT CHAMBER	1	
14	7TD-14181-00	BODY, FLOAT CHAMBER 1	1	
15	7G0-14227-00	WASHER	1	
16	7TD-14162-00	BOLT, HOLDING	1	
17	7LV-14211-00	SCREW, PILOT ADJUSTING	1	
18	1NV-14197-00	PIPE	1	
19	7E1-14191-00	PLUG, DRAIN	1	
20	73A-14212-00	SPRING	1	
21	7KN-14116-00	NEEDLE	1	

Fig. 7

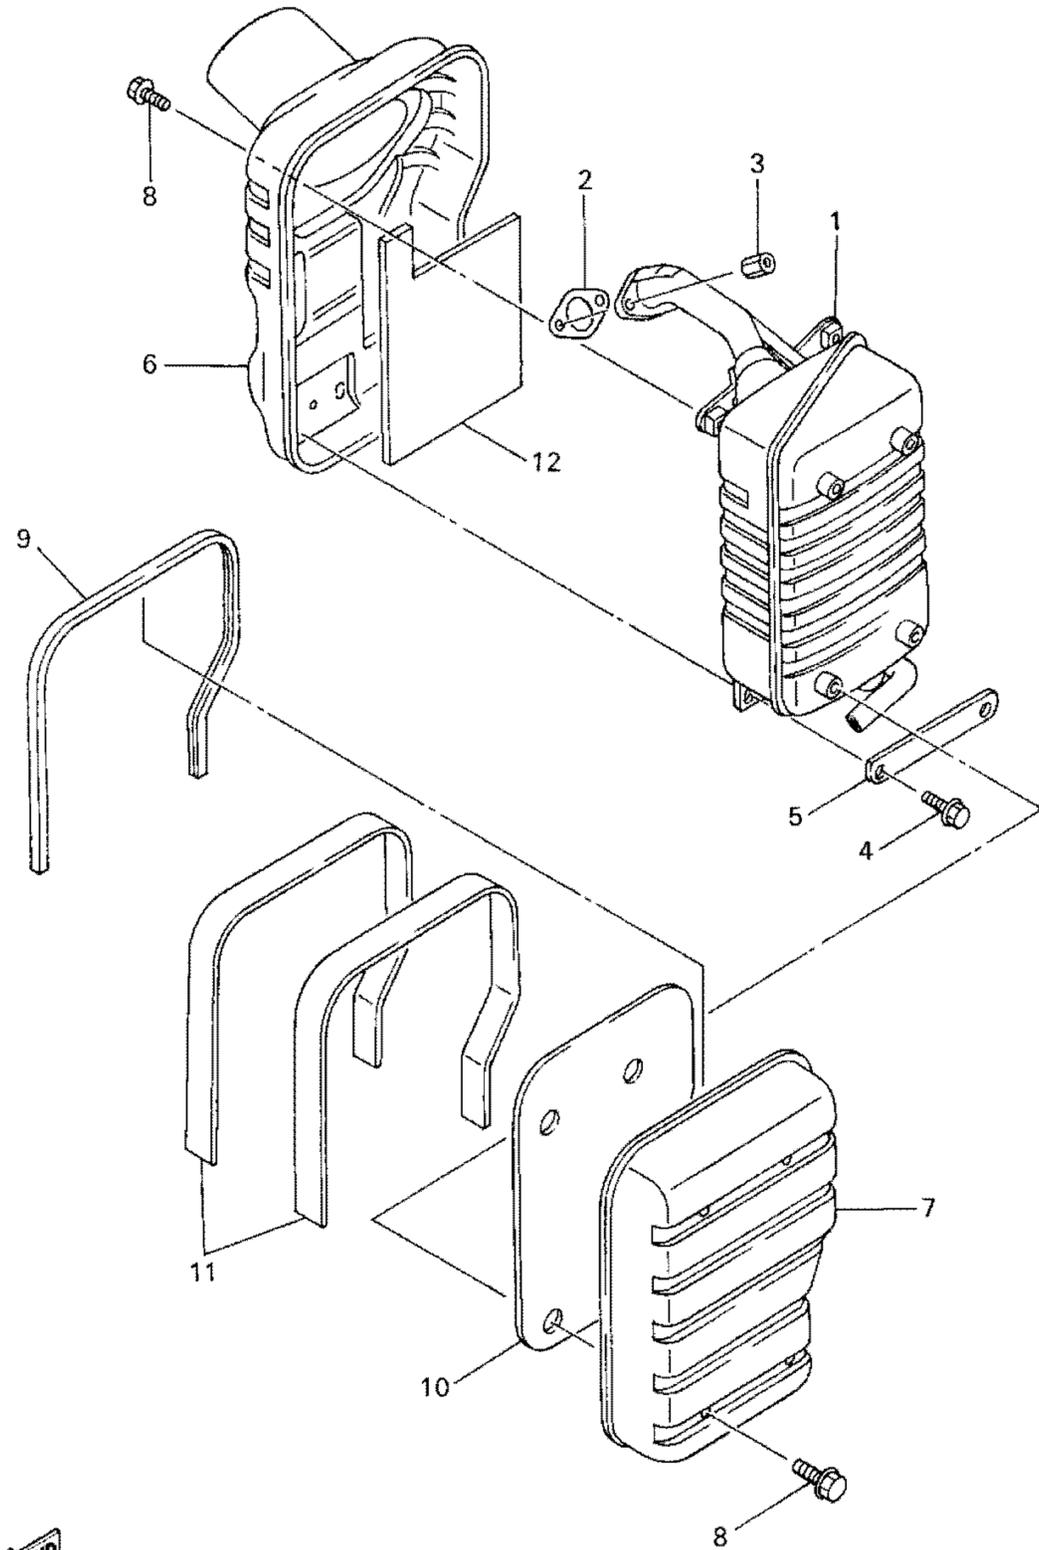

Ref. No.	Part No.	Part Name		Remarks
1	JR4-14711-00	MUFFLER 1	1	
2	JA9-14613-00	GASKET, EXHAUST PIPE	1	
3	90170-06424	NUT	2	
4	95817-08020	BOLT, FLANGE	2	
5	JR4-14793-00	PLATE, MUFFLER	1	
<hr style="border-top: 1px dashed black;"/>				
6	JR4-14718-00	PROTECTOR, MUFFLER 1	1	
7	JF7-14728-00	PROTECTOR, MUFFLER 2	1	
8	95807-06010	BOLT, FLANGE	6	
9	JF7-12684-00	DAMPER, DUCT 1	1	
10	JF7-14452-00	SEAL	1	
<hr style="border-top: 1px dashed black;"/>				
11	JF7-14457-00	SEAL	2	
12	JF7-14467-00	SEAL	1	
<hr style="border-top: 1px dashed black;"/>				
<hr style="border-top: 1px dashed black;"/>				
<hr style="border-top: 1px dashed black;"/>				

Fig. 8

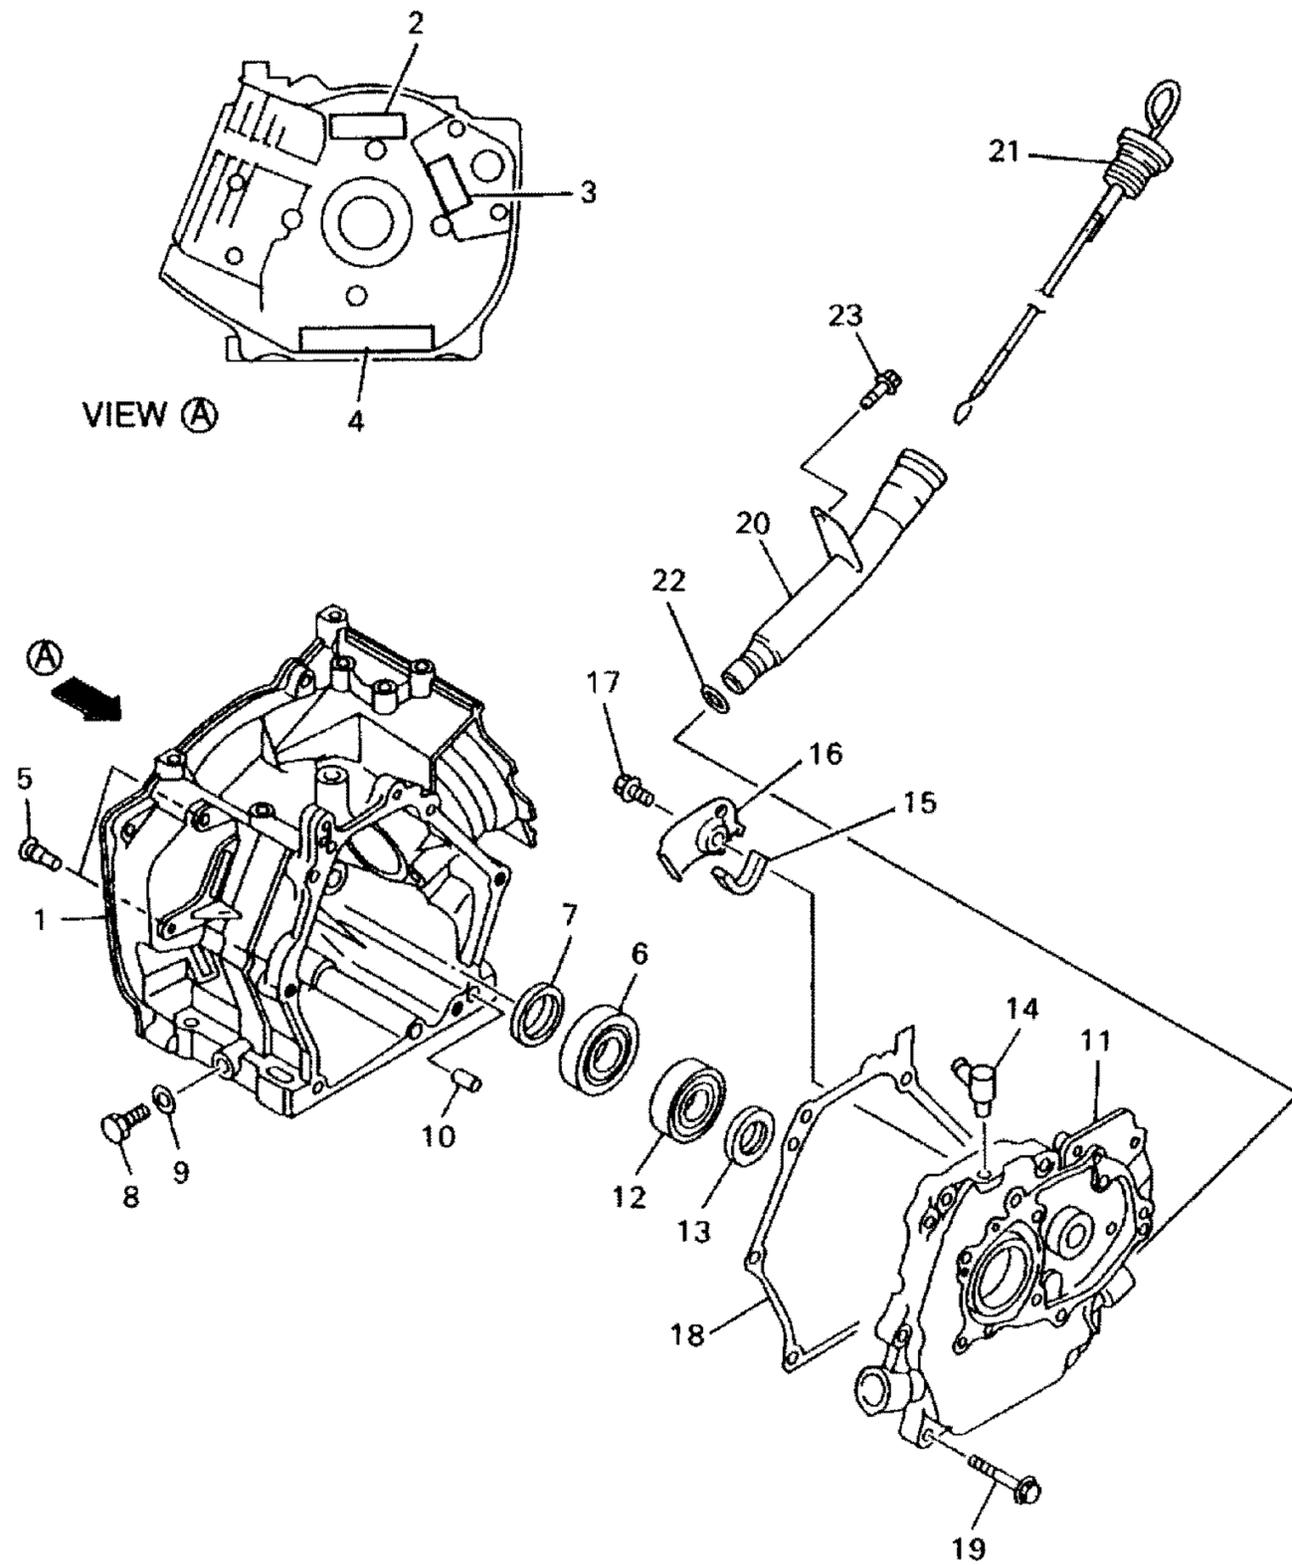

Ref. No.	Part No.	Part Name		Remarks
1	JR4-15111-00	CRANKCASE 1	1	
2	7TD-15315-00	SEAL, CRANKCASE	1	
3	7TD-15379-00	SEAL	1	
4	7TD-15472-00	SEAL, AIR DUCT	1	
5	90338-06181	PLUG	2	
6	93306-20511	BEARING	1	
7	93102-25090	OIL SEAL	1	
8	95027-10016	BOLT, FLANGE	2	
9	90430-10188	GASKET	2	
10	99530-08016	PIN, DOWEL	2	
11	JR4-15411-00	COVER, CRANKCASE 1	1	
12	93306-20511	BEARING	1	
13	93102-25448	OIL SEAL	1	
14	JN6-15155-00	NOZZLE 3	1	
15	JR4-15407-00	ELEMENT 1	1	
16	JR4-15123-00	PLATE, BAFFLE 1	1	
17	90105-066A1	BOLT, FLANGE	1	
18	7NJ-15451-00	GASKET, CRANKCASE COVER 1	1	
19	95827-08035	BOLT, FLANGE	6	
20	JR4-15112-00	PIPE, OIL	1	
21	JR4-15361-00	GAUGE, LEVEL	1	
22	93210-13M43	O-RING	1	
23	95807-06020	BOLT, FLANGE	1	



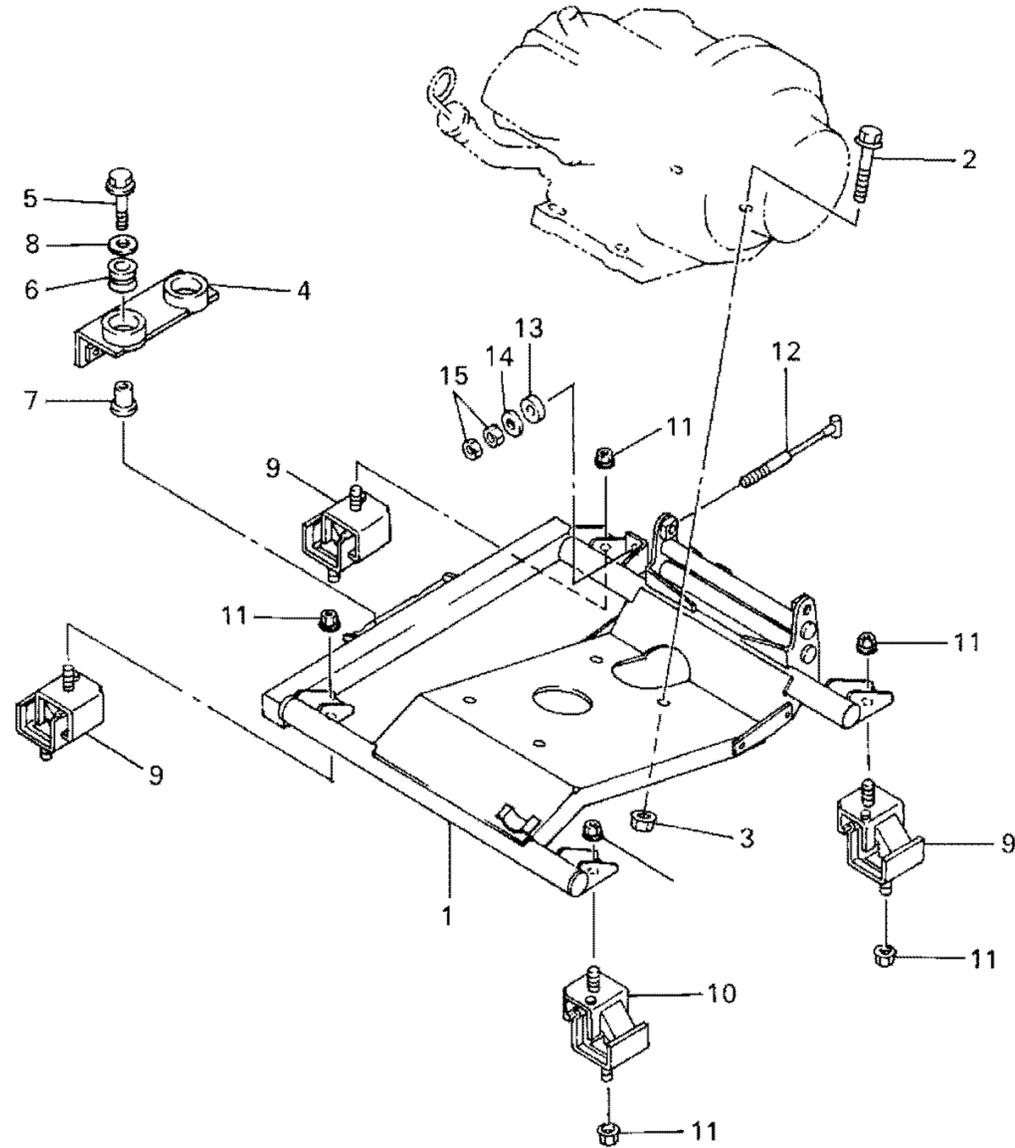


Fig. 9

Ref. No.	Part No.	Part Name		Remarks
1	JR4-21411-00	BRACKET, ENGINE 1	1	
2	95827-08030	BOLT, FLANGE	4	
3	95707-08500	NUT, FLANGE	4	
4	JR4-21419-00	BRACKET, ENGINE 2	1	
5	90105-08659	BOLT, FLANGE	2	
<hr/>				
6	2H7-27414-00	DAMPER, FOOTREST	2	
7	90387-10636	COLLAR	2	
8	90201-08753	WASHER, PLATE	2	
9	JR4-21486-00	DAMPER 2	3	
10	JR4-21488-00	DAMPER	1	
<hr/>				
11	95707-10500	NUT, FLANGE	8	
12	J31-2217J-01	TENSIONER 1	1	
13	J17-2214F-00	DAMPER 1	1	
14	90201-06778	WASHER, PLATE	1	
15	95307-06600	NUT	2	
<hr/>				



JR4010-8090


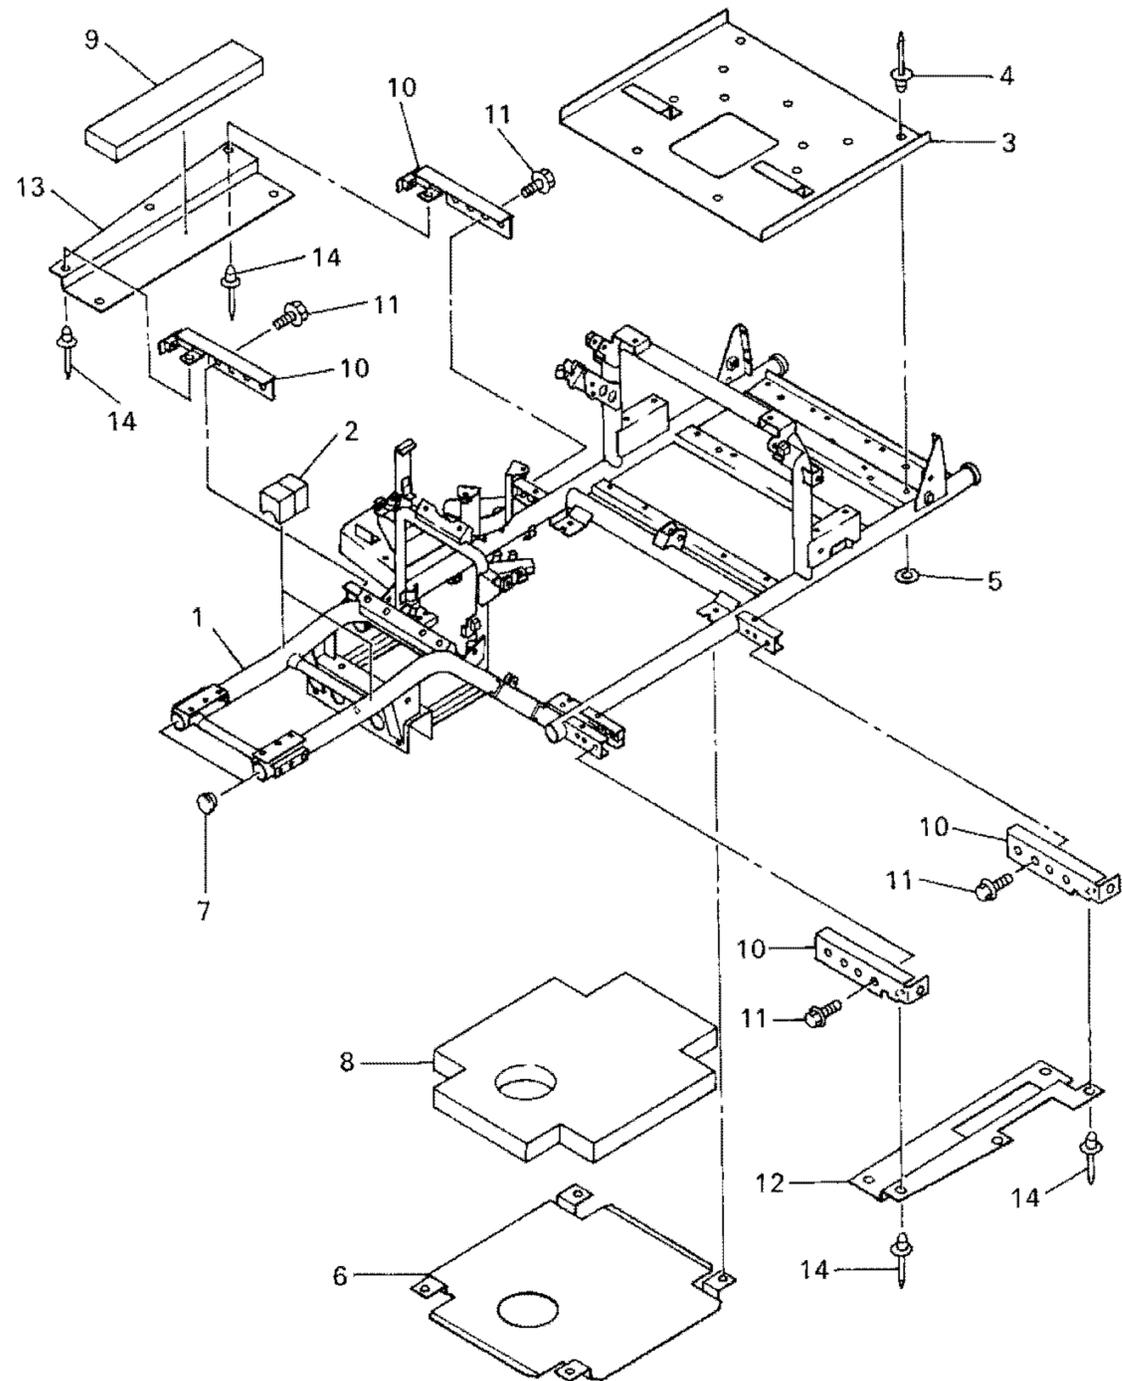


Fig. 10

Ref. No.	Part No.	Part Name		Remarks
1	JR4-22501-00	FRAME COMP.	1	
2	JR4-78328-00	SPACER 1	2	
3	JR4-22592-00	PLATE 1	1	
4	90267-48104	RIVET, BLIND (4.8X12.4 BLACK)	6	
5	90201-055K2	WASHER, PLATE	6	
<hr/>				
6	JR4-22593-00	PLATE 2	1	
7	J45-2117F-00	COVER	4	
8	JR4-78251-00	PAD, SILENCER 1	1	
9	JR4-7825H-00	PAD, SILENCER 14	1	
10	JR4-2253J-00	BRACKET, SIDE PANEL 1	4	
<hr/>				
11	95807-06014	BOLT, FLANGE	8	
12	JR4-2259A-00	PLATE 4	1	
13	JR4-2259C-00	PLATE 5	1	
14	90267-48104	RIVET, BLIND (4.8X12.4 BLACK)	8	
<hr/>				




Fig. 11

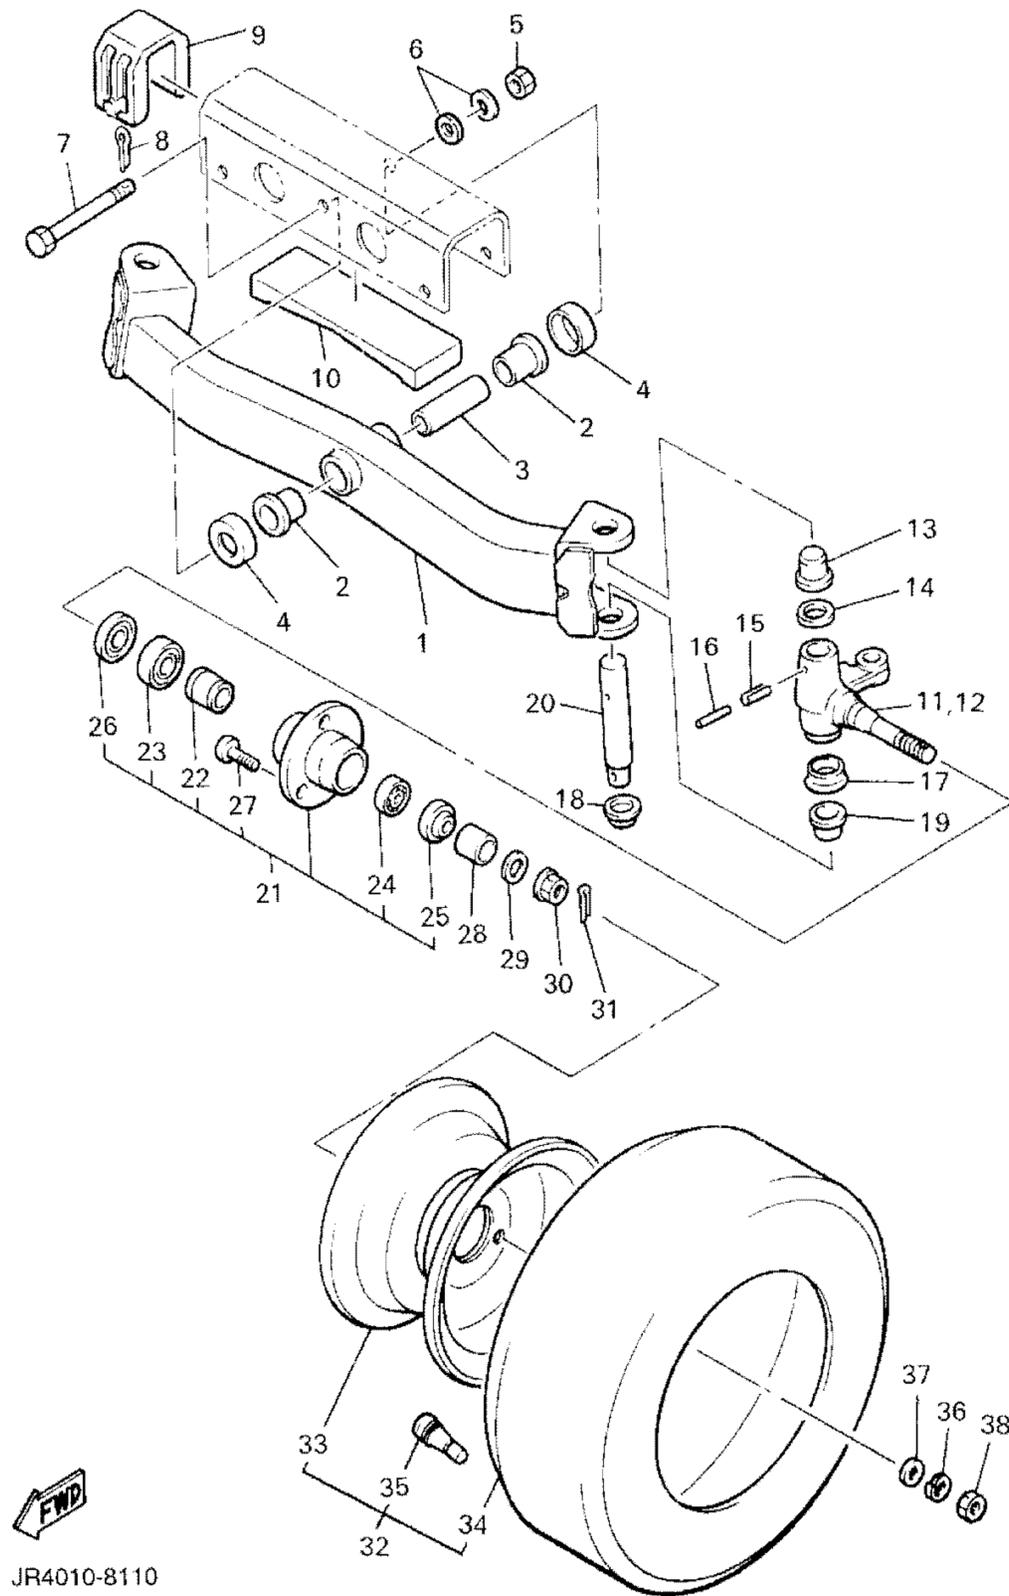

JR4010-8110


Ref. No.	Part No.	Part Name		Remarks
1	J45-23570-00	FRONT LOWER ARM COMP.	1	
2	15A-22123-00	BUSH 1	2	
3	90387-124R8	COLLAR	1	
4	401-22128-01	COVER, THRUST 1	2	
5	95617-12100	NUT, U	1	
6	90201-122H1	WASHER, PLATE	2	
7	90102-12080	BOLT, WITH HOLE	1	
8	91401-30025	PIN, SPLIT	1	
9	J45-23548-00	END 1	2	
10	J45-23578-00	END 2	1	
11	J45-23511-10	KNUCKLE, STEERING 1	1	
12	J45-23521-10	KNUCKLE, STEERING 2	1	
13	90338-17170	PLUG	2	
14	90201-156J2	WASHER, PLATE	2	
15	91609-60028	PIN, SPRING	2	
16	91609-35028	PIN, SPRING	2	
17	J38-23527-00	SEAL, DUST 1	2	
18	J38-23528-00	SEAL, DUST 2	2	
19	90386-15139	BUSH	2	
20	J45-23516-00	KING PIN, STEERING KNUCKLE	2 (※1)	
21	JN2-25110-00	HUB ASSY, FRONT	2	
22	J45-25117-10	SPACER, BEARING	1	
23	93306-00322	BEARING	1	
24	93306-00108	BEARING	1	
25	93106-17015	OIL SEAL	1	
26	93102-22389	OIL SEAL	1	
27	90109-08745	BOLT	3	
28	90387-125R0	COLLAR	2	

Fig. 11

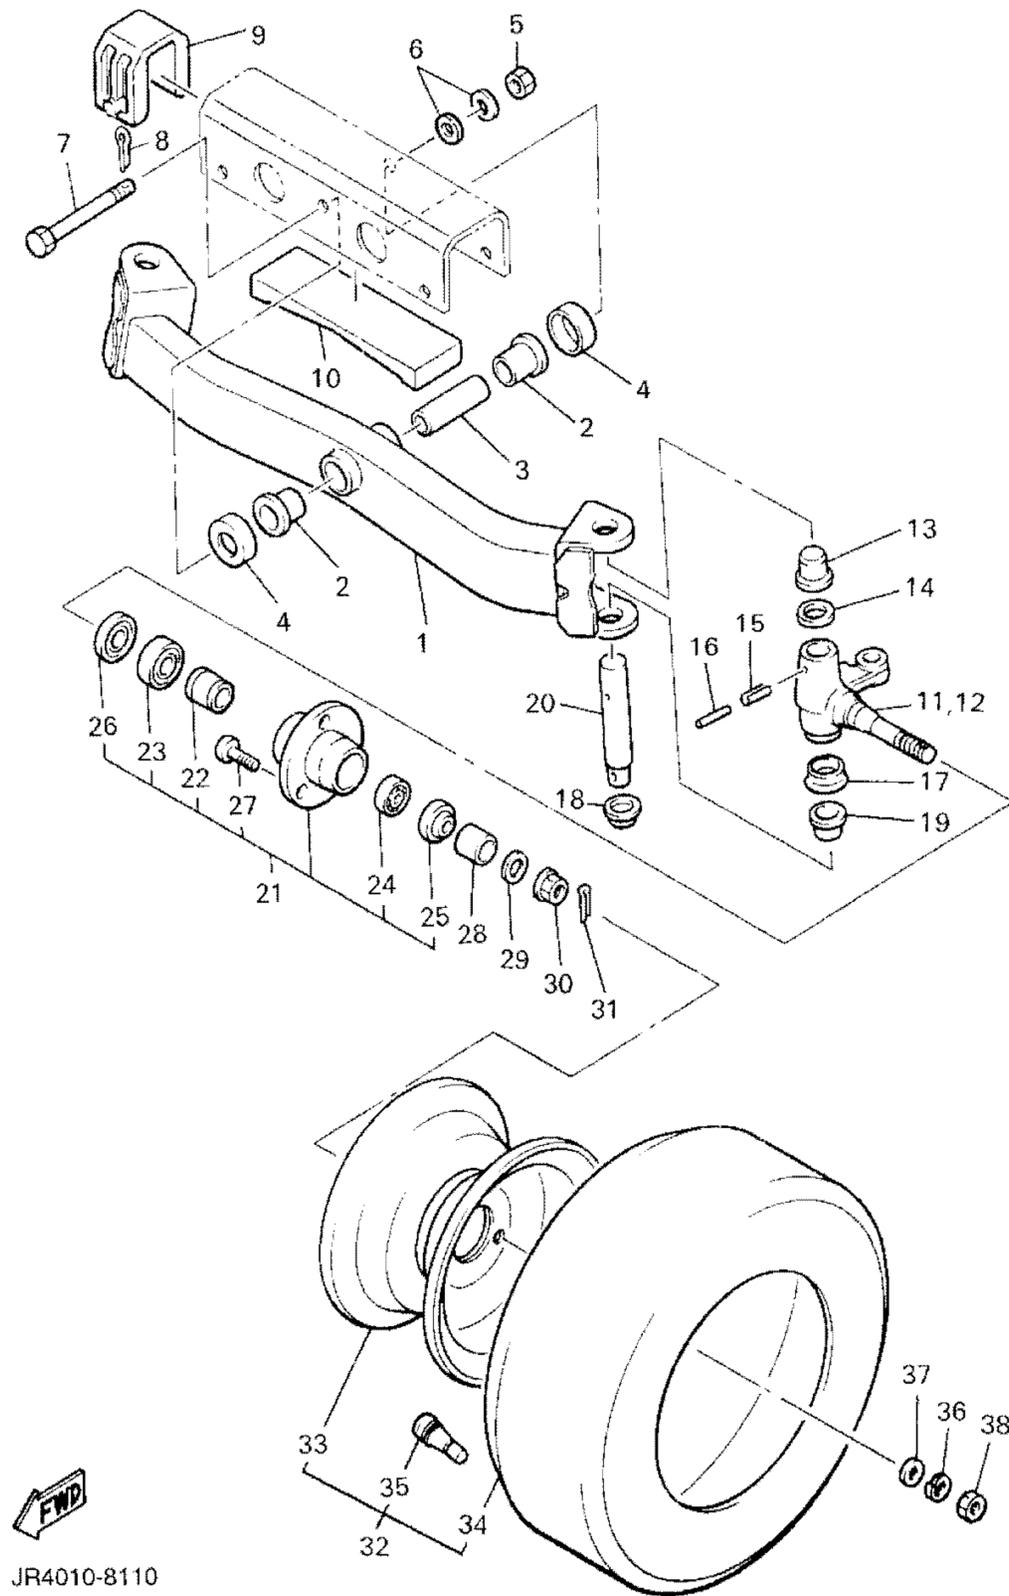

Ref. No.	Part No.	Part Name	Quantity	Remarks
29	90201-122H1	WASHER, PLATE	2	
30	95607-12200	NUT, SELF-LOCKING	2	
31	91401-25025	PIN, COTTER	2	
32	JR4-25100-00	WHEEL ASSY	2	
33	JR4-25180-00	WHEEL COMP.	1	
<hr/>				
34	94106-0602F	.TIRE (14X6.00-6 2PR)	1	
35	93900-00022	VALVE, RIM (TR413)	1	タイハイヨウ
36	92907-08100	WASHER, SPRING	6	
37	92907-08200	WASHER	6	
38	95317-08600	NUT	6	
<hr/>				

Fig. 12

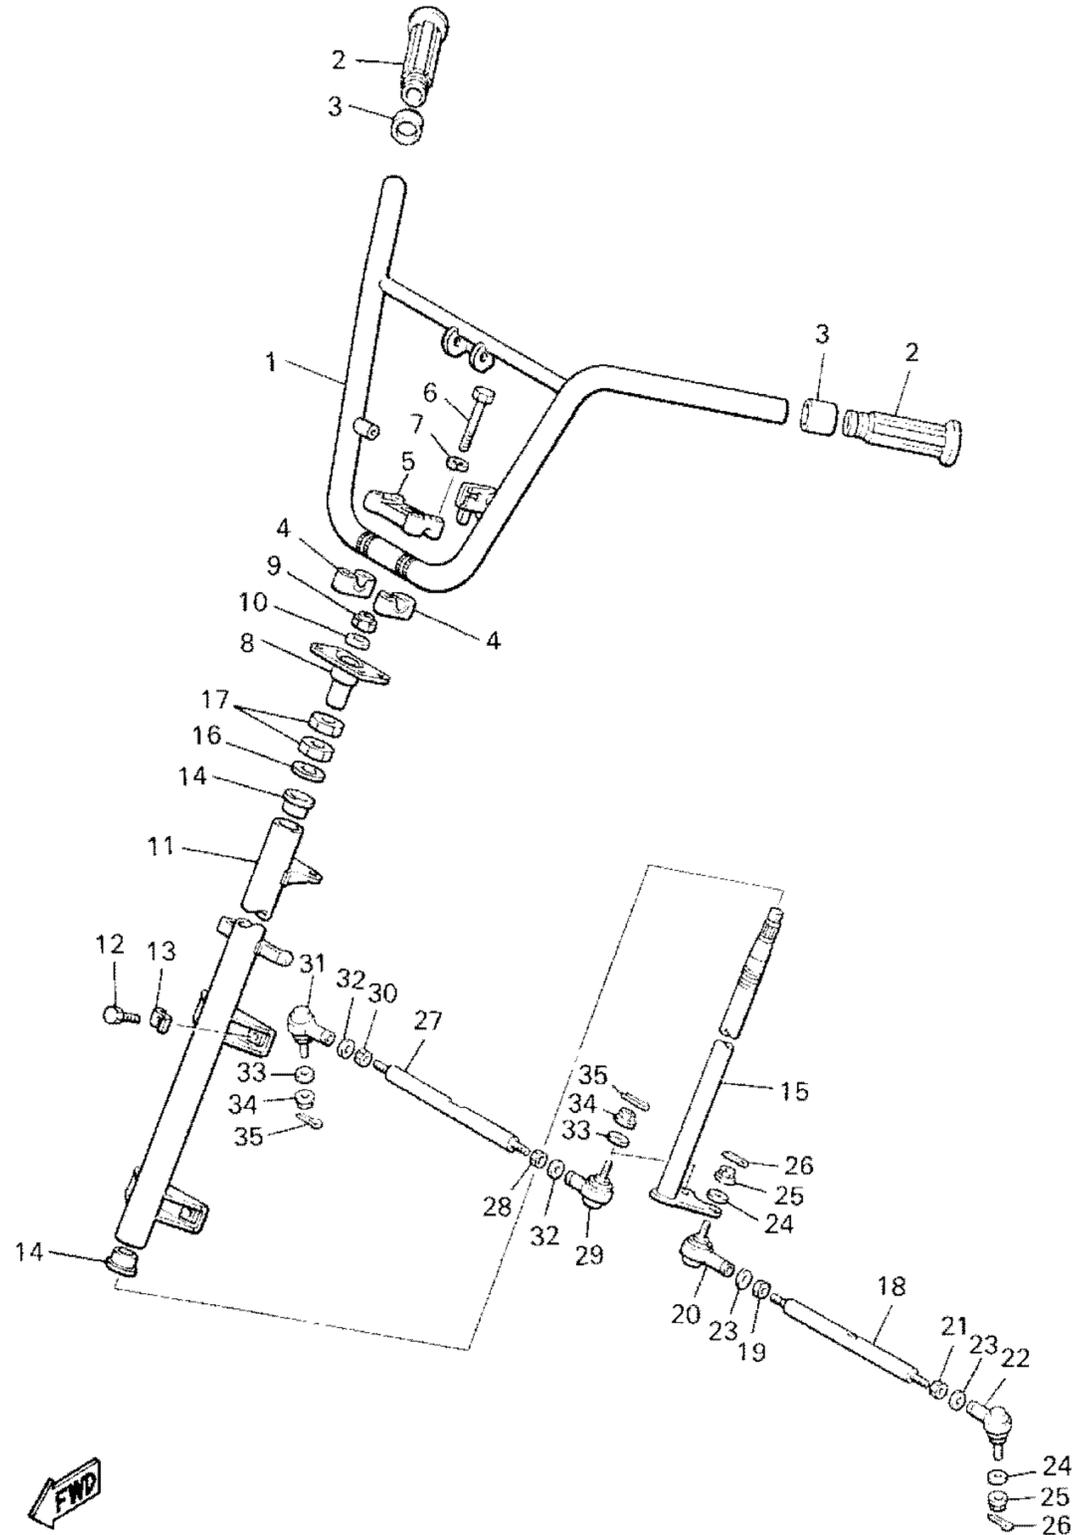



JR4010-8120

Ref. No.	Part No.	Part Name		Remarks
1	JR4-26111-00	HANDLEBAR	1	
2	801-26241-01	GRIP	2	
3	90560-22281	SPACER	2	
4	8K1-23814-00	HOLDER, HANDLE	2	
5	J45-23814-00	HOLDER, HANDLE UPPER	1	
6	97027-08055	BOLT, HEXAGON	4	
7	92907-08600	WASHER, PLATE	4	
8	J45-23822-00	JOINT 1	1	
9	90185-12061	NUT, SELF-LOCKING	1	
10	90201-12729	WASHER, PLATE	1	
11	J45-23811-00	COLUMN, STEERING	1	
12	97027-08016	BOLT, HEXAGON	4	
13	90215-08208	WASHER, LOCK	4	
14	J45-23812-00	PLANE BEARING, STEERING	2	
15	J45-23813-00	COLUMN, STEERING 2	1	
16	90201-201L9	WASHER, PLATE	1	
17	90170-20411	NUT	2	
18	1HN-23831-00	ROD, TIE	1	
19	95307-10600	NUT	1	
20	JN2-23841-00	JOINT, UNIVERSAL 1	1	
21	90170-10414	NUT	1	
22	JN2-23845-00	JOINT, UNIVERSAL 2	1	
23	90201-101J1	WASHER, PLATE	2	
24	90201-08759	WASHER, PLATE	2	
25	90185-10115	NUT, SELF-LOCKING	2	
26	91401-20020	PIN, COTTER	2	
27	1HN-23831-00	ROD, TIE	1	
28	95307-10600	NUT	1	



Fig. 13


Ref. No.	Part No.	Part Name	Quantity	Remarks
1	JR4-23870-00	STEERING GATE COMP.	1	100950マテ
	JR4-23870-01	STEERING GATE COMP.	1	100951ヨリ
2	90338-09012	PLUG	10	
3	95807-08035	BOLT, FLANGE	2	
4	97007-06035	BOLT	2	
5	90201-067E6	WASHER, PLATE	2	
6	95607-06200	NUT, SELF U-FLANGE	2	
7	JJ4-78363-00	PROTECTOR	2	
8	90464-12036	CLAMP	2	
9	JR4-78325-00	BRACKET 3	1	
10	97880-06012	SCREW, PAN HEAD	2	
11	92990-06600	WASHER, PLATE	2	
12	JR4-78323-00	BRACKET 1	2	
13	95807-06040	BOLT, FLANGE	2	

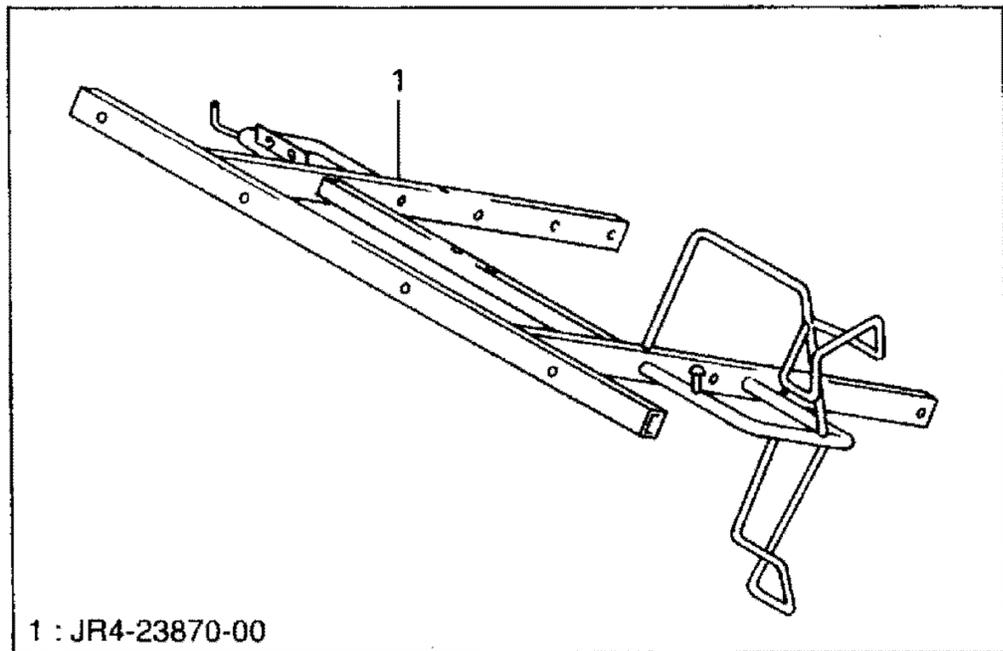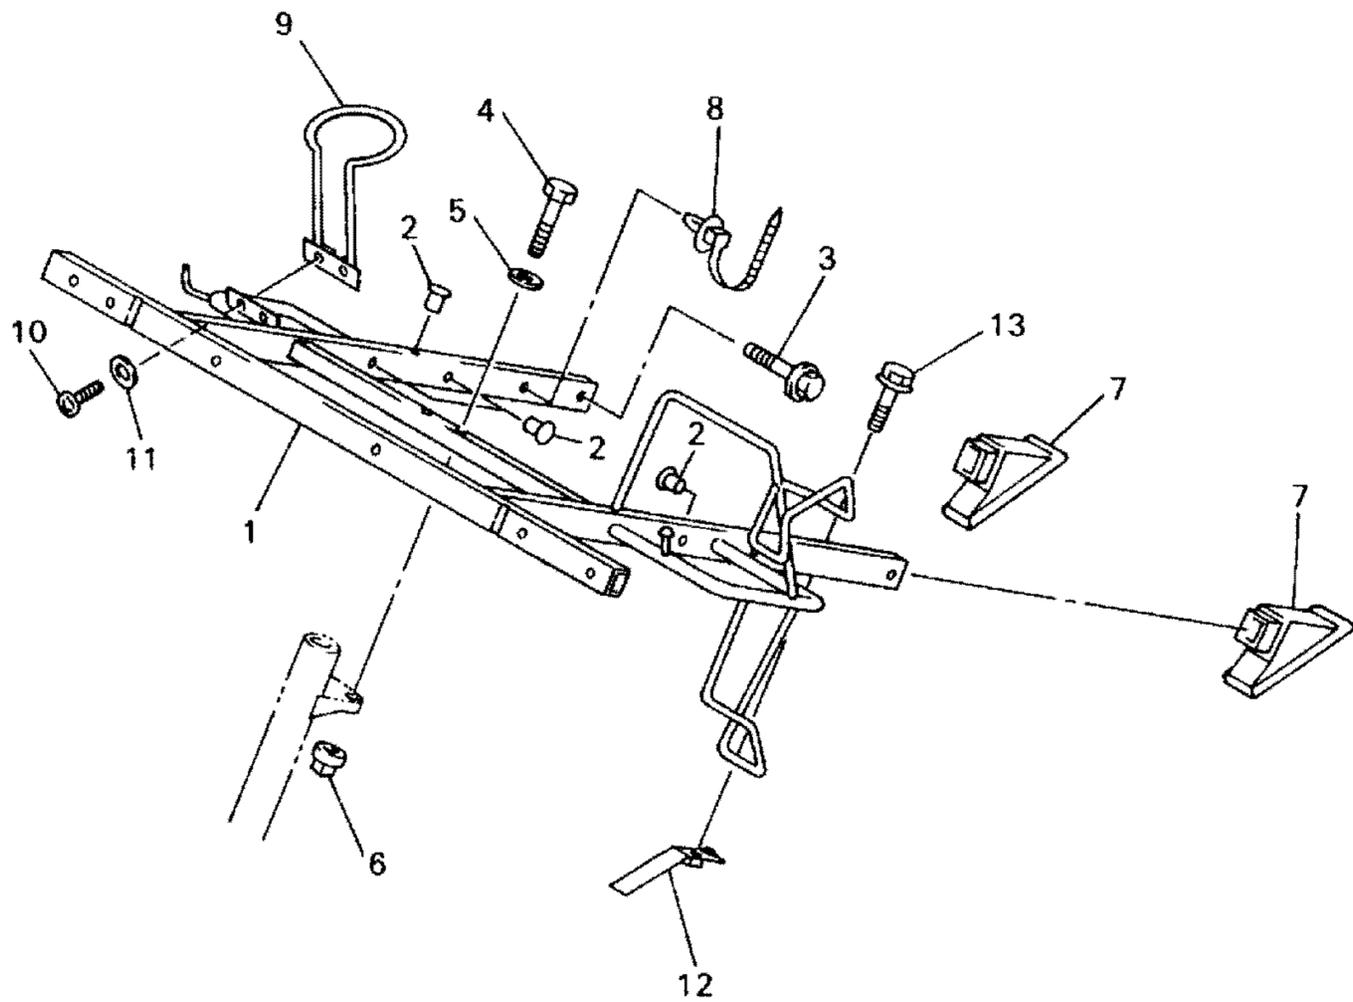

1 : JR4-23870-00



Fig. 14

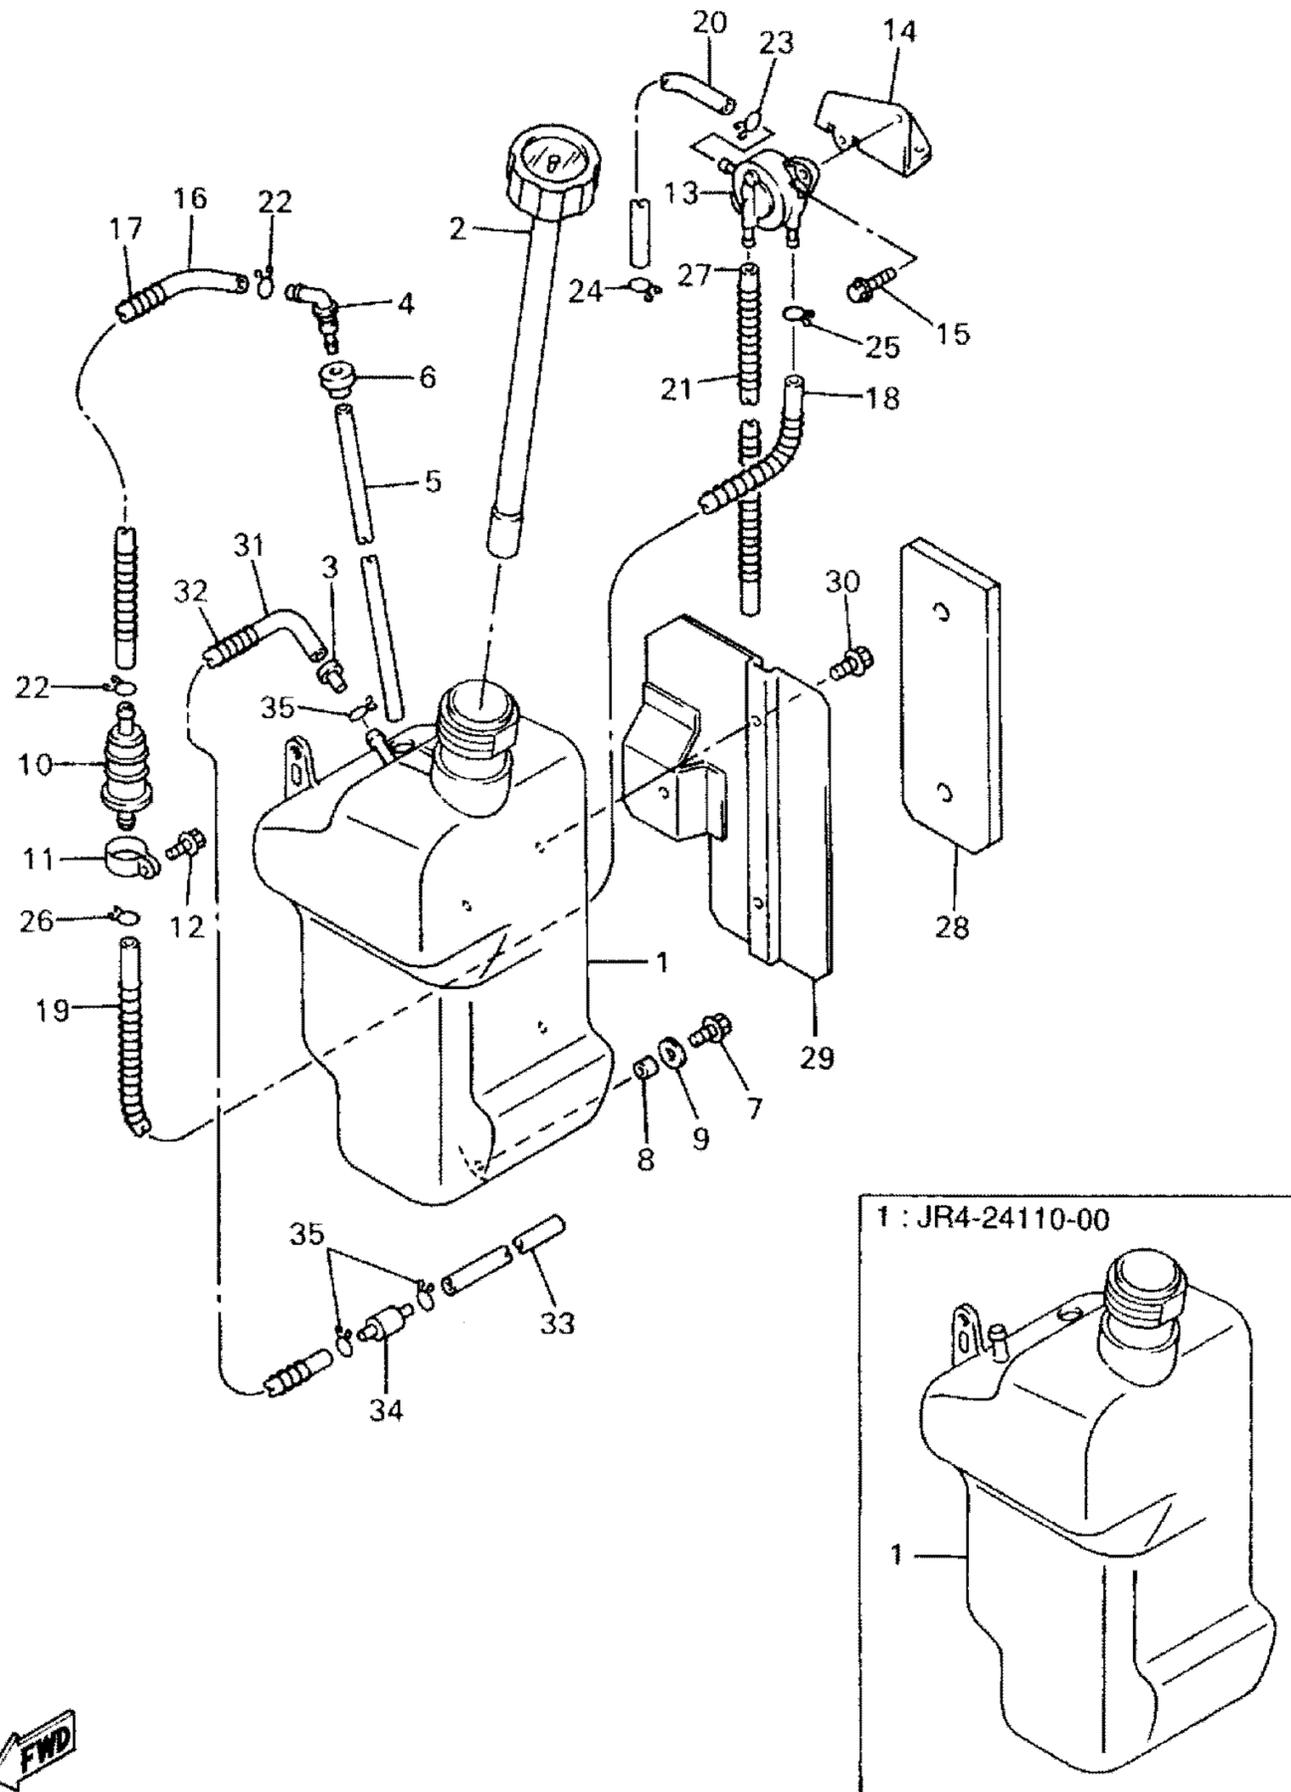

Ref. No.	Part No.	Part Name	Quantity	Remarks
1	JR4-24110-00	FUEL TANK COMP.	1	100750マテ
	JR4-24110-01	FUEL TANK COMP.	1	100751ヨリ
2	JR4-24610-00	CAP ASSY	1	
3	JR4-14515-00	JET	1	100751ヨリ
4	8CR-24376-01	PIPE, JOINT 1	1	
5	91A21-07028	TUBE, FLEXIBLE	1	
6	8CR-24339-00	GROMMET	1	
7	95807-06020	BOLT, FLANGE	2	
8	90387-062N2	COLLAR	2	
9	90201-06380	WASHER, PLATE	2	
10	1FK-24560-00	FILTER ASSY	1	
11	4BR-24366-00	CLAMP, FUEL PIPE 1	1	
12	95807-06010	BOLT, FLANGE	1	
13	JR4-24410-00	FUEL PUMP ASSY	1	
14	JR4-24491-00	BRACKET, FUEL PUMP	1	
15	90119-05020	BOLT, WITH WASHER	2	
16	90445-111K1	HOSE (L300)	1	
17	90501-08668	SPRING, COMPRESSION	1	
18	JR4-24312-00	PIPE 2	1	
19	90501-106L3	SPRING, COMPRESSION	1	
20	JR4-24311-00	PIPE, FUEL 1	1	
21	90501-083G4	SPRING, COMPRESSION	1	
22	90467-11009	CLIP	2	
23	90467-11008	CLIP	1	
24	90467-09103	CLIP	1	
25	90467-11009	CLIP	1	
26	90467-12052	CLIP	1	
27	JR4-14987-00	HOSE	1	





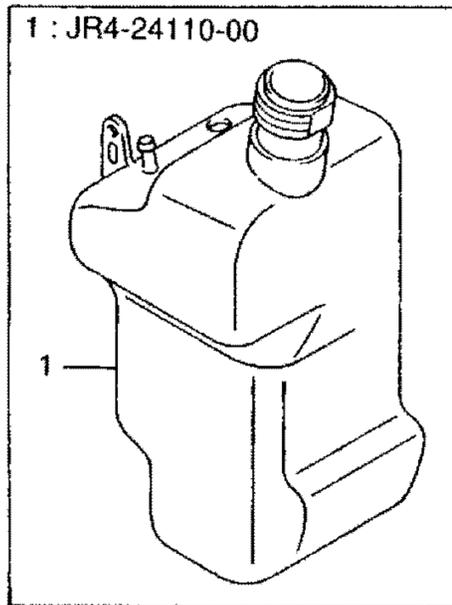


Fig. 14

Ref. No.	Part No.	Part Name	Quantity	Remarks
28	JR4-24181-01	DAMPER, LOCATING 1	1	100900マテ
	JR4-24181-02	DAMPER, LOCATING 1	1	100901ヨリ
29	JR4-24129-00	COVER, SIDE 1	1	
30	95807-06010	BOLT, FLANGE	3	
31	JR4-24313-00	PIPE 3	1	
32	90501-064L5	SPRING, COMPRESSION	1	
33	JR4-24314-00	PIPE 4	1	
34	3XJ-24380-00	PIPE JOINT ASSY	1	
35	90467-08017	CLIP	3	




Fig. 15

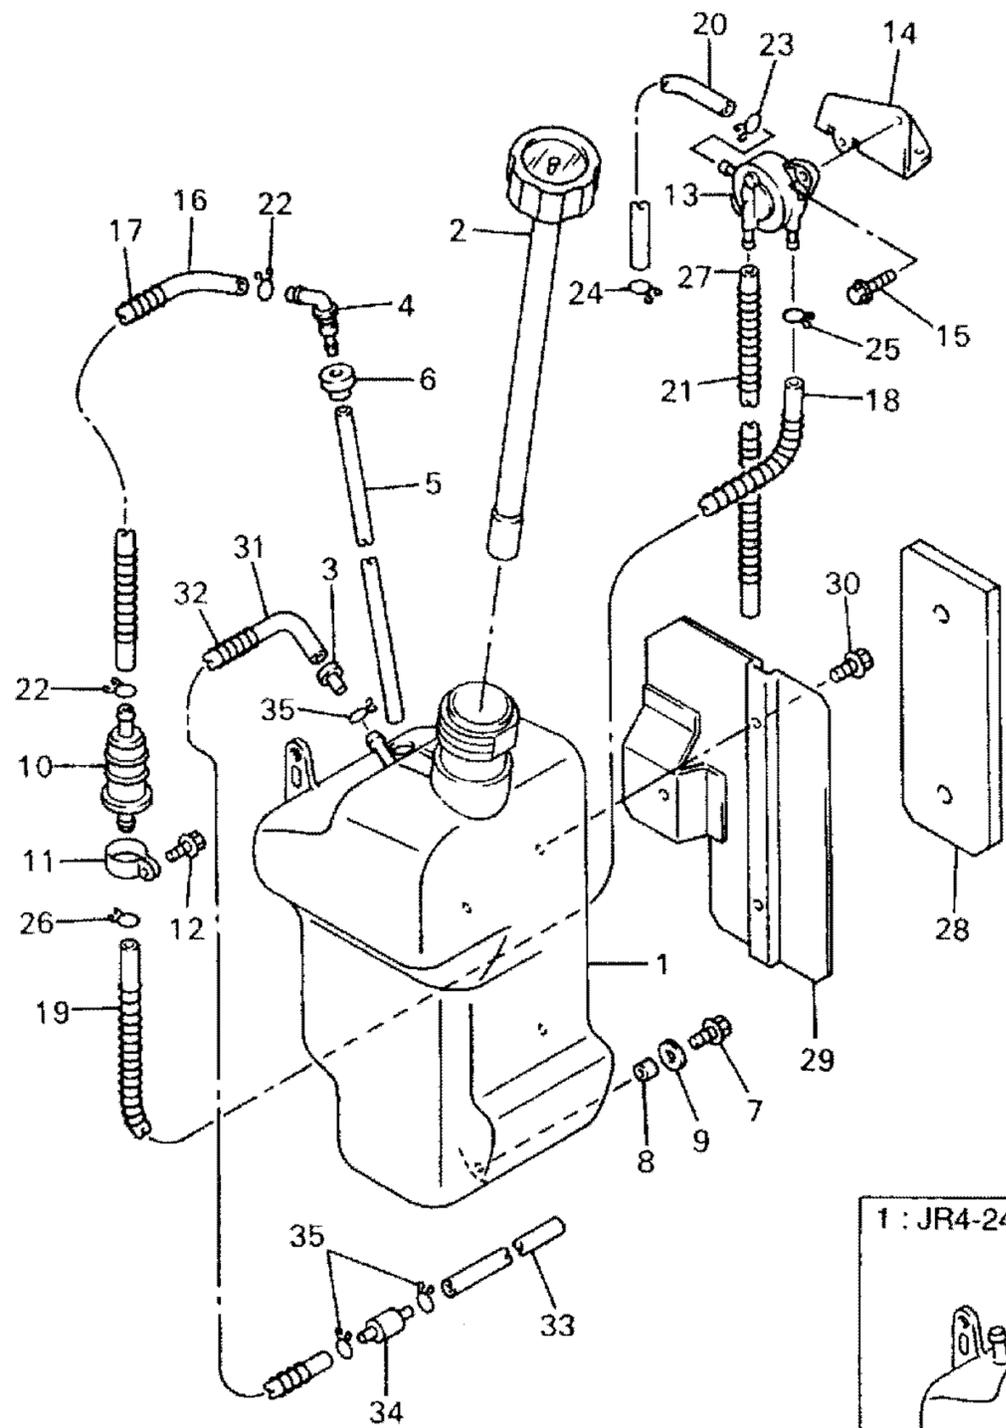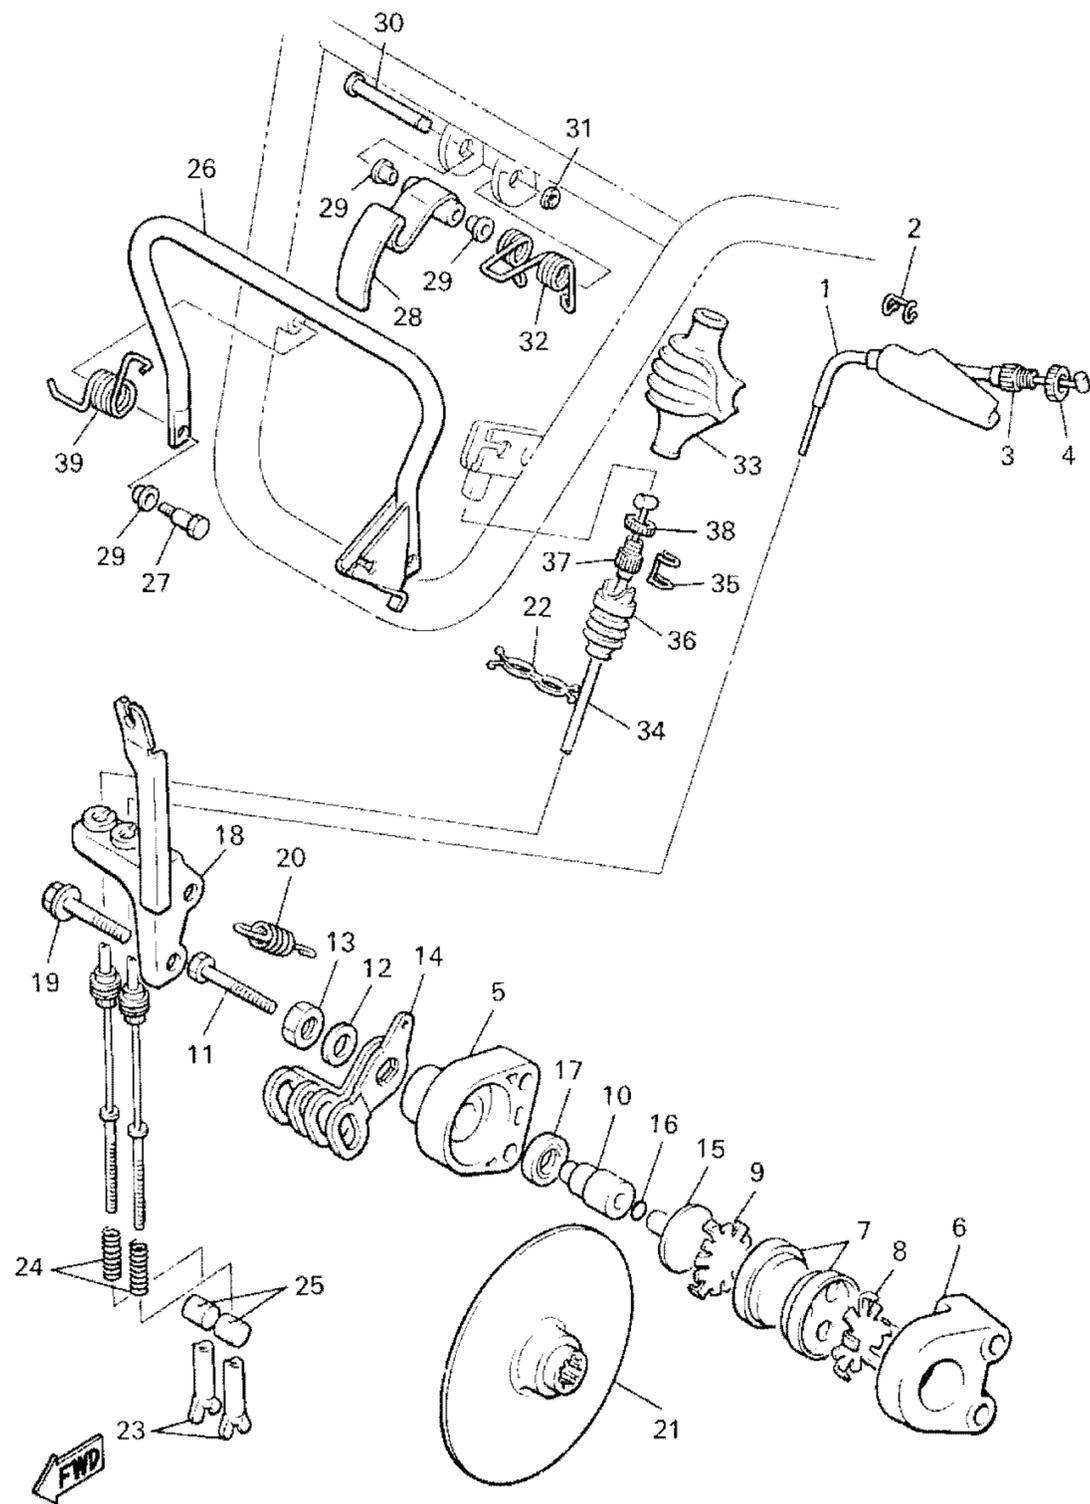

JR4010-8150


Ref. No.	Part No.	Part Name		Remarks
1	JR4-26340-00	CABLE, BRAKE	1	
2	90465-10314	CLAMP	1	
3	90123-08046	BOLT	1	
4	90179-08148	NUT	1	
5	5V6-25731-00	BODY, CALIPER 1	1	
6	J45-25741-00	BODY, CALIPER 2	1	
7	JR4-25732-00	PAD, CALIPER	2	
8	J45-25827-00	SHIM, CALIPER	1	
9	J45-25828-00	SHIM, CALIPER	1	
10	20E-25728-00	CAM	1	
11	90153-08062	SCREW, HEXAGON	1	
12	90201-08730	WASHER, PLATE	1	
13	90170-08361	NUT	1	
14	J45-25726-00	LEVER, BRAKE	1	
15	J45-25733-00	PLATE, BACK UP	1	
16	93210-07435	O-RING	1	
17	93102-15212	OIL SEAL	1	
18	JR4-26381-00	HOLDER, ADJUSTING	1	
19	90105-10358	BOLT, FLANGE	2	
20	90506-14397	SPRING, TENSION	1	
21	JR4-25711-00	DISC, BRAKE	1	
22	90464-10038	CLAMP	1	
23	20E-26343-00	NUT, ADJUSTING	2	
24	90501-102E9	SPRING, COMPRESSION	2	
25	90249-12008	PIN	2	
26	J45-25663-01	LEVER, PARKING BRAKE RELEASE	1	
27	90109-052E1	BOLT	2	
28	J45-25666-00	SECTOR, PARKING BRAKE	1	

Fig. 15

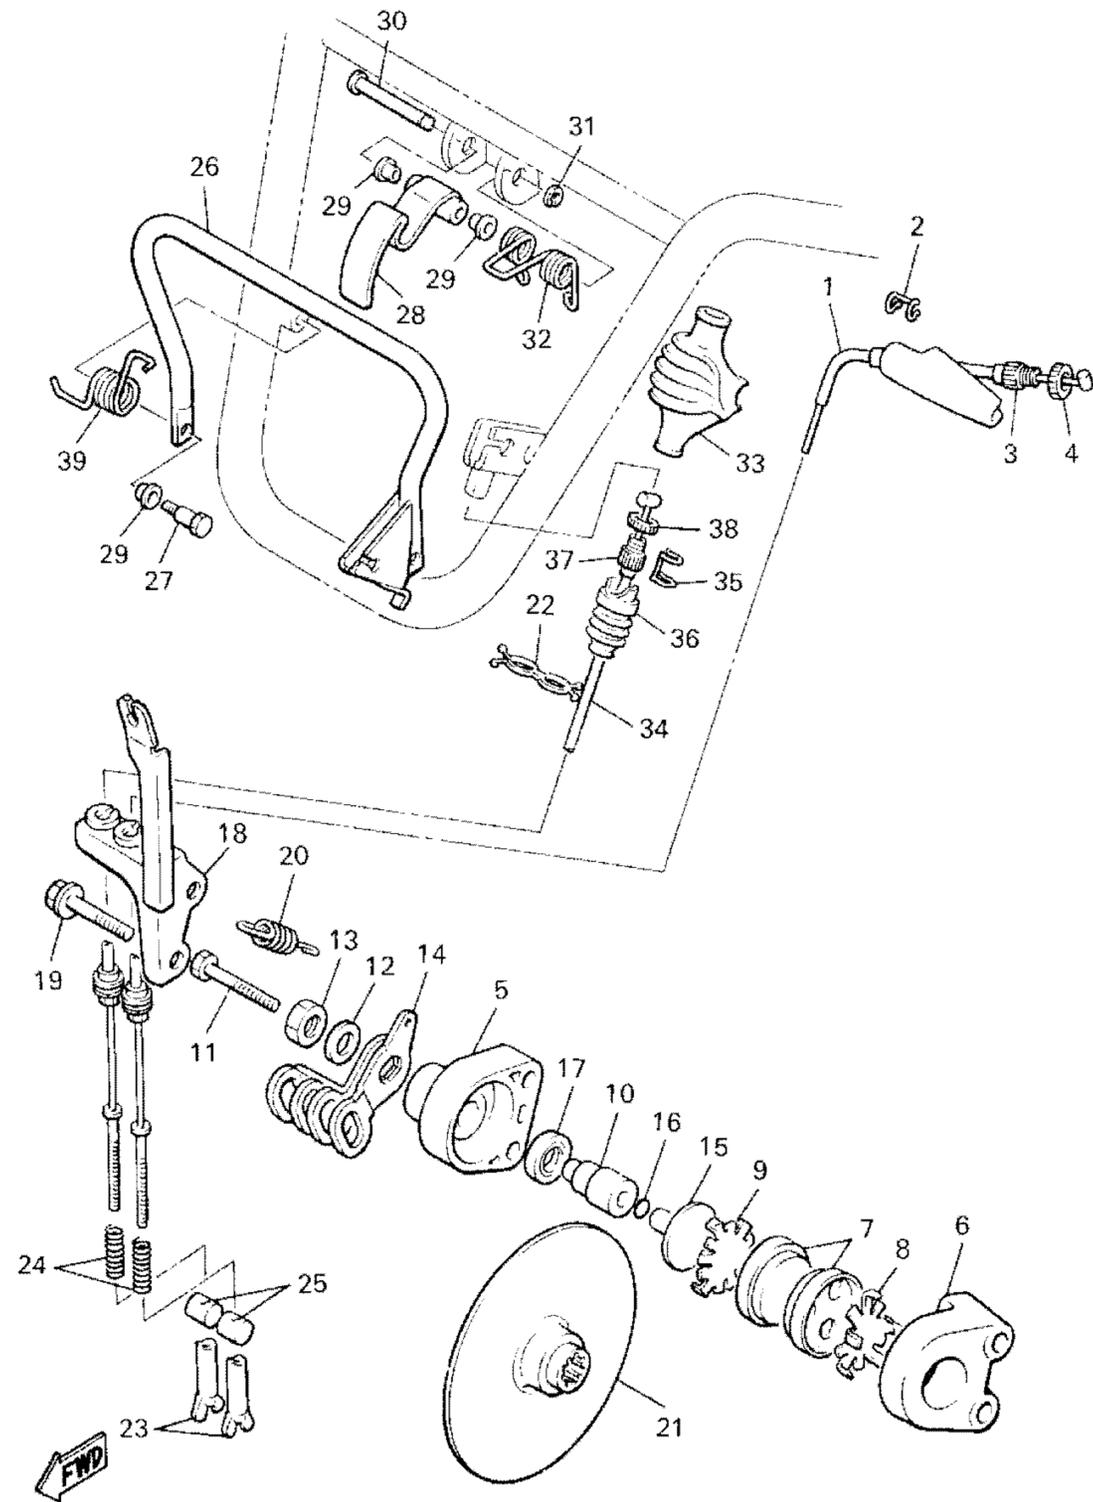

JR4010-8150

Ref. No.	Part No.	Part Name		Remarks
29	90387-064R7	COLLAR	4	
30	J45-78369-00	PIN, LEVER	1	
31	99080-05600	CIRCLIP	1	
32	90508-10719	SPRING, TORSION	1	
33	J45-26372-00	COVER, HANDLE LEVER 1	1	
34	JR4-26350-00	CABLE, BRAKE	1	
35	90465-10314	CLAMP	1	
36	1E6-26342-00	BOOT, CABLE	1	
37	90123-08046	BOLT	1	
38	90179-08148	NUT	1	
39	90508-231B9	SPRING, TORSION	1	

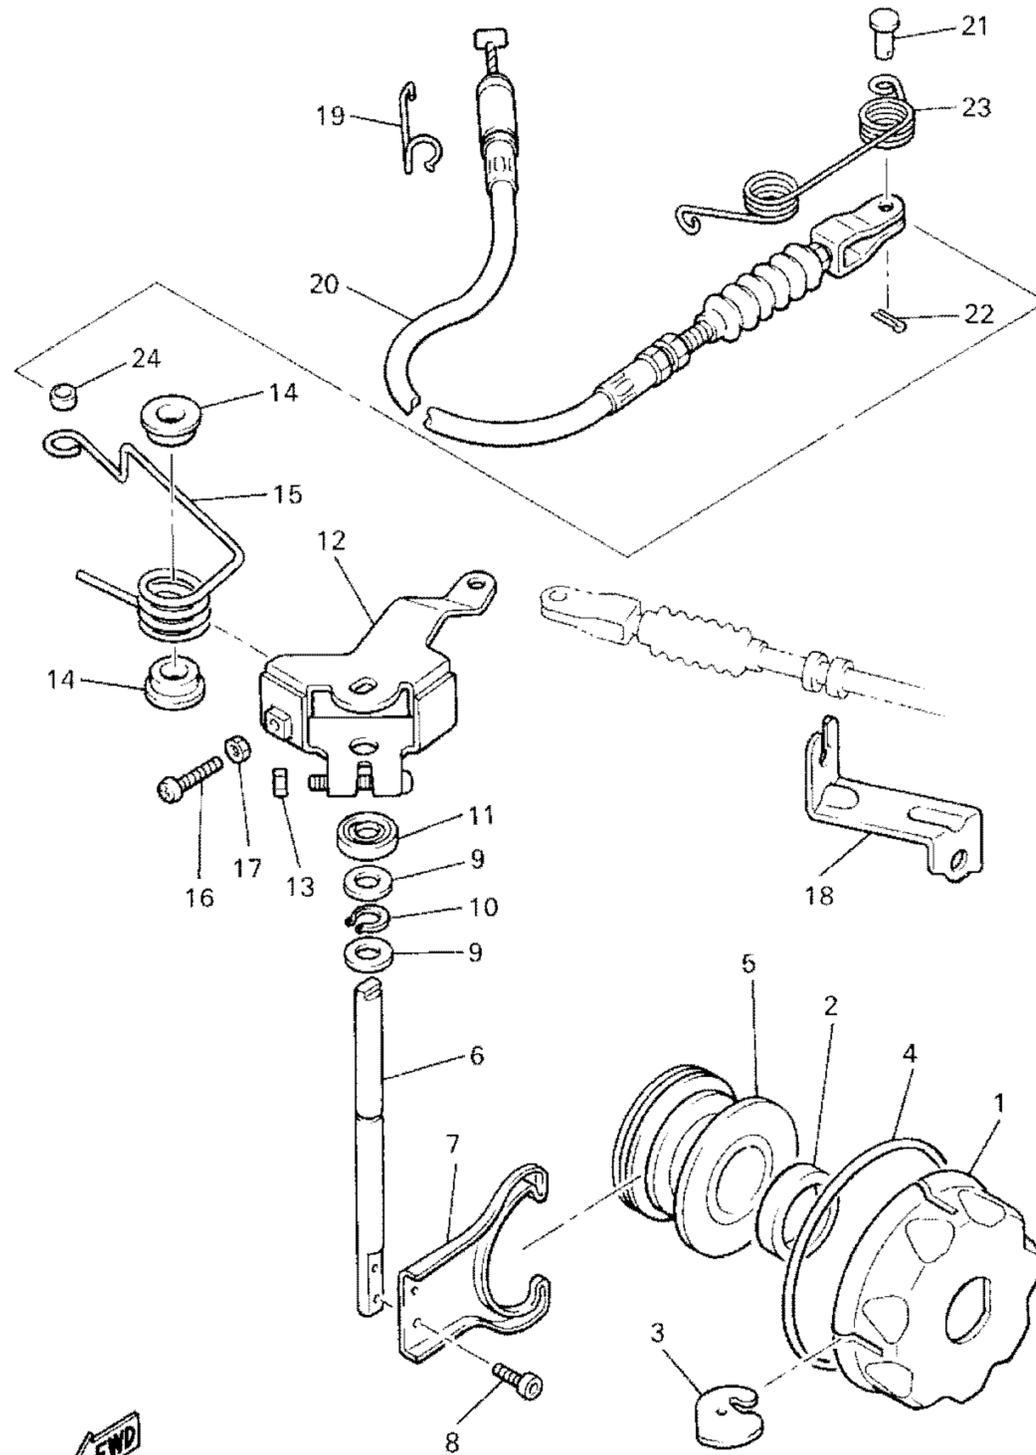

JR4010-8160

Fig. 16

Ref. No.	Part No.	Part Name		Remarks
1	J45-27912-00	RETAINER	1	
2	90387-176R1	COLLAR	1	
3	J10-27913-00	WEIGHT	4	
4	J10-27911-00	HOLDER	1	
5	JJ4-27927-00	LIFTER	1	
<hr/>				
6	J38-27921-00	SHAFT, GOVERNOR	1	
7	J10-27922-00	FORK, GOVERNOR	1	
8	91317-04008	BOLT	2	
9	90202-08110	WASHER, PLATE	2	
10	99001-06600	CIRCLIP	1	
<hr/>				
11	93104-08058	OIL SEAL	1	
12	J45-27951-00	LEVER, SPEED LIMITER	1	
13	95307-06600	NUT	1	
14	90386-08141	BUSH	2	
15	90508-352B6	SPRING, TORSION	1	
<hr/>				
16	J10-27959-00	SCREW, ADJUSTING	1	
17	95307-05700	NUT	1	
18	J45-27982-00	BRACKET, WIRE	1	
19	90465-10150	CLAMP	1	
20	JR4-26311-00	CABLE, THROTTLE 1	1	
<hr/>				
21	91701-05012	PIN	1	
22	90468-10049	CLIP	1	
23	90508-16725	SPRING, TORSION	1	
24	90560-05001	SPACER	1	
<hr/>				


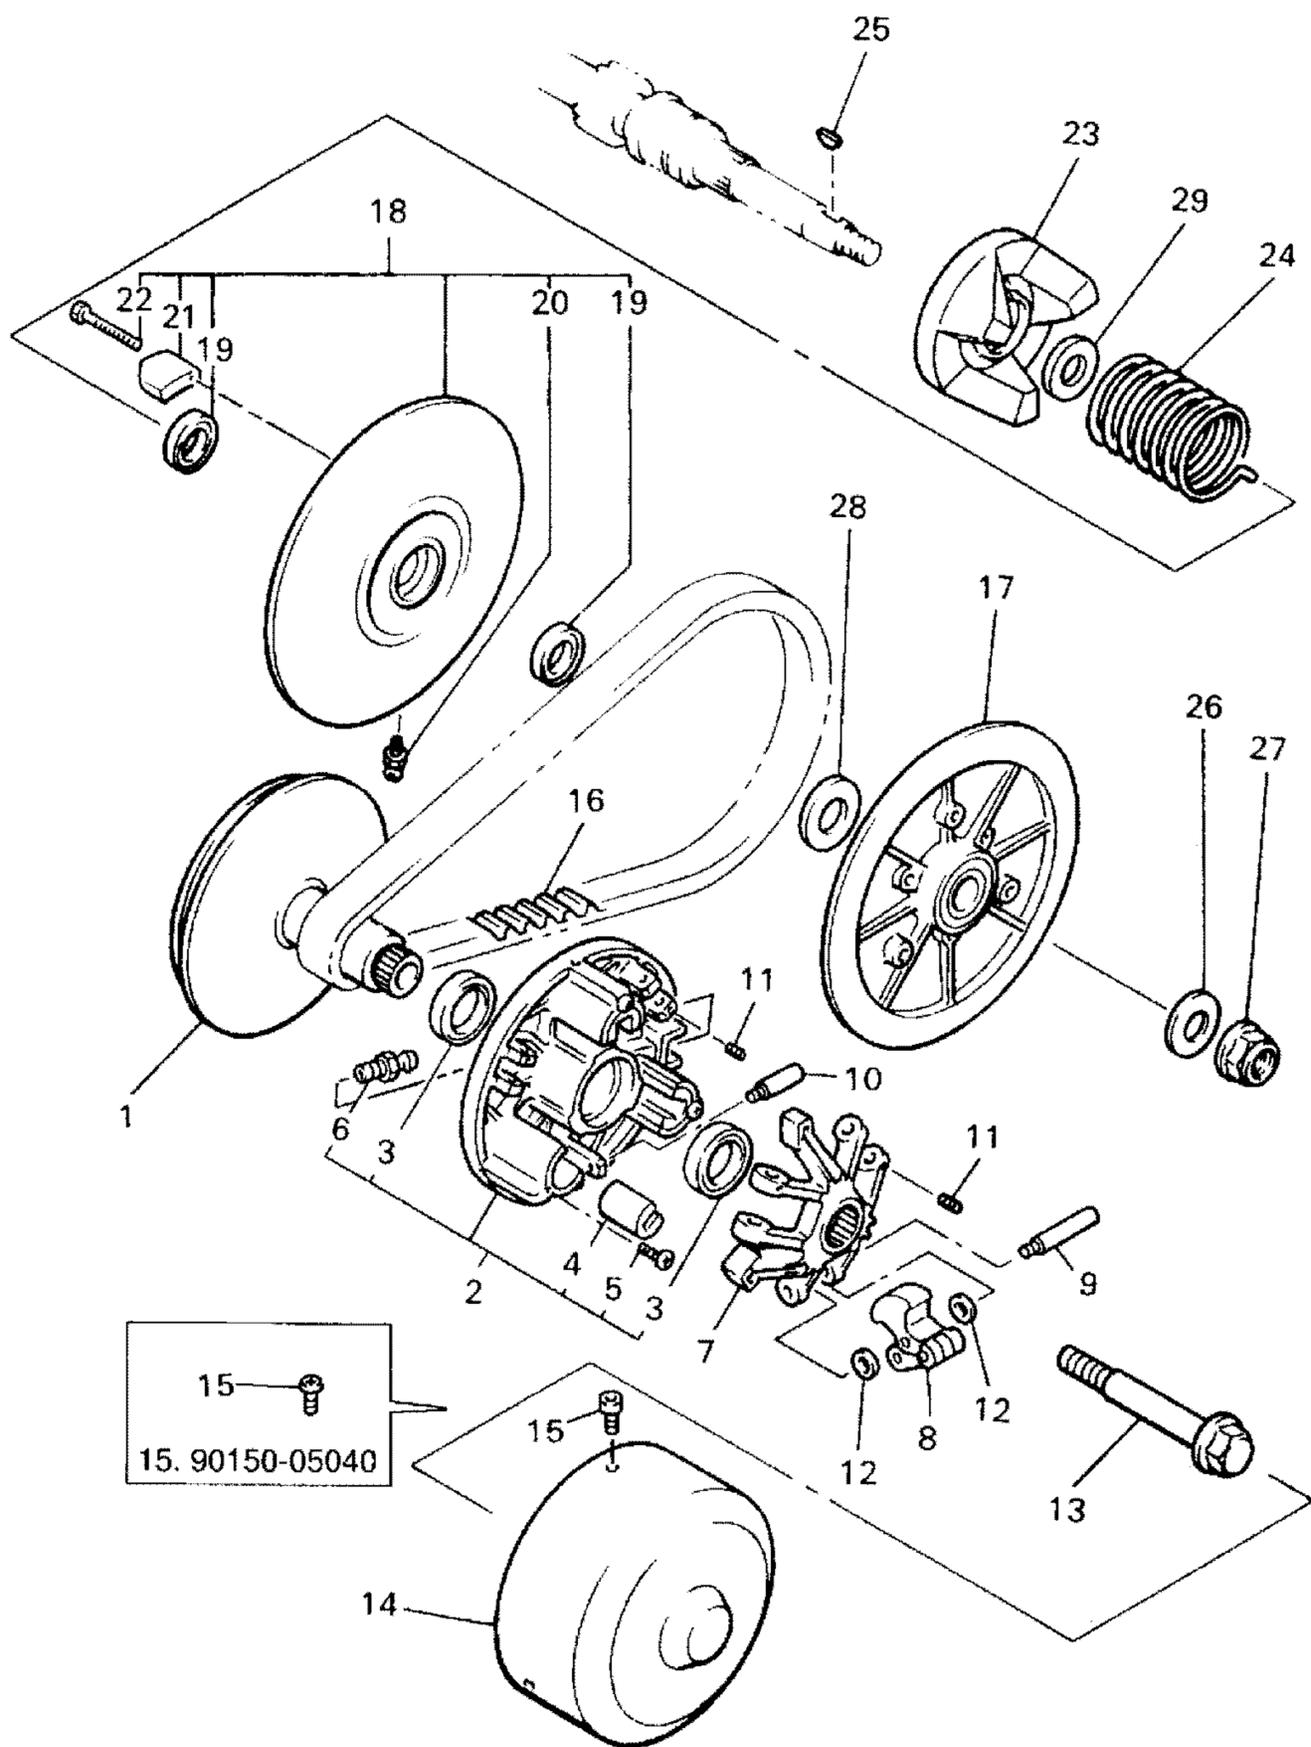


Fig. 17

Ref. No.	Part No.	Part Name		Remarks
1	J45-46210-00	PRIMARY FIXED SHEAVE COMP.	1	
2	JR4-46220-00	PRIMARY SLIDING SHEAVE COMP.	1	
3	93102-28457	OIL SEAL	2	
4	J45-46253-00	SLIDER	3	
5	98907-05008	SCREW, BIND	3	
<hr/>				
6	93700-06004	NIPPLE, GREASE	1	
7	JR4-46251-00	SPIDER	1	
8	JR4-46205-00	WEIGHT LINK ASSY	3	
9	JR4-46236-00	PIN, WEIGHT	3	
10	JR4-46237-00	PIN, WEIGHT 2	3	
<hr/>				
11	90113-04050	BOLT, SET	6	
12	90202-07164	WASHER, PLATE	6	
13	J45-46249-00	BOLT	1	
14	JJ4-46231-01	CAP	1	
15	90150-05040	SCREW, ROUND HEAD	3	100950マテ
	90110-05004	BOLT, HEXAGON SOCKET HEAD	3	100951ヨリ
16	JR4-46241-00	V-BELT	1	
17	J45-46260-00	SECONDARY FIXED SHEAVE COMP.	1	
18	JR4-46270-00	SECONDARY SLIDING SHEAVE COMP.	1	
19	93109-17072	OIL SEAL	2	
<hr/>				
20	93700-06004	NIPPLE, GREASE	1	
21	JF7-17688-00	SHOE, RAMP	3	
22	91317-04025	BOLT	3	
23	JF7-46284-00	SEAT, SECONDARY SPRING	1	
24	90508-382B7	SPRING, TORSION	1	
<hr/>				
25	90280-05022	KEY, WOODRUFF	1	
26	90201-12588	WASHER, PLATE	1	
27	95607-12200	NUT, SELF-LOCKING	1	




Fig. 18

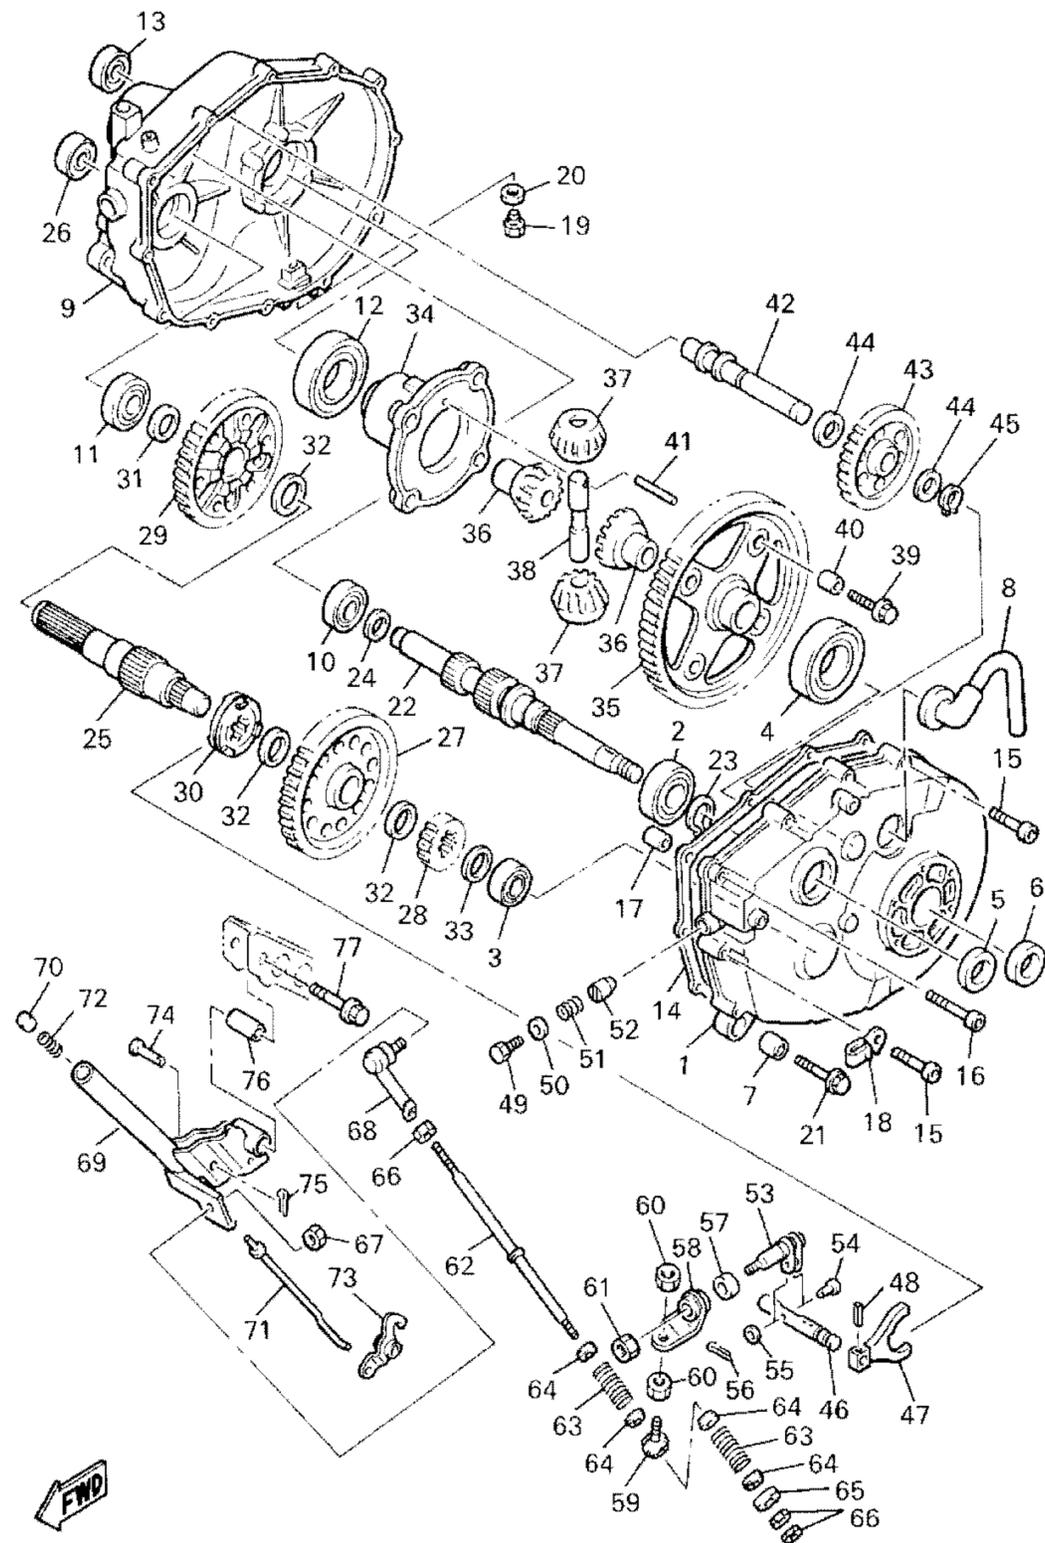

JR4010-8180

Ref. No.	Part No.	Part Name		Remarks
1	J45-46311-01	CASE, TRANSMISSION 1	1	
2	93306-20511	BEARING	1	
3	93306-20301	BEARING	1	
4	93306-00704	BEARING	1	
5	93102-25334	OIL SEAL	1	
<hr/>				
6	93102-22189	OIL SEAL	1	
7	164-22216-00	BUSH, REAR SHOCK ABSORBER	1	
8	JN3-47559-00	CAP 2	1	
9	J45-46312-01	CASE, TRANSMISSION 2	1	
10	93306-20203	BEARING	1	
<hr/>				
11	93306-20401	BEARING	1	
12	93306-00704	BEARING	1	
13	93102-22189	OIL SEAL	1	
14	J45-46319-01	GASKET	1	
15	91317-06035	BOLT	10	
<hr/>				
16	91317-06045	BOLT	2	
17	99530-10114	PIN, DOWEL	2	
18	90465-08125	CLAMP	1	
19	90340-14036	PLUG, STRAIGHT SCREW	1	
20	90430-14043	GASKET	1	
<hr/>				
21	90105-08121	BOLT, FLANGE	1	
22	JR4-46321-00	SHAFT, INPUT	1	
23	99009-25400	CIRCLIP	1	
24	90201-157F6	WASHER, PLATE	1	
25	J45-46351-01	SHAFT, COUNTER	1	
<hr/>				
26	93102-20447	OIL SEAL	1	
27	JR4-46361-00	GEAR, COUNTER 1	1	
28	J45-46362-00	GEAR, COUNTER 2	1	


Fig. 18

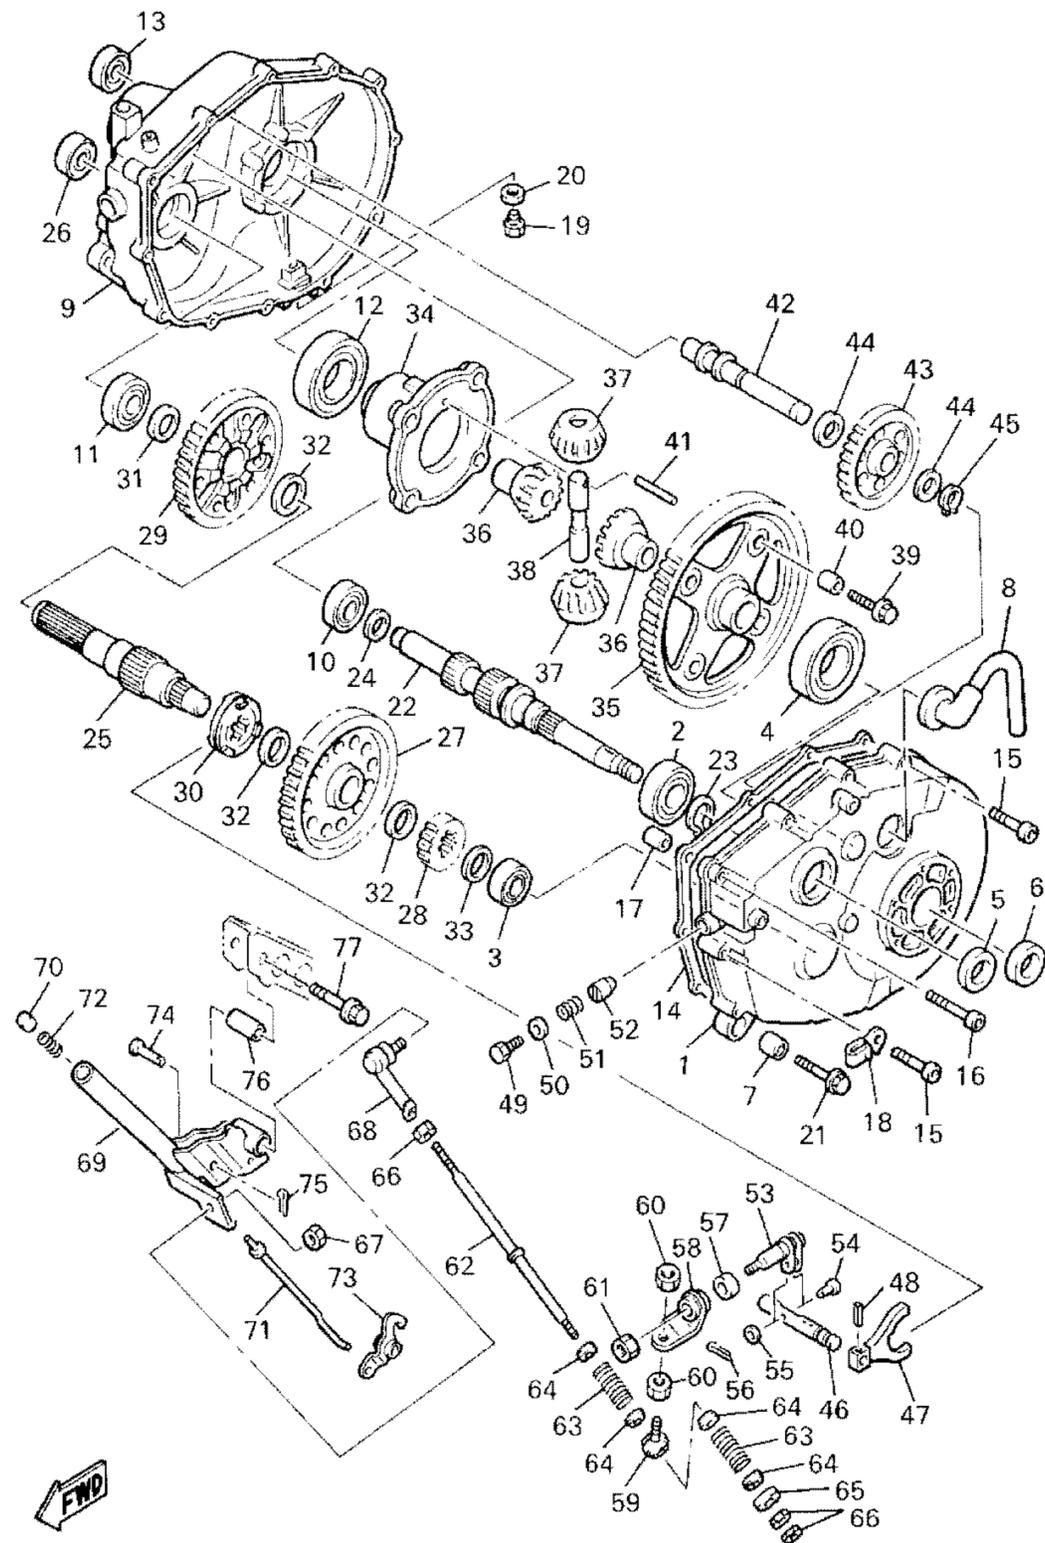

JR4010-8180

Ref. No.	Part No.	Part Name		Remarks
29	J45-46363-00	GEAR, REVERSE	1	
30	J38-4636A-00	DOG, CLUTCH	1	
31	90201-20611	WASHER, PLATE	1	
32	90201-257J2	WASHER, PLATE	3	
33	90201-17713	WASHER, PLATE	1	
<hr/>				
34	J45-46411-00	CASE, DIFFERENTIAL	1	
35	J45-46421-00	GEAR, RING	1	
36	J38-46414-00	GEAR, DIFFERENTIAL SIDE	2	
37	J38-46415-00	PINION, DIFFERENTIAL	2	
38	J38-46417-02	PIN, DIFFERENTIAL	1	
<hr/>				
39	90105-08431	BOLT, FLANGE	4	
40	91812-12003	PIN, DOWEL	2	
41	91609-40036	PIN, SPRING	1	
42	J45-46348-00	SHAFT 2	1	
43	J45-46356-00	GEAR, IDLER	1	
<hr/>				
44	90201-157F6	WASHER, PLATE	2	
45	99009-15400	CIRCLIP	1	
46	J45-4633A-00	BAR, SHIFT FORK GUIDE	1	
47	J45-46338-00	FORK, SHIFT	1	
48	91609-40020	PIN, SPRING	1	
<hr/>				
49	90101-08344	BOLT	1	
50	90430-08119	GASKET	1	
51	90501-10060	SPRING, COMPRESSION	1	
52	90249-07190	PIN	1	
53	J45-46384-00	LEVER, SHIFT 3	1	
<hr/>				
54	91701-06022	PIN	1	
55	92907-06200	WASHER	1	
56	91401-20012	PIN, COTTER	1	


Fig. 18

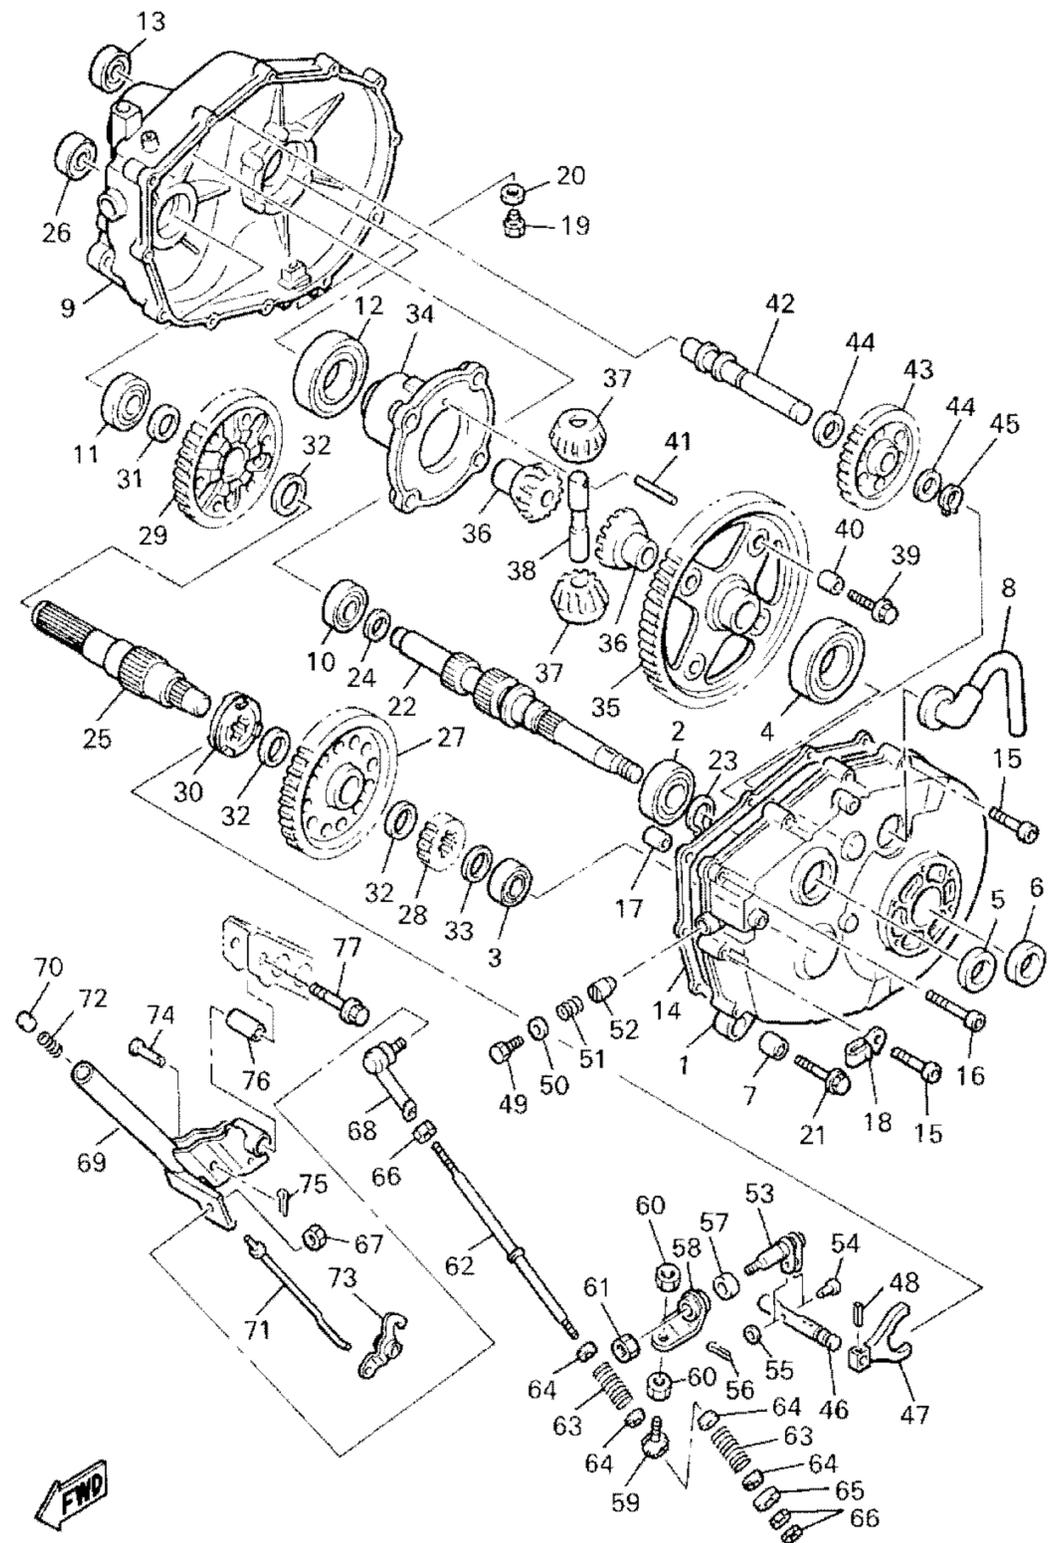

JR4010-8180

Ref. No.	Part No.	Part Name		Remarks
57	93102-12224	OIL SEAL	1	
58	J45-46383-00	LEVER, SHIFT 2	1	
59	J45-23841-00	JOINT, UNIVERSAL 1	1	
60	95307-08700	NUT	2	
61	95607-08100	NUT, U	1	
<hr/>				
62	J45-41241-00	ROD, LINK	1	
63	90501-163E7	SPRING, COMPRESSION	2	
64	90387-083R9	COLLAR	4	
65	90201-06727	WASHER, PLATE	1	
66	95317-06700	NUT	3	
<hr/>				
67	95617-06100	NUT, U	1	
68	J45-23845-00	JOINT, UNIVERSAL 2	1	
69	JR4-46382-00	LEVER, SHIFT 1	1	
70	J45-46381-01	KNOB, SHIFT	1	
71	JR4-46385-00	PLUNGER, SHIFT	1	
<hr/>				
72	90501-104E6	SPRING, COMPRESSION	1	
73	J45-46386-00	ARM, SHIFT	1	
74	91701-06028	PIN	1	
75	91401-20012	PIN, COTTER	1	
76	90387-083R8	COLLAR	1	
<hr/>				
77	95807-08045	BOLT, FLANGE	1	
<hr/>				

Fig. 19

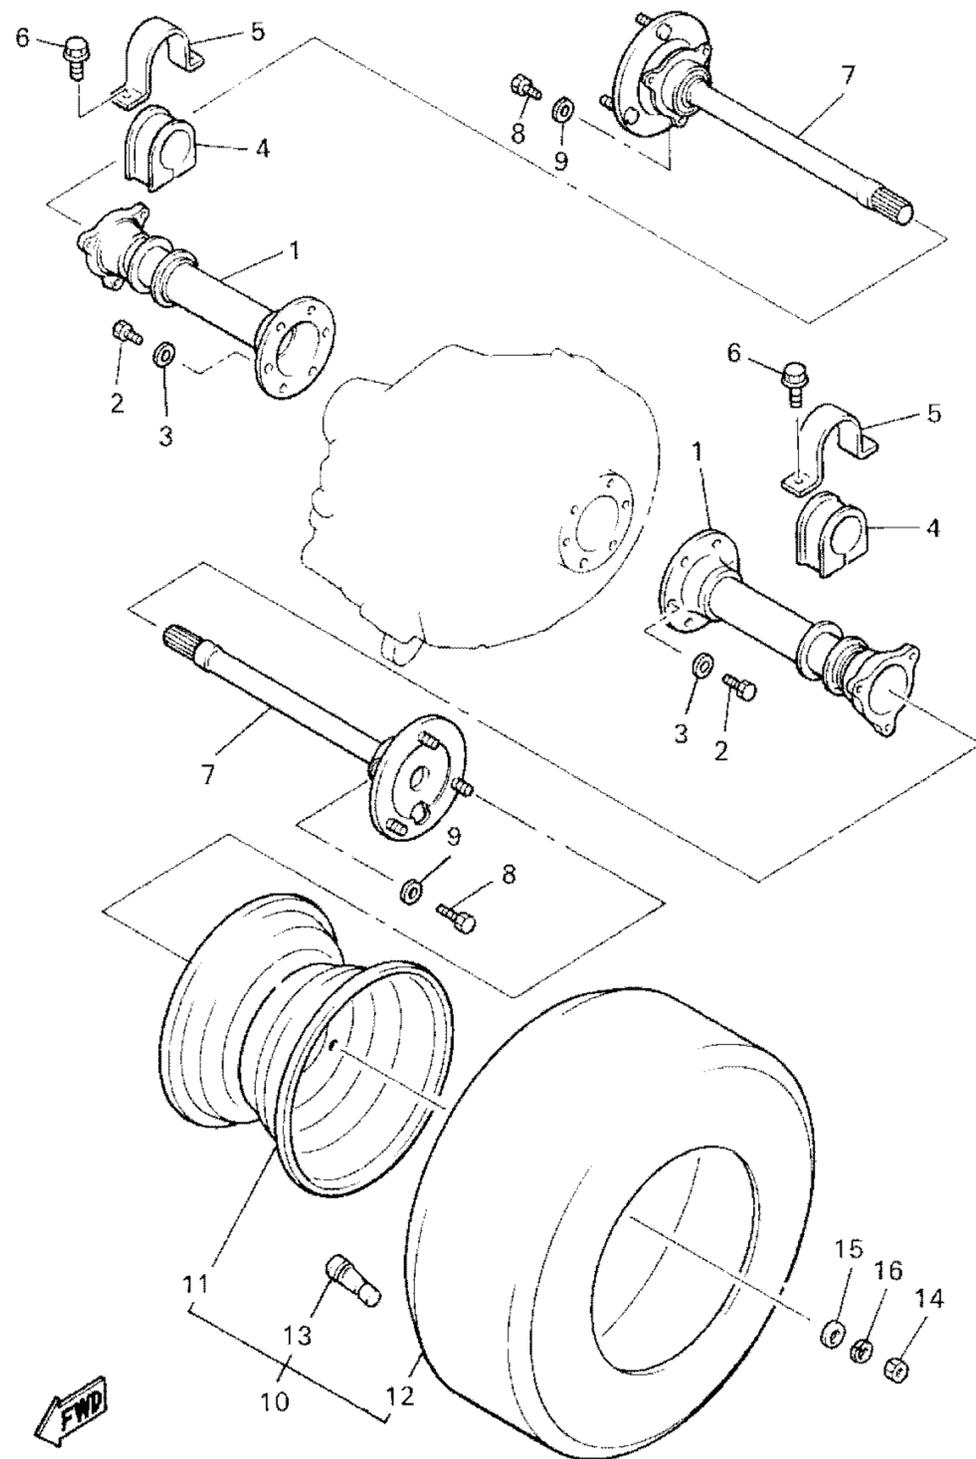

JR4010-8190

Ref. No.	Part No.	Part Name		Remarks
1	J45-46540-00	REAR AXLE HOUSING COMP.	2	
2	97027-08020	BOLT, HEXAGON	12	
3	92907-08600	WASHER, PLATE	12	
4	J45-46559-00	DAMPER	2	
5	J45-46555-00	BRACKET 2	2	
<hr/>				
6	95827-10020	BOLT, FLANGE	4	
7	J45-46510-00	REAR AXLE SHAFT COMP.	2	
8	97027-08016	BOLT, HEXAGON	6	
9	92907-08600	WASHER, PLATE	6	
10	JR4-25300-00	REAR WHEEL ASSY	2	
<hr/>				
11	JR4-25390-00	REAR WHEEL COMP.	1	
12	94165-080K1	.TIRE (16X6.50-8 2PR)	1	DUNLOP
13	93900-00022	VALVE, RIM (TR413)	1	タイヘイヨウ
14	95317-10600	NUT	6	
15	92907-10200	WASHER, PLAIN	6	
<hr/>				
16	92907-10100	WASHER, SPRING	6	
<hr/>				
<hr/>				



Fig. 21

Ref. No.	Part No.	Part Name	Remarks
1	JR4-78111-00	PANEL, BODY SHELL	1 100750マテ
	JR4-78111-01	PANEL, BODY SHELL	1 100751ヨリ
2	JR4-78112-00	PANEL, BODY SHELL	1
3	JR4-78114-00	PANEL, FRONT	1
4	98980-06016	SCREW, BIND	2
-----			
5	90201-065F3	WASHER, PLATE	2
6	JR4-78135-00	BRACKET 1	2
7	90267-48059	RIVET, BLIND (4.8X12.3)	4
8	90159-06078	SCREW, WITH WASHER	5
9	90387-064T3	COLLAR	4
-----			
10	90202-11029	WASHER, PLATE	4
11	98980-06016	SCREW, BIND	1
12	90201-065F3	WASHER, PLATE	1
13	90183-06023	NUT, SPRING	2
14	90480-10334	GROMMET	2
-----			
15	JR4-78272-00	COVER, FUEL INLET	1
16	JR4-78255-00	PAD, SILENCER 5	1 100900マテ
	JR4-78255-01	PAD, SILENCER 5	1 100901ヨリ
17	JR4-7825J-00	PAD, SILENCER 15	2 100900マテ
	JR4-7825J-00	PAD, SILENCER 15	2 100901ヨリ
-----			
18	JR4-7825K-00	PAD, SILENCER 16	1
19	JR4-78256-00	PAD, SILENCER 6	1
20	JR4-78258-00	PAD, SILENCER 8	1
21	JR4-7825L-00	PAD, SILENCER 17	1
22	JR4-7825M-00	PAD, SILENCER 18	1
-----			
23	JR4-7826A-00	PAD, BODY PROTECT 1	1
24	J45-78259-00	PAD, SILENCER 9	1
25	JR4-7825A-00	PAD, SILENCER 10	1 100900マテ

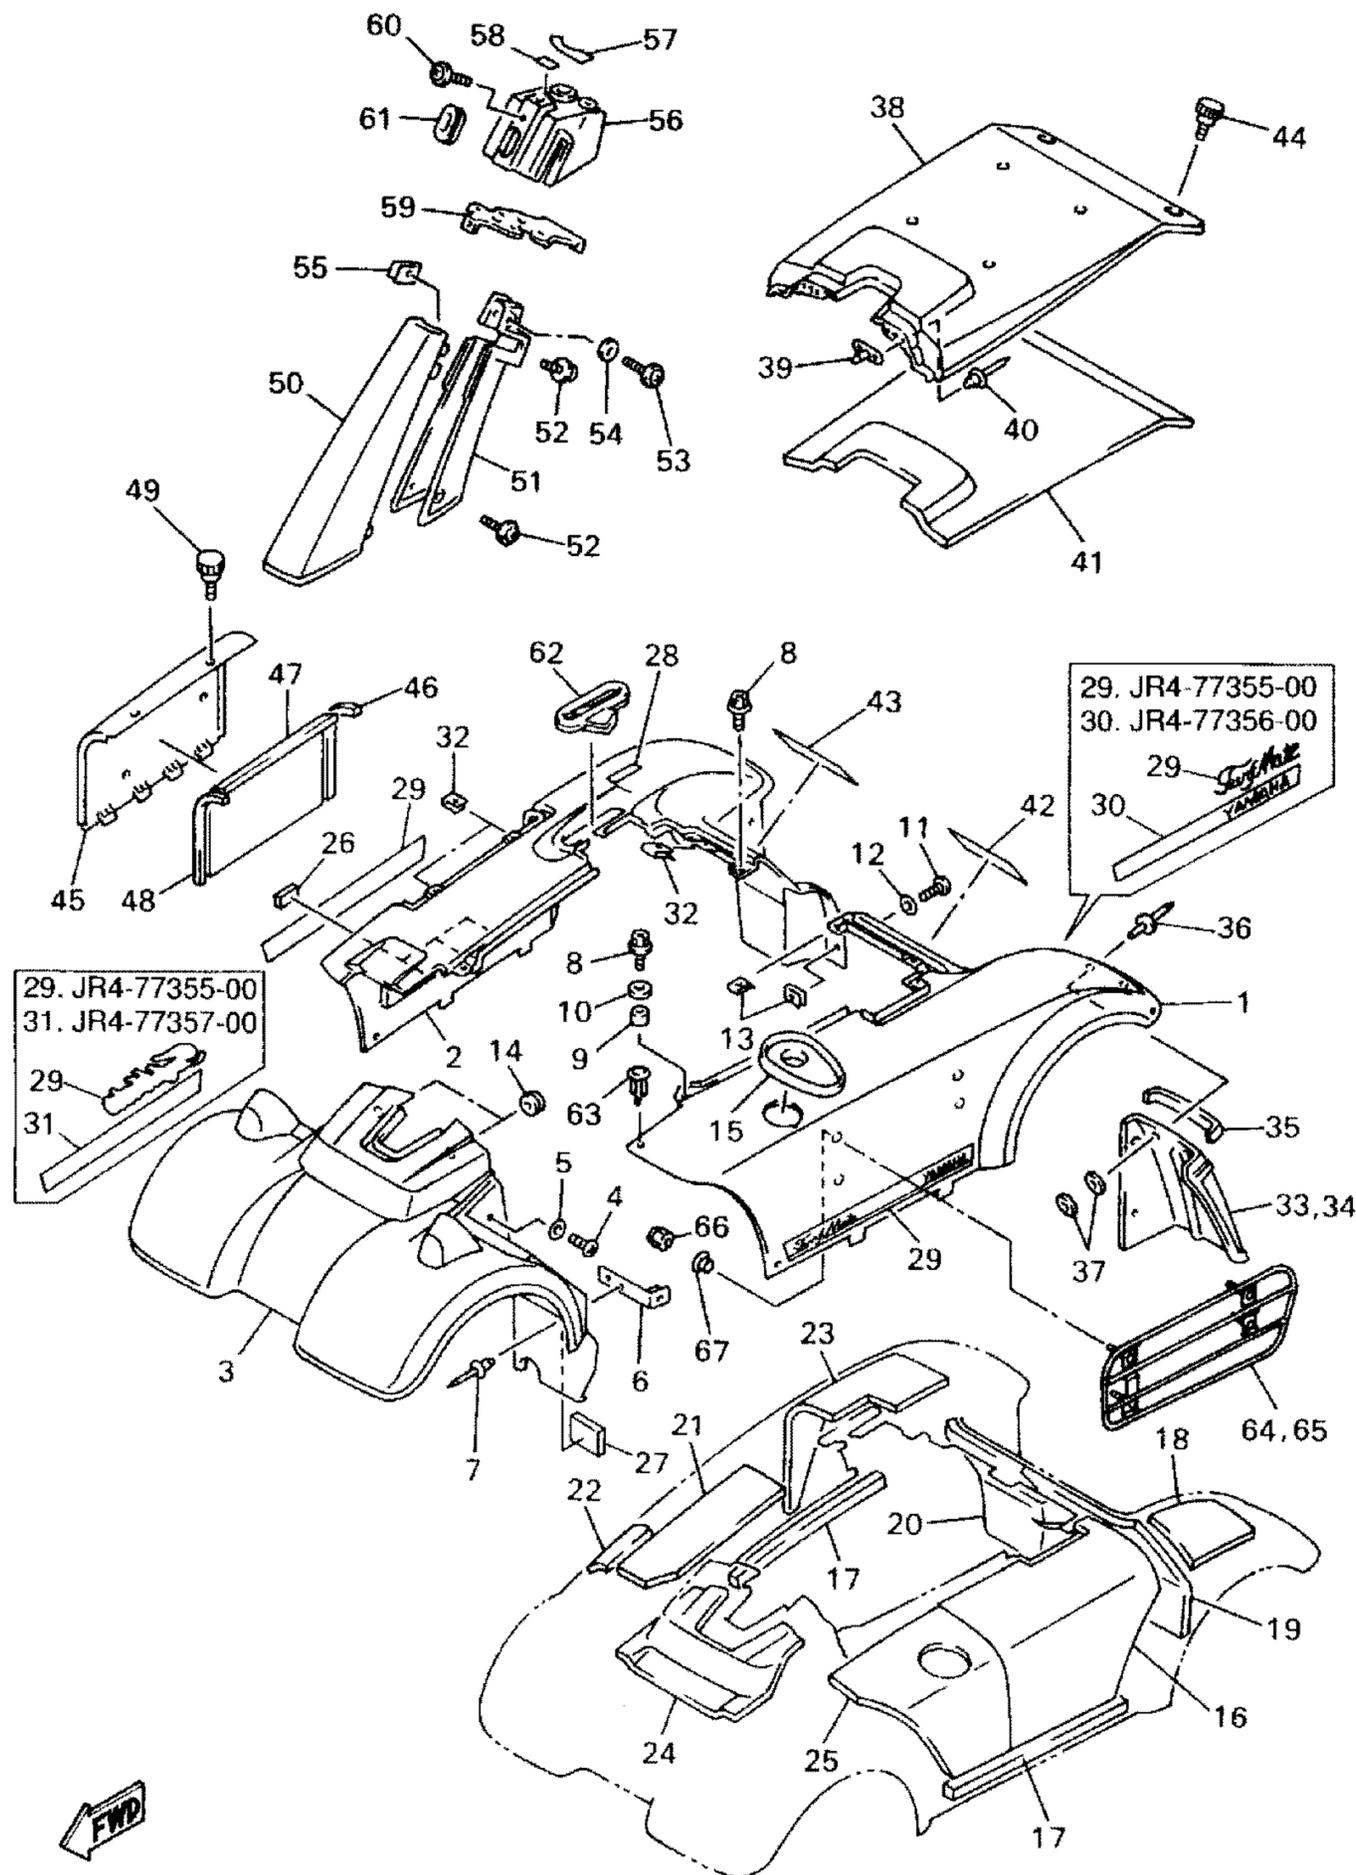


Fig. 21

Ref. No.	Part No.	Part Name		Remarks
25	JR4-7825A-01	PAD, SILENCER 10	1	100901ヨリ
26	JR4-78225-00	SPACER, HINGE	3	
27	JR4-78254-01	PAD, SILENCER 4	1	
28	JR4-77762-01	LABEL, WARNING 2	1	
29	JR4-77355-00	EMBLEM 5	2	100950マテ
	JR4-77358-00	EMBLEM 8	2	100951ヨリ
30	JR4-77356-00	EMBLEM 6	1	100950マテ
31	JR4-77357-00	EMBLEM 7	1	100950マテ
32	90183-05024	NUT, SPRING	4	
33	J45-78197-01	FLAP, REAR FENDER	1	
34	J45-78199-01	FLAP, REAR 2	1	
35	J45-78159-00	SEAL, INSPECTION LID	2	
36	90267-48040	RIVET, BLIND	10	
37	90201-04325	WASHER, PLATE	20	
38	JR4-7811T-00	LID 1	1	
39	JR4-7813R-00	BRACKET 6	2	
40	90267-40054	RIVET, BLIND	4	
41	JR4-78257-00	PAD, SILENCER 7	1	100900マテ
	JR4-78257-01	PAD, SILENCER 7	1	100901ヨリ
42	JR4-77764-01	LABEL, WARNING 4	1	
43	JR4-77768-01	LABEL, WARNING	1	
44	4K3-21714-00	KNOB, SIDE COVER 1	2	
45	JR4-7811U-00	LID 2	1	
46	J45-78159-00	SEAL, INSPECTION LID	1	
47	JR4-7825G-00	PAD, SILENCER 13	1	
48	JR4-78159-00	SEAL, INSPECTION LID	1	
49	4K3-21714-00	KNOB, SIDE COVER 1	2	
50	J45-77732-00	COVER, STEERING SHAFT 1	1	



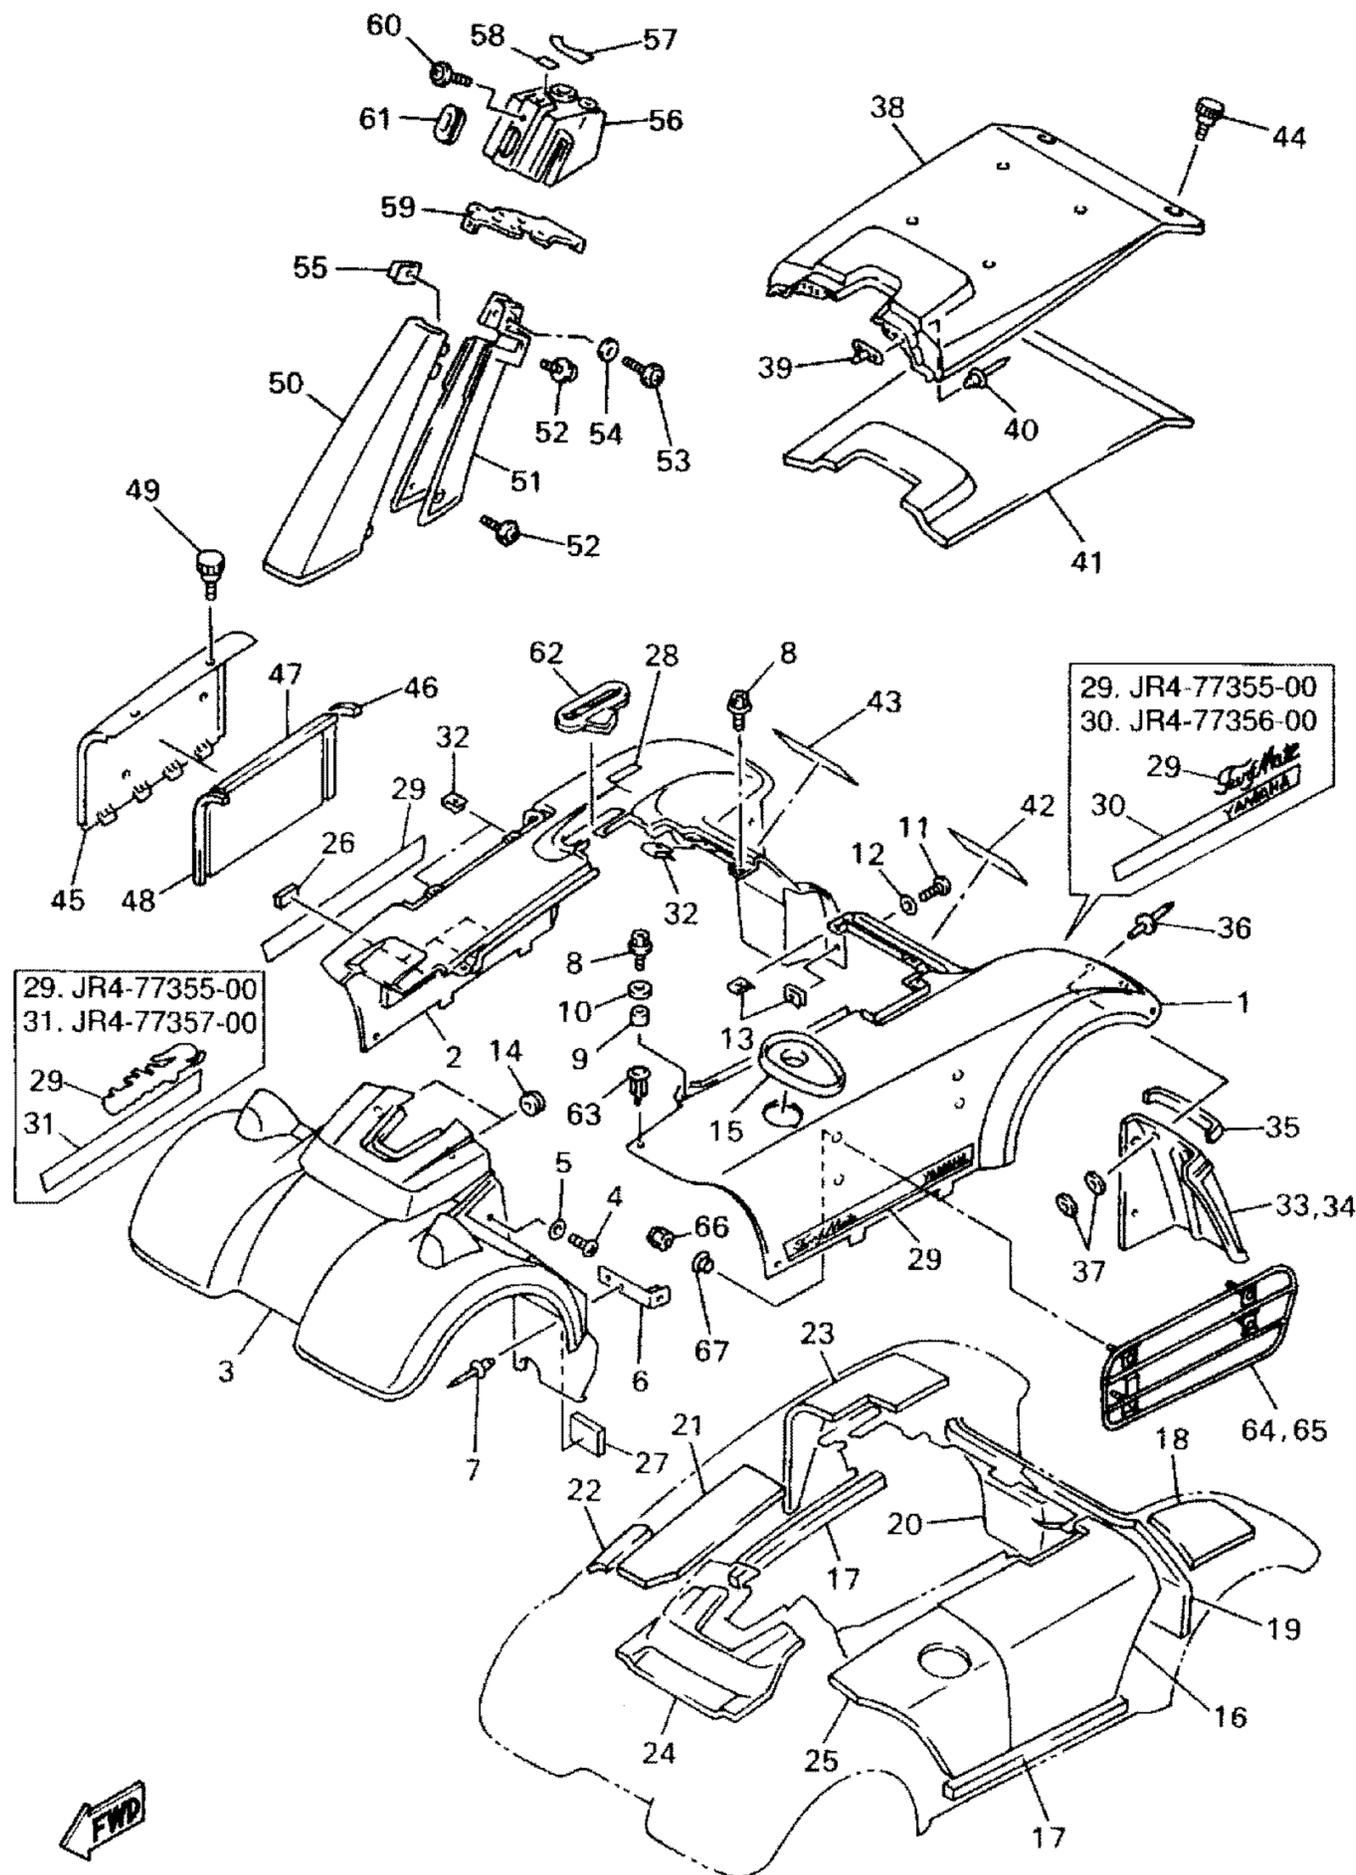


Fig. 21

Ref. No.	Part No.	Part Name	Quantity	Remarks
51	J45-77733-00	COVER, STEERING SHAFT 2	1	
52	90159-05083	SCREW, WITH WASHER	3	
53	97707-50512	SCREW, TAPPING	2	
54	90201-05033	WASHER, PLATE	2	
55	90183-05042	NUT, SPRING	2	
<hr/>				
56	J45-77711-00	PANEL, INSTRUMENT	1	
57	J45-77763-10	LABEL, WARNING 3	1	
58	J45-77767-00	LABEL, WARNING 7	1	
59	J45-7813L-00	BRACKET 5	1	
60	90159-05083	SCREW, WITH WASHER	3	
<hr/>				
61	90480-01458	GROMMET	1	
62	JR4-78273-00	COVER, HOLE	1	
63	90269-06083	RIVET	1	
64	JR4-7811V-00	PROTECTOR 1 (L.H)	1	(L.H) 100350マテ
	JR4-7811V-10	PROTECTOR 1 (L.H)	1	(L.H) 100351ヨリ
<hr/>				
65	JR4-7811W-00	PROTECTOR 2 (R.H)	1	(R.H) 100350マテ
	JR4-7811W-10	PROTECTOR 2 (R.H)	1	(R.H) 100351ヨリ
66	95707-06300	NUT, NYLON	8	
67	90387-062M9	COLLAR	8	
<hr/>				

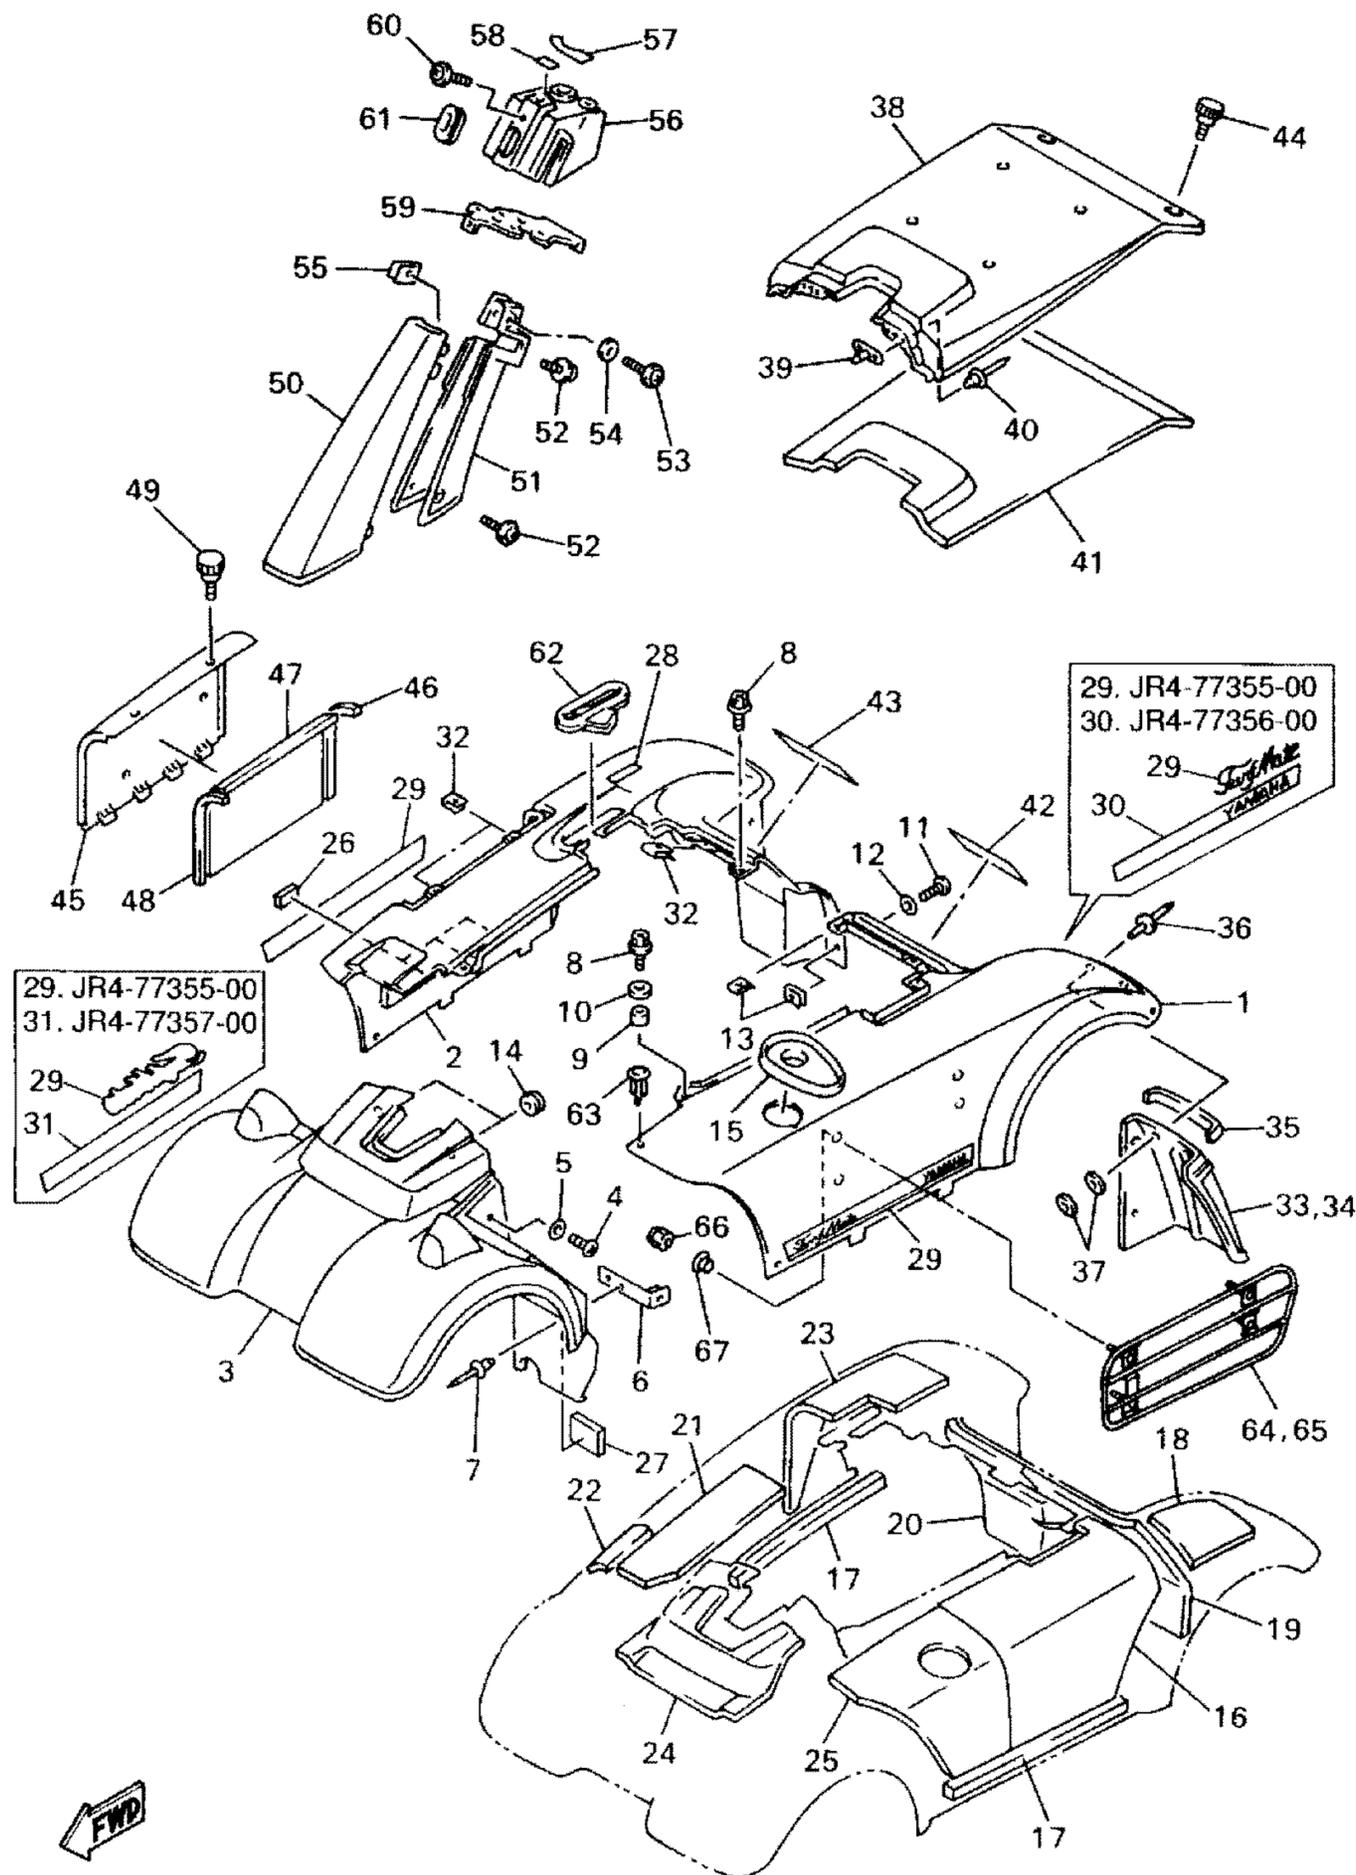


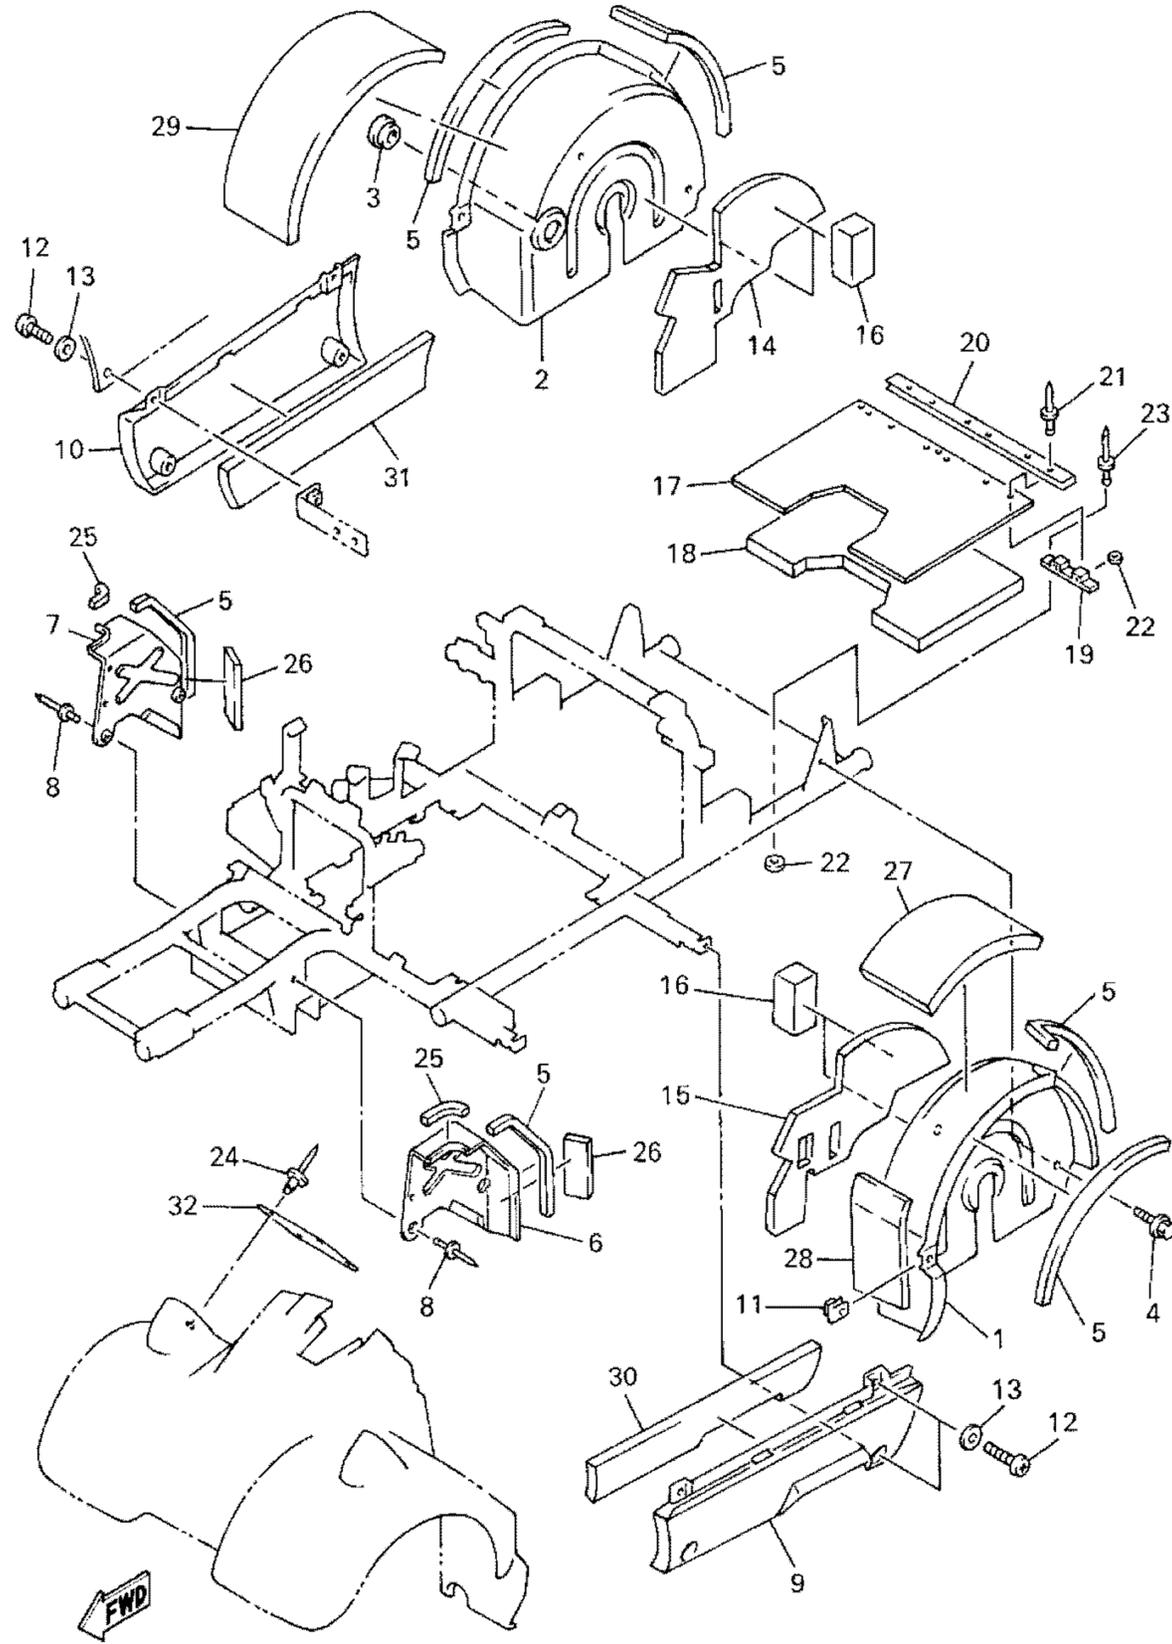

JR4010-8220

Fig. 22

Ref. No.	Part No.	Part Name		Remarks
1	JR4-78191-00	PANEL, REAR FENDER 1	1	
2	JR4-78192-00	PANEL, REAR FENDER 2	1	
3	90480-30167	GROMMET	1	
4	90119-06079	BOLT, WITH WASHER	4	
5	JR4-7814E-00	SEAL, BODY SIDE 1	6	
6	JR4-7819L-00	PANEL, FRONT FENDER 1	1	
7	JR4-7819M-00	PANEL, FRONT FENDER 2	1	
8	90267-48104	RIVET, BLIND (4.8X12.4 BLACK)	4	
9	JR4-78183-00	PLATE, SIDE SILL (L.H)	1	
10	JR4-78184-00	PLATE, SIDE SILL (R.H)	1	
11	90183-06023	NUT, SPRING	2	
12	98980-06016	SCREW, BIND	8	
13	90201-065F3	WASHER, PLATE	8	
14	J45-78252-00	PAD, SILENCER 2	1	
15	J45-78253-00	PAD, SILENCER 3	1	
16	J45-7825E-00	PAD, SILENCER 11	4	
17	JR4-78231-00	MAT, MAIN FLOOR 1	1	
18	JR4-78232-00	MAT, MAIN FLOOR 2	1	
19	JR4-27414-00	DAMPER, FOOTREST	3	
20	JR4-78181-00	PLATE 1	1	
21	90267-48188	RIVET, BLIND	6	
22	90201-05032	WASHER, PLATE	9	
23	90267-47150	RIVET, BLIND	9	
24	90267-48193	RIVET, BLIND (4.7X19.5 SILVER)	4	
25	JR4-78247-00	SEAL 3	2	
26	JR4-7825N-00	PAD, SILENCER 19	2	
27	JR4-7826L-00	PAD, BODY PROTECT 8	1	
28	JR4-7826G-01	PAD, BODY PROTECT 4	1	100900マテ

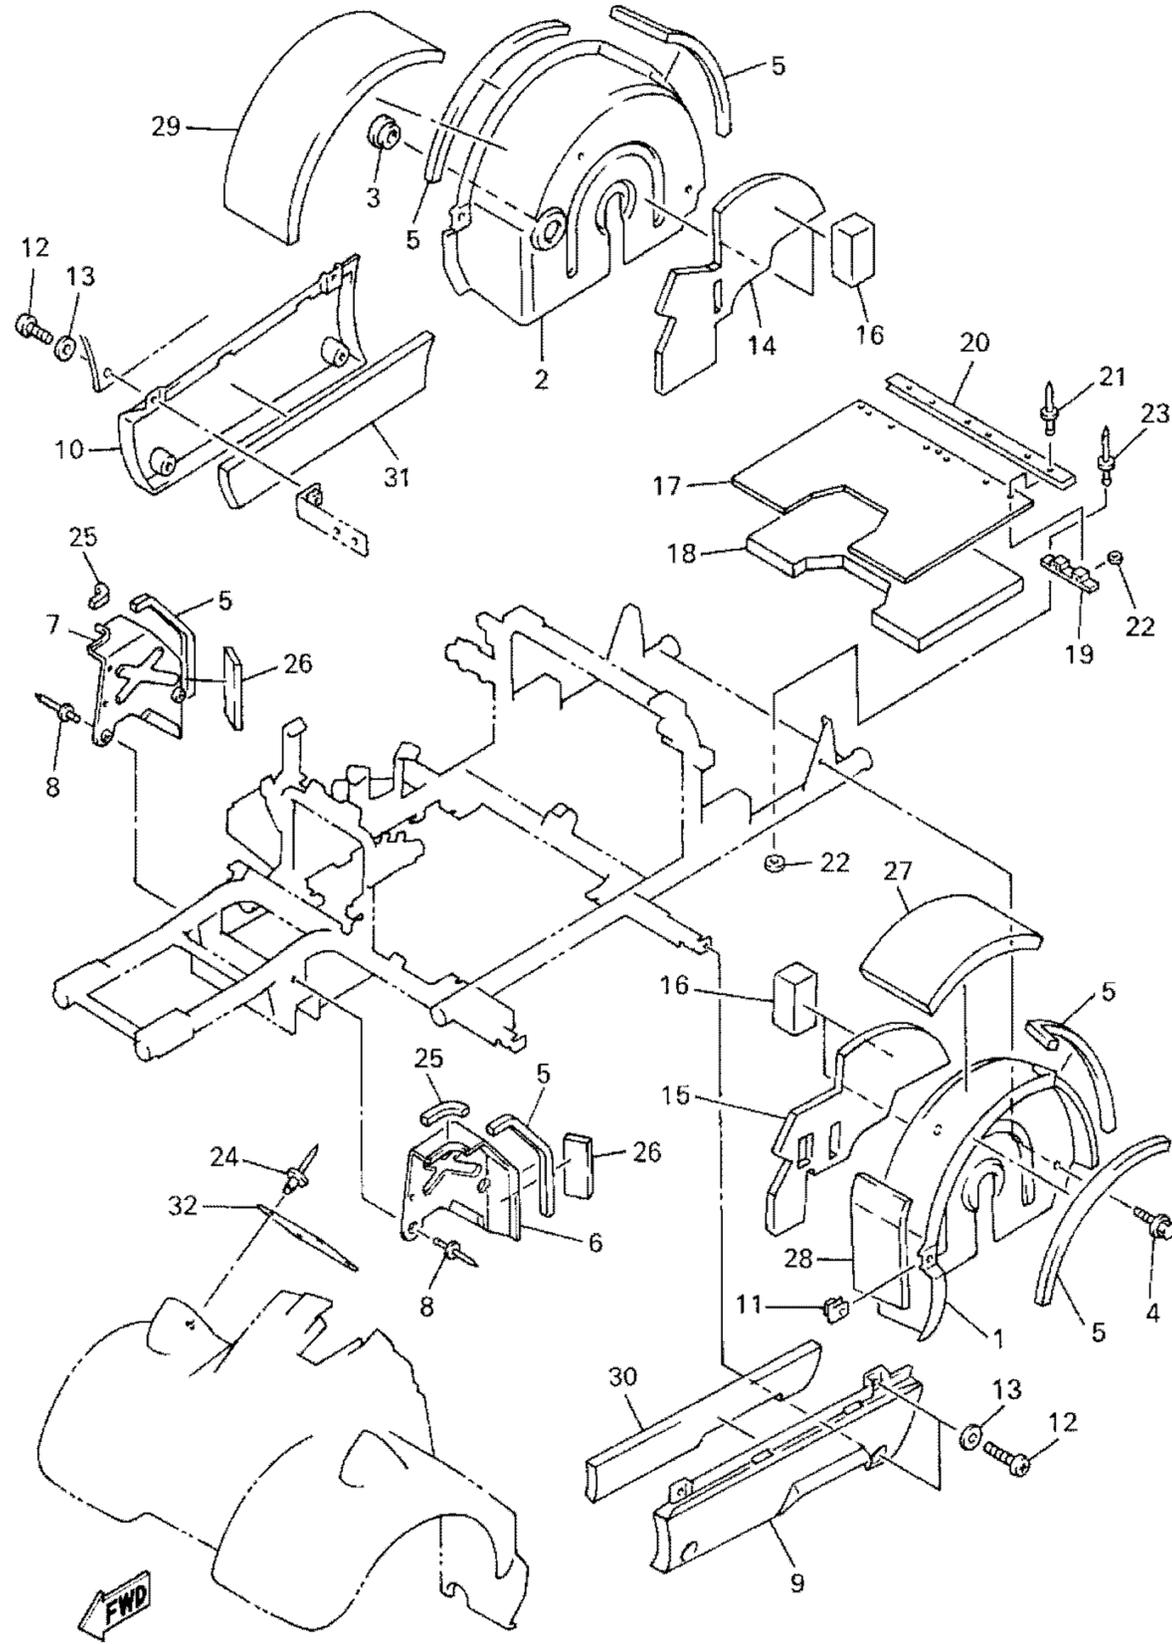

JR4010-8220

Fig. 22

Ref. No.	Part No.	Part Name	Remarks
28	JR4-7826G-02	PAD, BODY PROTECT 4	1 100901ヨリ
29	JR4-7826H-00	PAD, BODY PROTECT 5	1
30	JR4-7826J-01	PAD, BODY PROTECT 6	1 100900マテ
	JR4-7826J-02	PAD, BODY PROTECT 6	1 100901ヨリ
31	JR4-7826K-00	PAD, BODY PROTECT 7	1
32	JR4-21526-00	PLATE, STAY FITTING 1	1
-----			
-----			
-----			
-----			
-----			

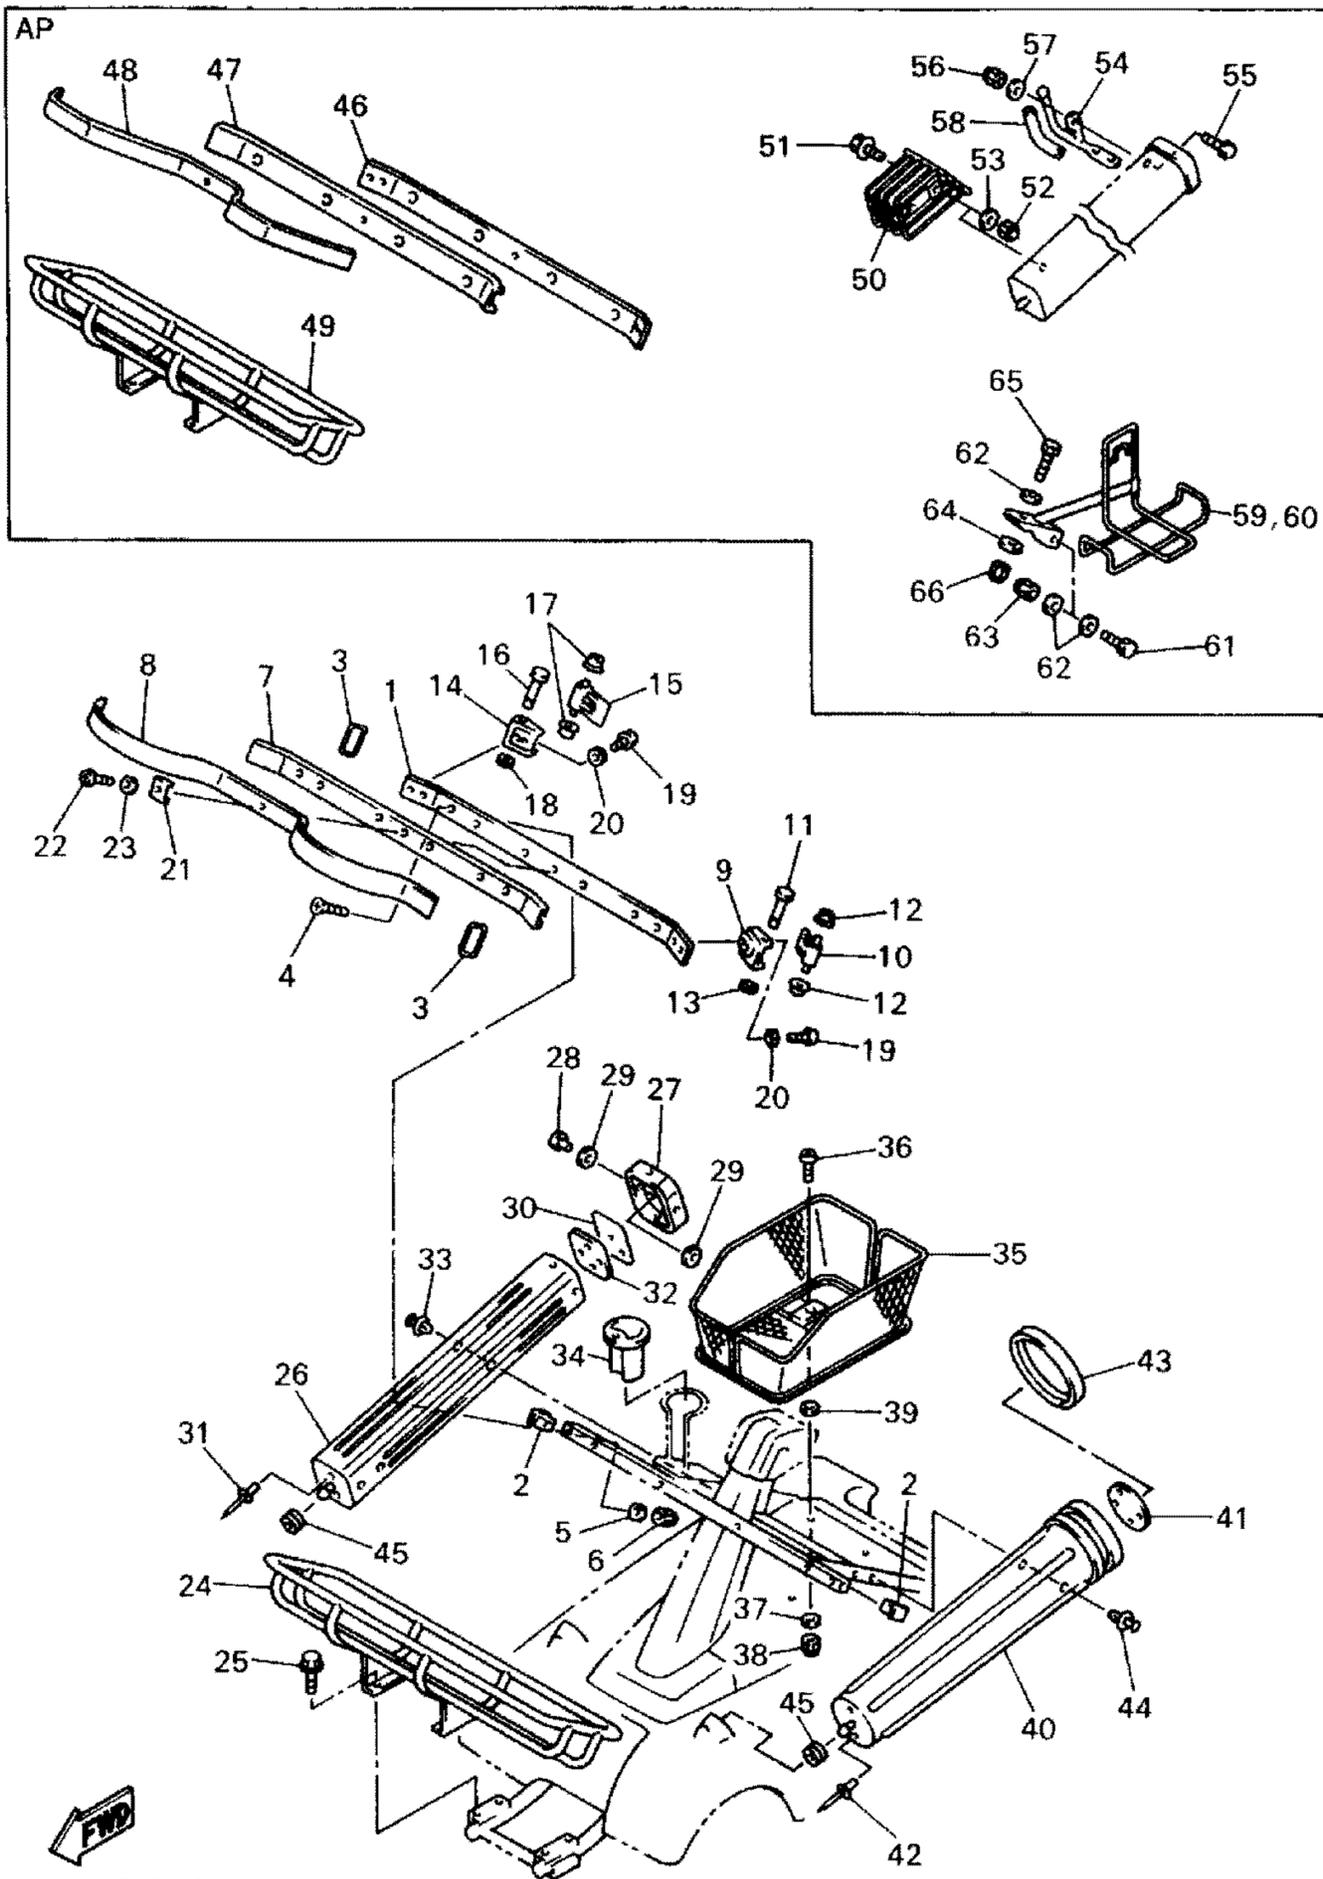


Fig. 23

Ref. No.	Part No.	Part Name	Remarks
1	J45-78351-00	SUPPORT, BAG UPPER	1 100950マテ
	JJ4-78351-00	SUPPORT, BAG UPPER	1 100951ヨリ
2	J45-7836H-00	CAP, BAG SUPPORT	2
3	JJ4-78357-00	HOLDER 1	2 100951ヨリ
4	98707-08035	SCREW, FLAT HEAD	4 100950マテ
	98707-08035	SCREW, FLAT HEAD	6 100951ヨリ
5	90201-08772	WASHER, PLATE	4 100950マテ
	90201-08772	WASHER, PLATE	6 100951ヨリ
6	95304-08800	NUT, CROWN	4 100950マテ
	95304-08800	NUT, CROWN	6 100951ヨリ
7	J45-78356-11	PAD, BAG SUPPORT	1 100950マテ
	JJ4-78356-00	PAD, BAG SUPPORT	1 100951ヨリ
8	J45-78355-00	BAND (L=210CM)	1 100950マテ
		(210X5X0.2CM)	
	J58-78355-00	BAND (L=230CM)	1 100951ヨリ
		(230X5X0.2CM)	
9	J17-78157-01	BASE, LOCK	1
10	J17-78368-01	LEVER, LOCK	1
11	J17-78369-00	PIN, LEVER	1
12	90386-06108	BUSH	2
13	99080-05600	CIRCLIP	1
14	J17-78157-01	BASE, LOCK	1
15	J17-78368-01	LEVER, LOCK	1
16	J17-78369-00	PIN, LEVER	1
17	90386-06108	BUSH	2
18	99080-05600	CIRCLIP	1
19	97880-06010	SCREW, PAN HEAD	4
20	92990-06100	WASHER, SPRING	4
21	J38-78367-00	PLATE, ANCHOR	1
22	98980-06012	SCREW, BIND	1



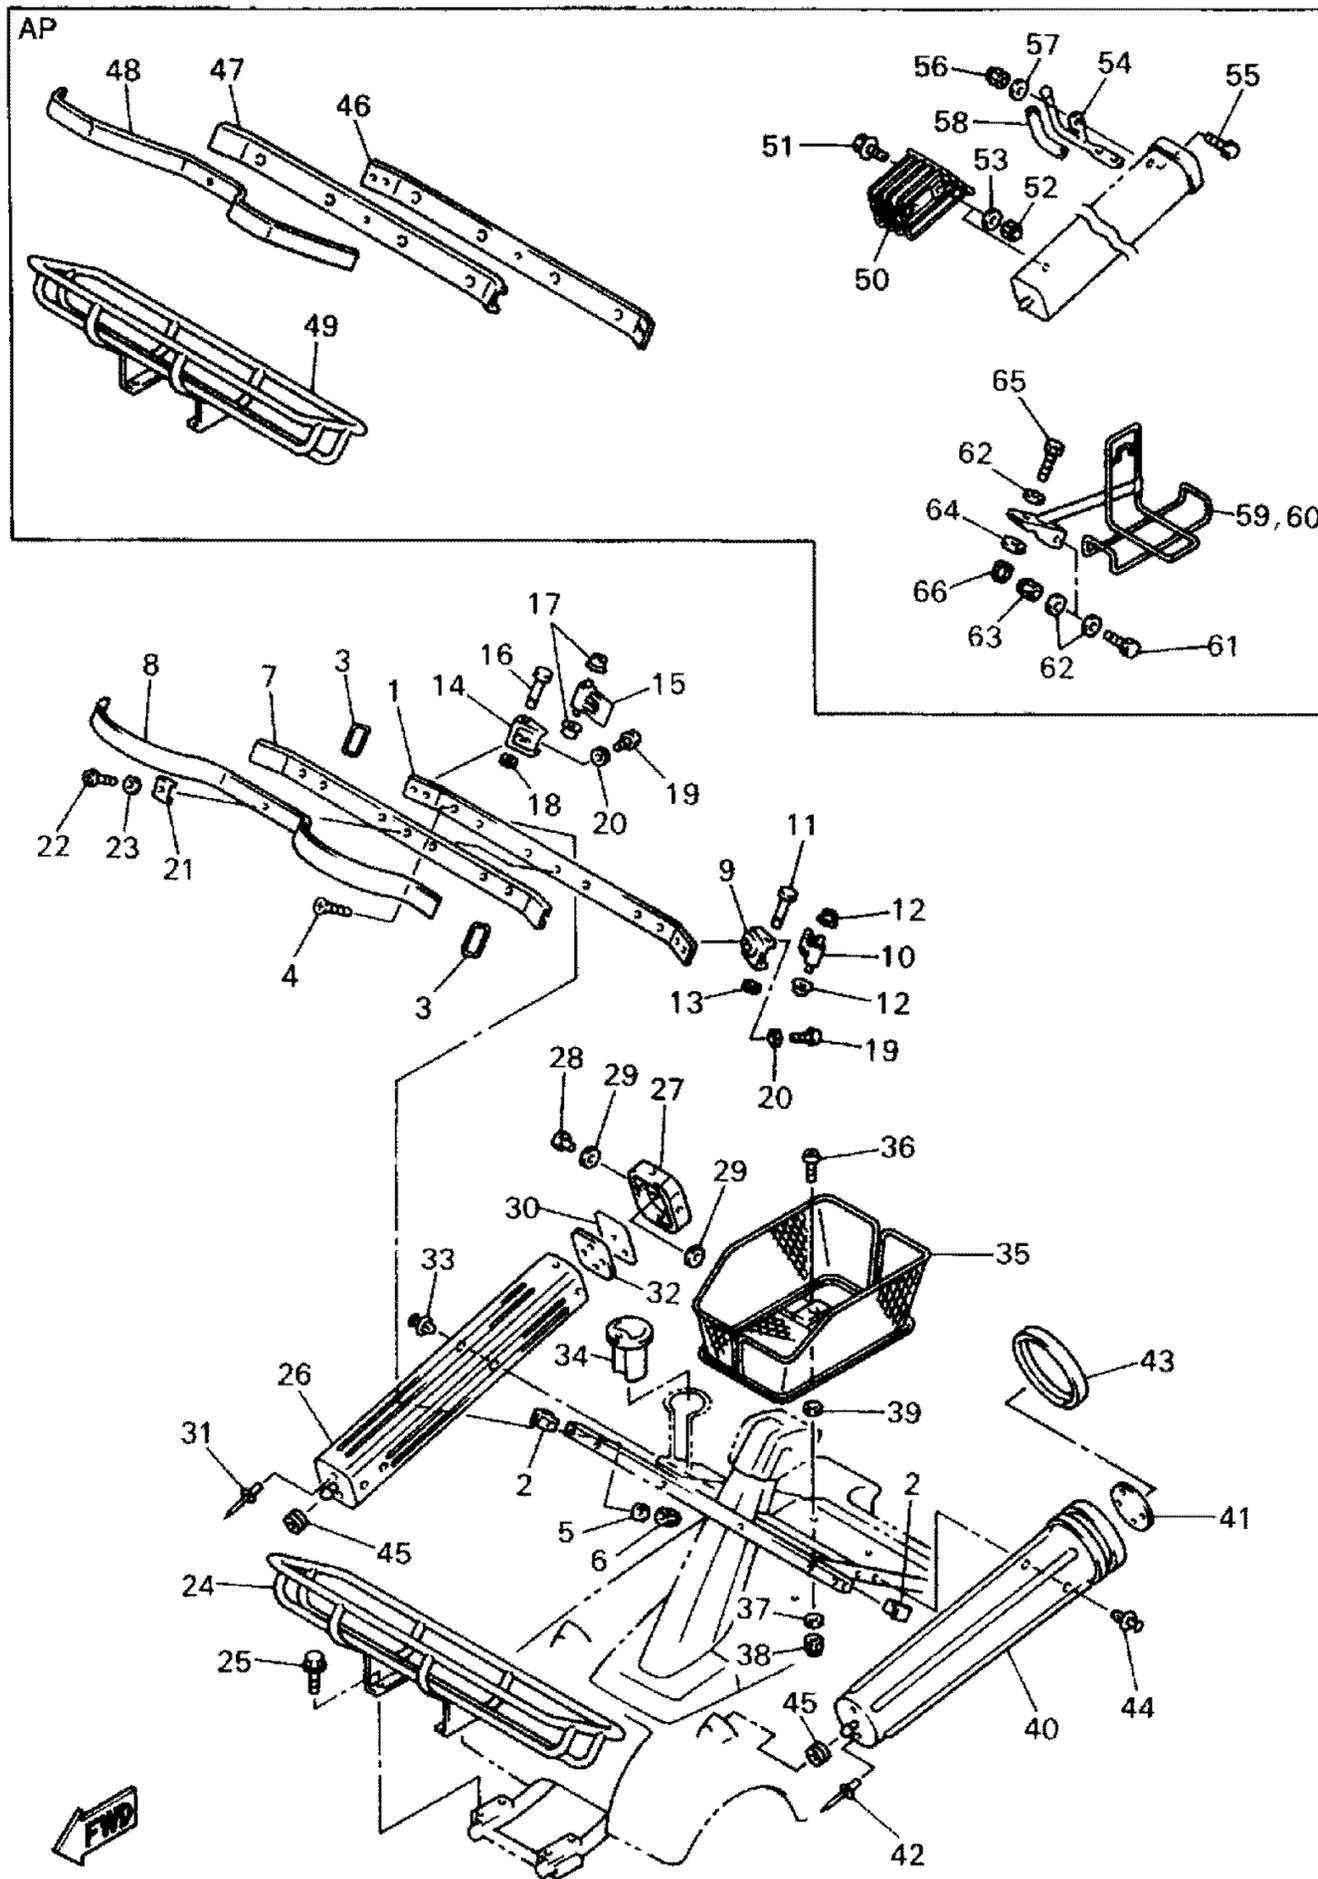


Fig. 23

Ref. No.	Part No.	Part Name	Quantity	Remarks
23	92990-06100	WASHER, SPRING	1	
24	JR4-78352-00	SUPPORT, BAG LOWER 1 (L=88CM)	1	100950マテ (88X31X9.7CM)
	JR4-78352-02	SUPPORT, BAG LOWER 1 (L=104CM)	1	100951ヨリ
25	95890-08016	BOLT, FLANGE	4	
26	JR4-78365-00	CASE	1	
27	J40-78374-00	TRIM, UPPER	1	
28	J18-78373-00	RIVET, COUPLE	4	
29	90201-05033	WASHER, PLATE	8	
30	JR4-78377-00	TRIM, LOWER	1	
31	90267-48085	RIVET, BLIND	2	
32	JR4-78363-00	PROTECTOR	1	100951ヨリ
33	90269-08082	RIVET	1	
34	J11-78287-00	ASH TRAY	1	
35	JR4-7810A-00	FRONT STORAGE COMP.	1	
36	98980-06020	SCREW, BIND	4	
37	90201-06071	WASHER, PLATE	4	
38	95707-06300	NUT, NYLON	4	
39	90202-06124	WASHER, PLATE	4	
40	JR4-78389-00	CASE 2	1	
41	JR4-7835N-00	PLATE, BACK-UP	1	
42	90267-48085	RIVET, BLIND	2	
43	JJ4-78374-00	TRIM, UPPER	1	
44	90269-08082	RIVET	1	
45	90480-13398	GROMMET	2	
46	JJ4-78351-00	SUPPORT, BAG UPPER	1	AP 100950マテ
	JJ4-78351-00	SUPPORT, BAG UPPER	1	AP 100951ヨリ
47	JJ4-78356-00	PAD, BAG SUPPORT	1	AP 100950マテ
	J45-78356-11	PAD, BAG SUPPORT	1	AP 100951ヨリ




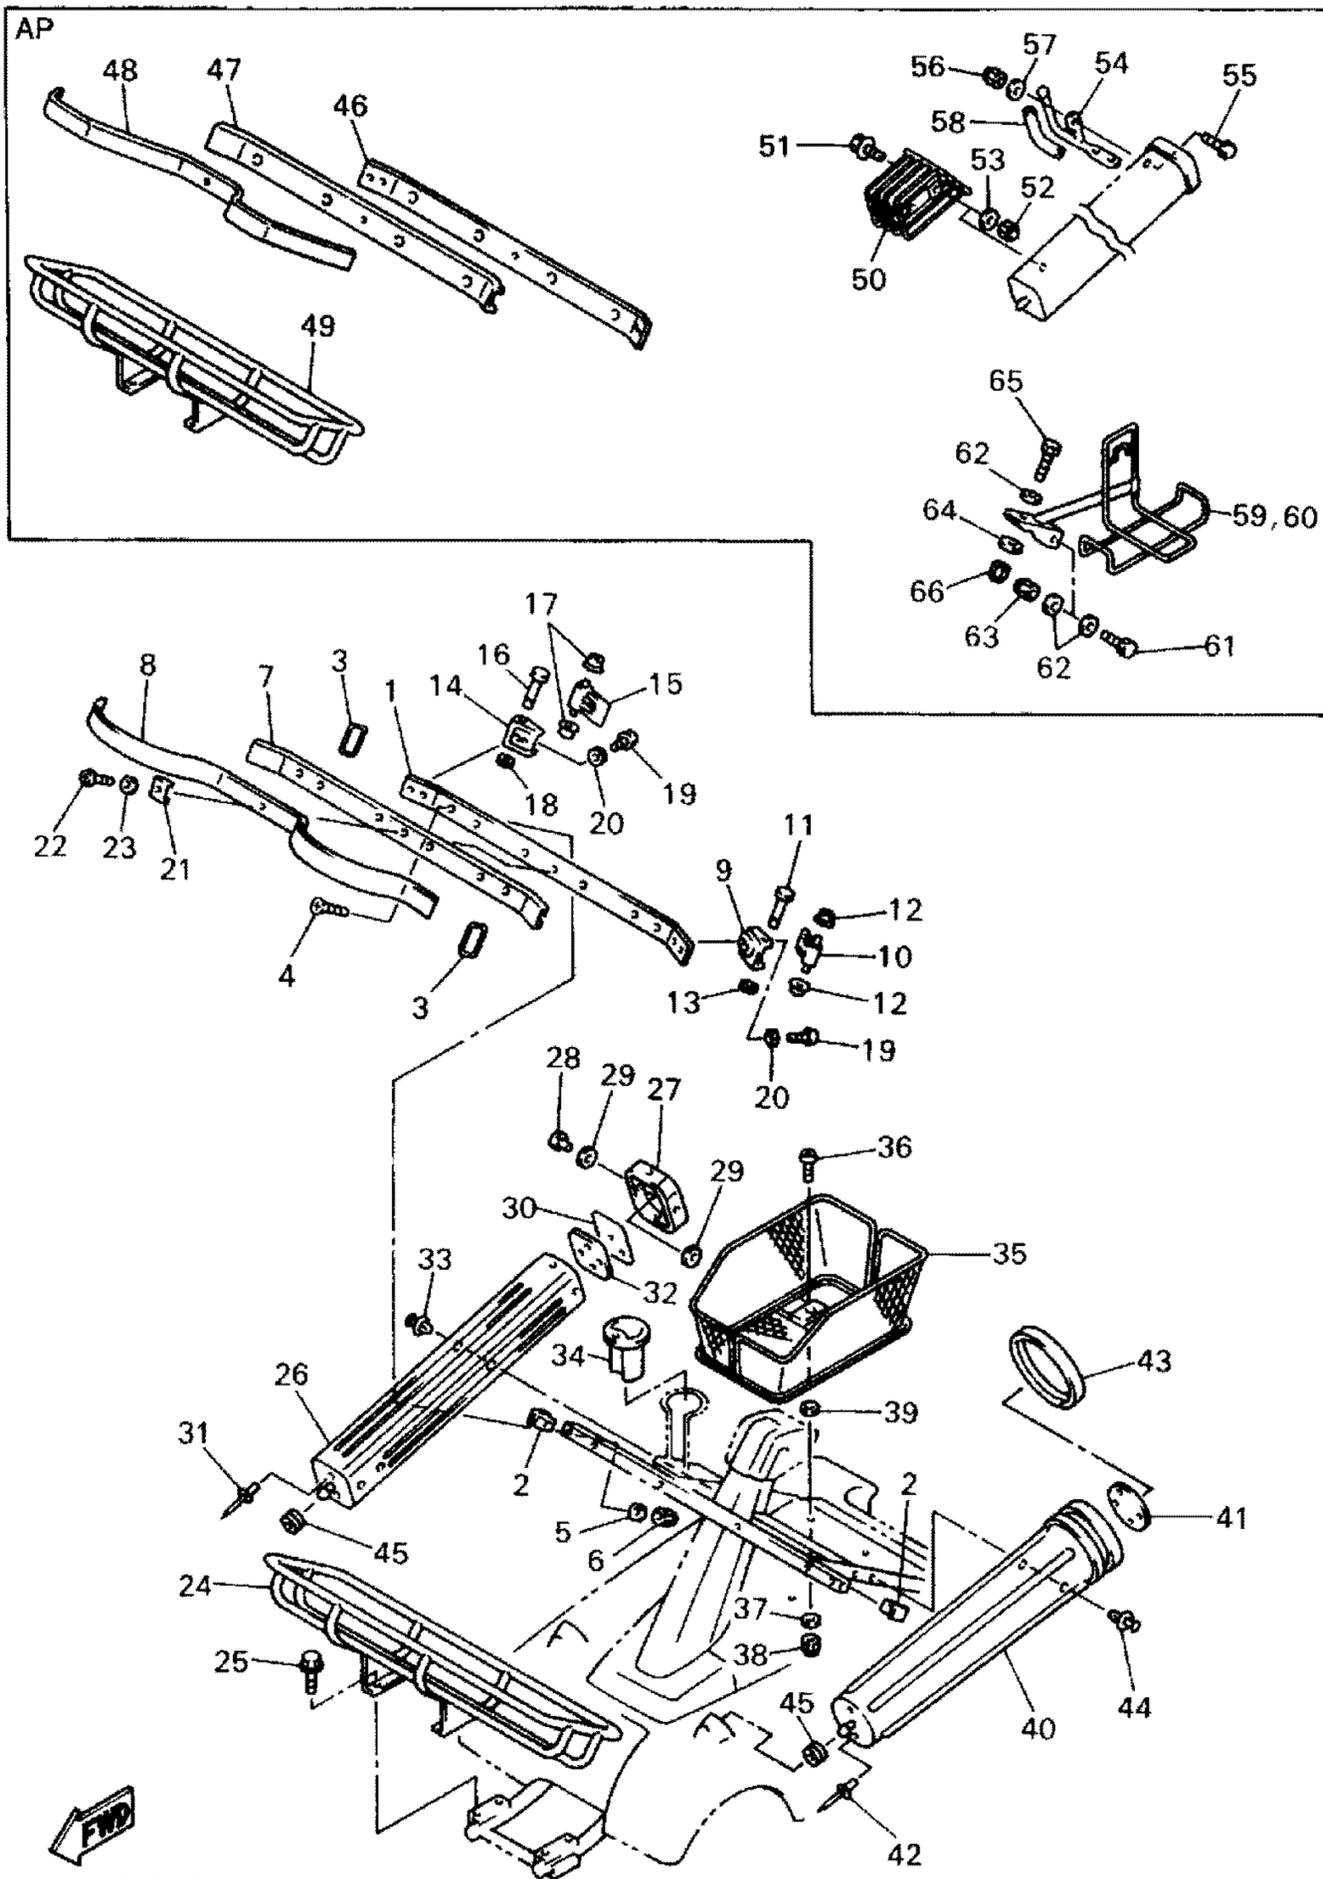


Fig. 23

Ref. No.	Part No.	Part Name	Remarks
48	J58-78355-00	BAND (L=230CM)	1 AP 100950マテ
	J45-78355-00	BAND (L=210CM)	1 AP 100951ヨリ (210X5X0.2CM)
49	JN2-78352-00	SUPPORT, BAG LOWER 1 (L=104CM)	1 AP 100950マテ (104X31X9.7CM)
	JN4-78352-10	SUPPORT, BAG LOWER 1	1 AP 100951ヨリ
50	J45-78391-01	TRAY 1	1 AP
51	90119-06079	BOLT, WITH WASHER	1 AP
52	95304-06800	NUT, CROWN	1 AP
53	90201-06050	WASHER, PLATE	2 AP
54	J45-78343-00	RETAINER	1 AP
55	90149-06298	SCREW	3 AP
56	95304-06800	NUT, CROWN	3 AP
57	92903-06200	WASHER, PLAIN	3 AP
58	J45-78316-00	DAMPER	1 AP
59	JR4-7834B-00	CARRIER 1	1 AP
60	JR4-7834C-00	CARRIER 2	1 AP
61	92014-08035	BOLT, BUTTON HEAD	2 AP
62	92990-08200	WASHER, PLAIN	6 AP
63	95304-08800	NUT, CROWN	2 AP
64	90201-08772	WASHER, PLATE	2 AP
65	97004-08045	BOLT	2 AP
66	95304-08800	NUT, CROWN	2 AP




Fig. 24

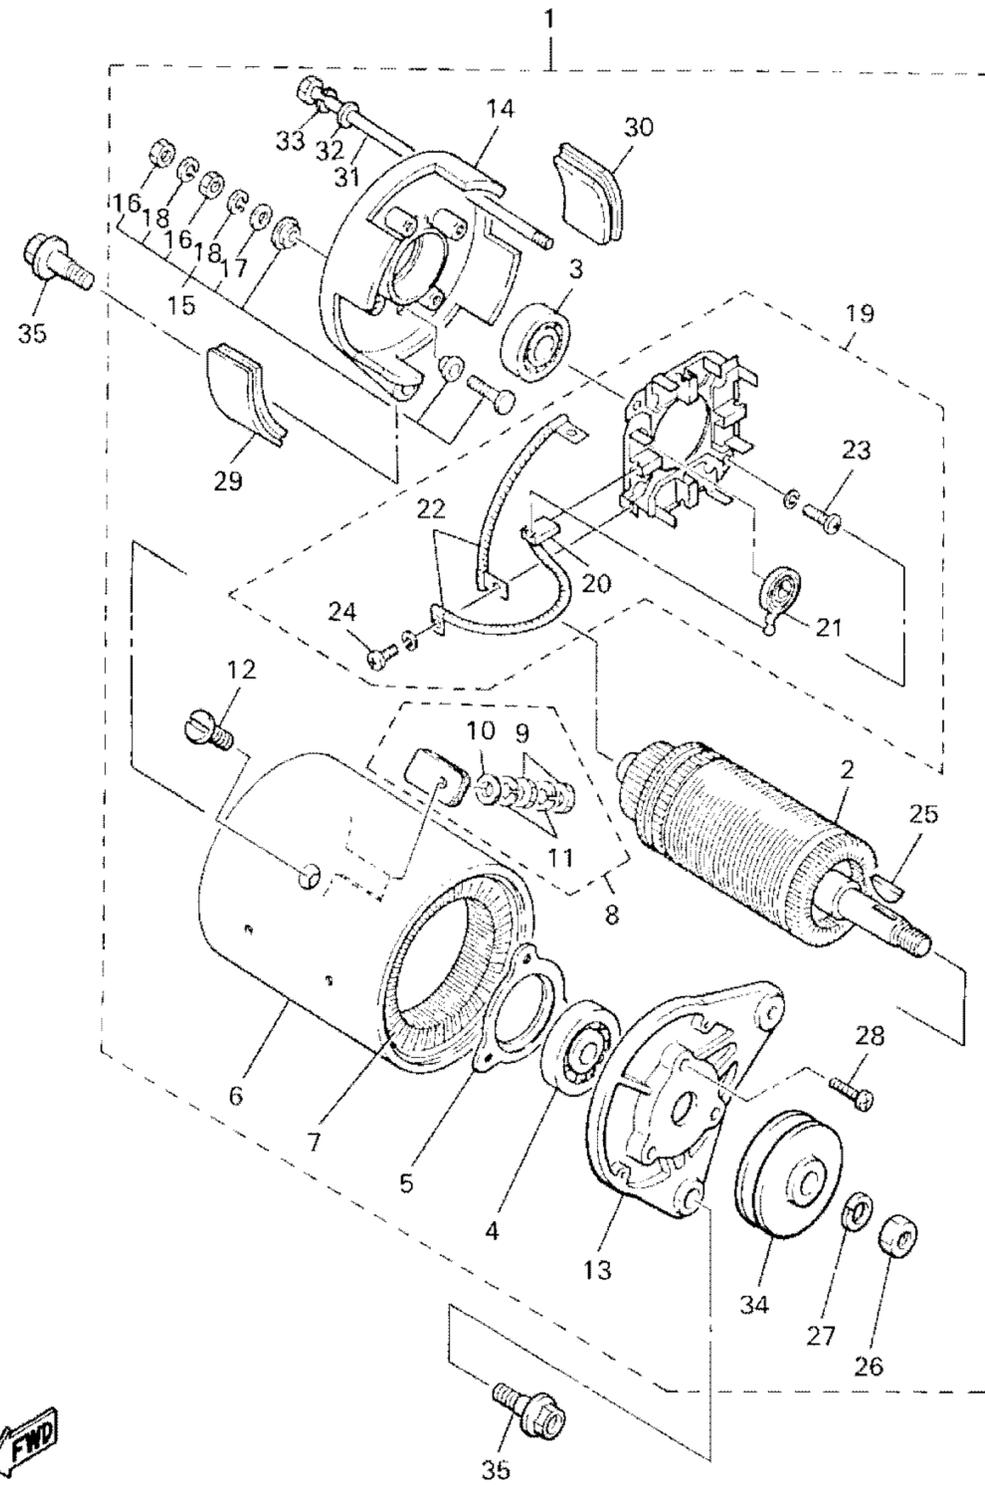

JR4010-8240

Ref. No.	Part No.	Part Name		Remarks
1	JR4-81100-00	STARTER GENERATOR ASSY	1	
2	J10-81150-10	ARMATURE ASSY	1	
3	J10-81157-10	BEARING 1 (6202 SD)	1	
4	J10-81158-10	BEARING 2 (6203 SD)	1	
5	J10-81159-10	HOLDER, BEARING	1	
6	JN7-81110-00	STATOR ASSY	1	
7	JN7-81160-00	FIELD COIL ASSY	1	
8	J10-81148-10	SCREW SET 4	2	
9	95302-06600	NUT	4	
10	92902-06600	WASHER, PLATE	2	
11	92902-06100	WASHER, SPRING	4	
12	J10-81146-10	SCREW 2	4	
13	J38-81165-10	BRACKET, STARTER GENERATOR 1	1	
14	J10-81166-10	BRACKET, STARTER GENERATOR 2	1	
15	J10-81147-10	SCREW SET 3	2	
16	95302-06600	NUT	4	
17	92902-06600	WASHER, PLATE	2	
18	92902-06100	WASHER, SPRING	4	
19	J10-81119-10	BRUSH HOLDER ASSY	1	
20	J10-81111-10	BRUSH	4	
21	J10-81113-10	SPRING, BRUSH	4	
22	J10-81115-10	WIRE, LEAD	2	
23	98502-05016	SCREW, PAN HEAD	2	
24	98502-04010	SCREW, PAN HEAD	4	
25	J38-81163-10	KEY	1	
26	95302-14600	NUT	1	
27	92902-14100	WASHER	1	
28	98502-05018	SCREW, PAN HEAD	3	

Fig. 24

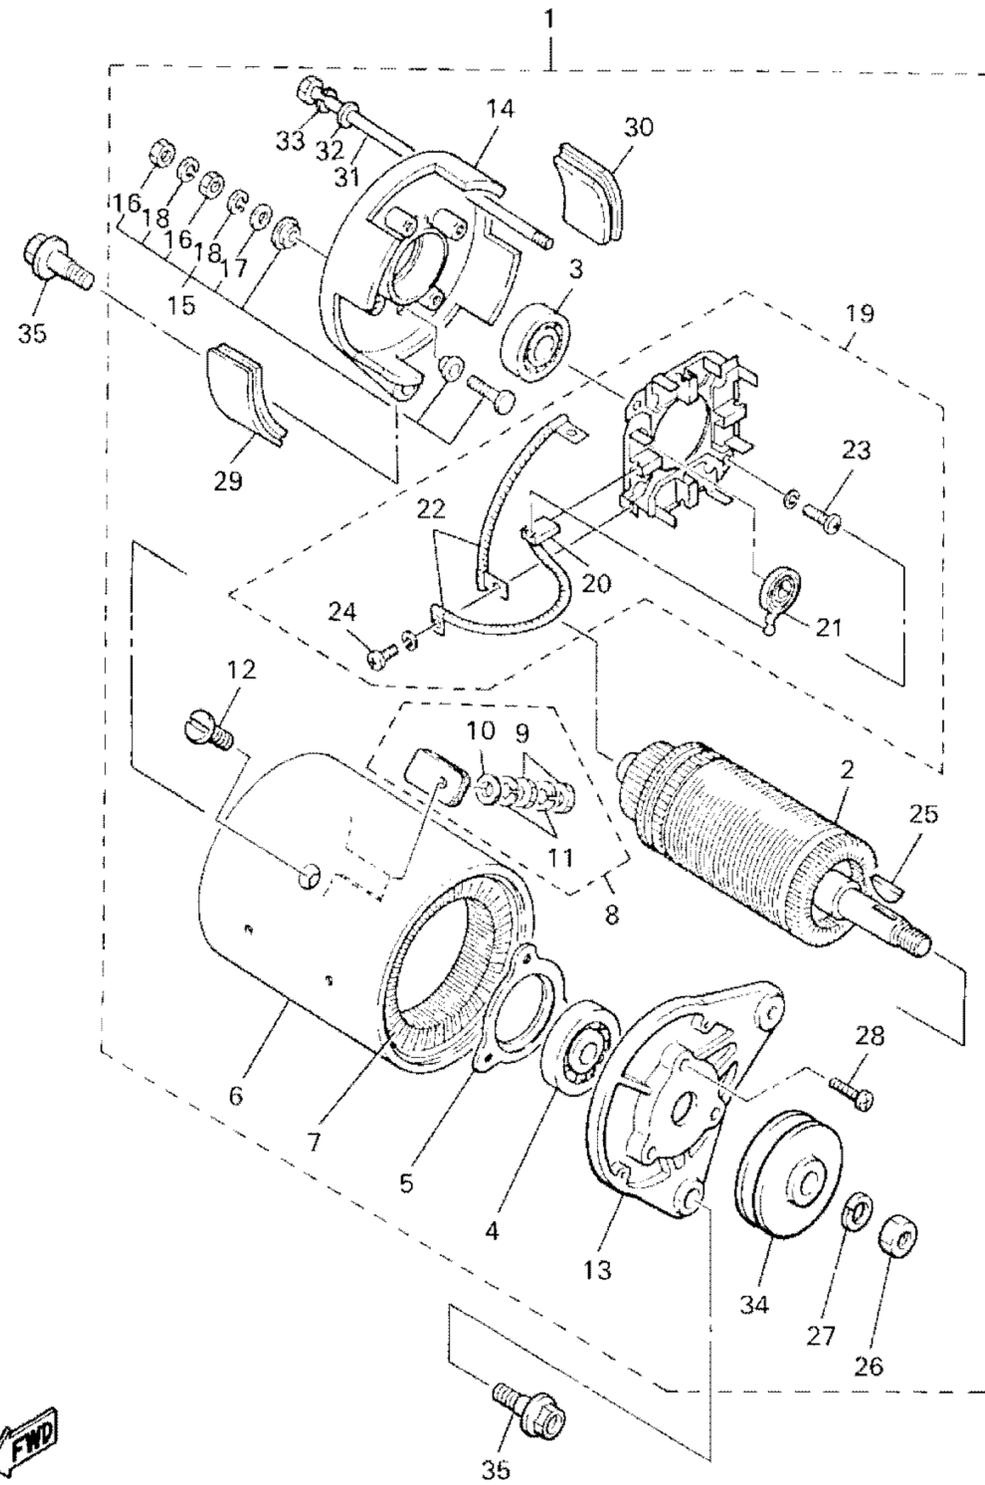

Ref. No.	Part No.	Part Name		Remarks
29	J10-81129-10	COVER, BRUSH	3	
30	J10-81139-10	COVER, BRUSH 2	1	
31	J10-81145-10	SCREW 1	2	
32	92902-06600	WASHER, PLATE	2	
33	92902-06100	WASHER, SPRING	2	
34	J45-81161-10	PULLEY	1	
35	95827-12025	BOLT, FLANGE	2	



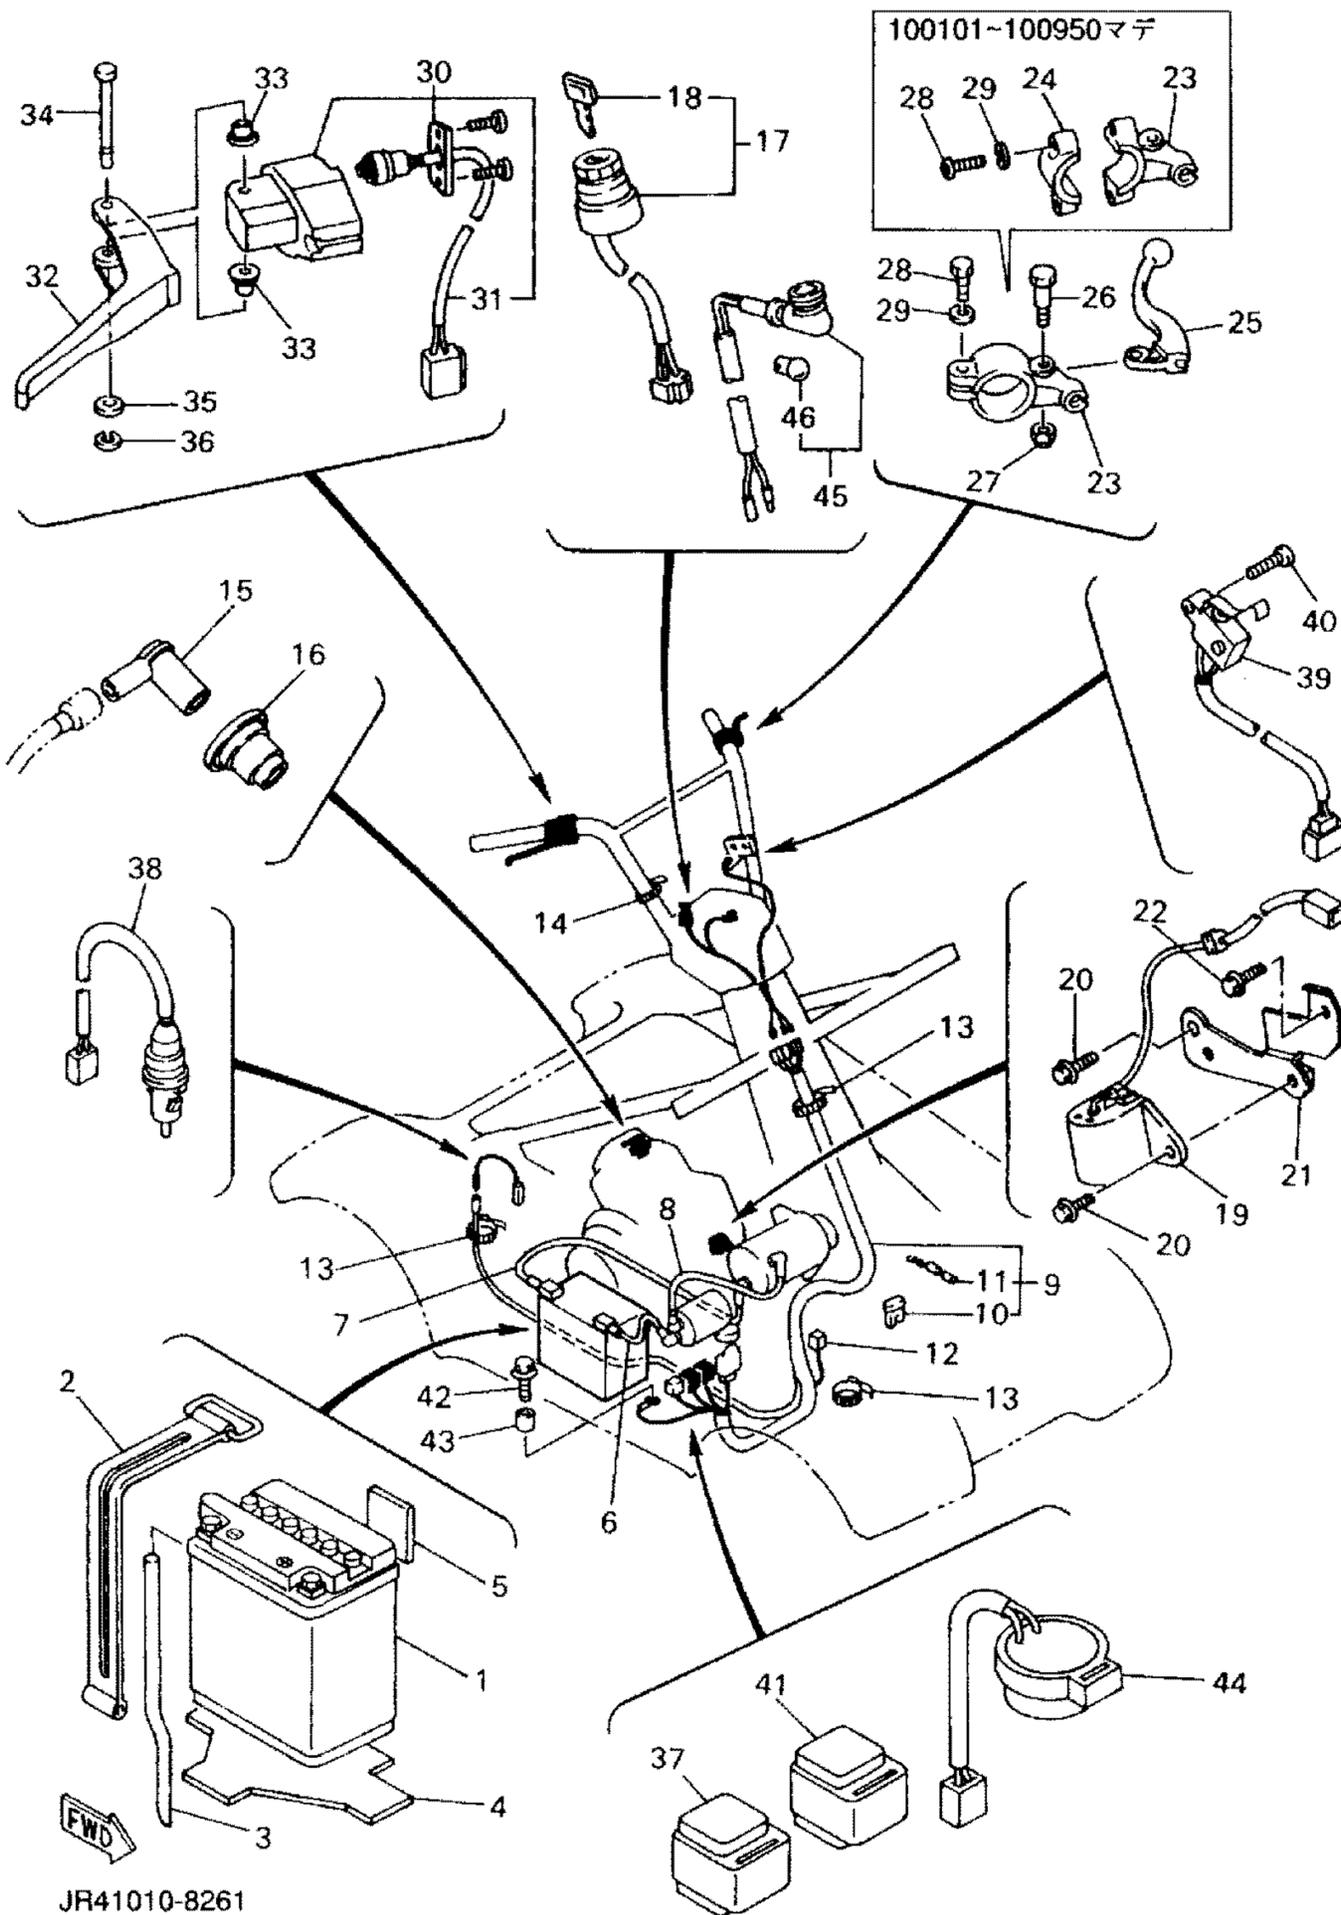


Fig. 26

Ref. No.	Part No.	Part Name	Remarks
1	J45-82110-T0	BATTERY ASSY (YB14L-A2)	1
2	371-82131-00	BAND, BATTERY	1
3	90445-08417	HOSE (L270)	1
4	J45-82122-10	SEAT, BATTERY	1
5	J45-82123-00	SEAT, BATTERY	1
<hr/>			
6	JR4-82115-00	WIRE, PLUS LEAD	1
7	JR4-82116-00	WIRE, MINUS LEAD	1
8	JR4-82117-00	WIRE, LEAD	1
9	JR4-82590-00	WIRE HARNESS ASSY	1
10	42X-82151-00	FUSE (10A-BL)	1
<hr/>			
11	3K7-81980-00	DIODE ASSY	1
12	J44-81980-60	DIODE ASSY	1
13	437-83936-11	BAND, SWITCH CORD	3
14	437-83936-01	BAND, SWITCH CORD	2
15	8K1-82370-20	PLUG CAP ASSY (WITH RESISTOR)	1
<hr/>			
16	JE8-82372-00	SEAL, PLUG CAP	1
17	J45-82510-00	MAIN SWITCH ASSY	1
18	J44-82511-00	KEY, MAIN SWITCH	1
19	JR4-85720-00	OIL LEVEL GAUGE ASSY	1
20	95827-06012	BOLT, FLANGE	2
<hr/>			
21	JR4-85724-00	CLAMP	1
22	90105-066A1	BOLT, FLANGE	2
23	38V-82911-00	HOLDER, LEVER 1	1 100950マデ
	214-82911-01	HOLDER, LEVER 1	1 100951ヨリ
24	38V-82913-00	HOLDER, LEVER LOWER 1	1
<hr/>			
25	23X-83912-00	LEVER 1	1
26	90109-06799	BOLT	1 100950マデ
	90109-06798	BOLT	1 100951ヨリ

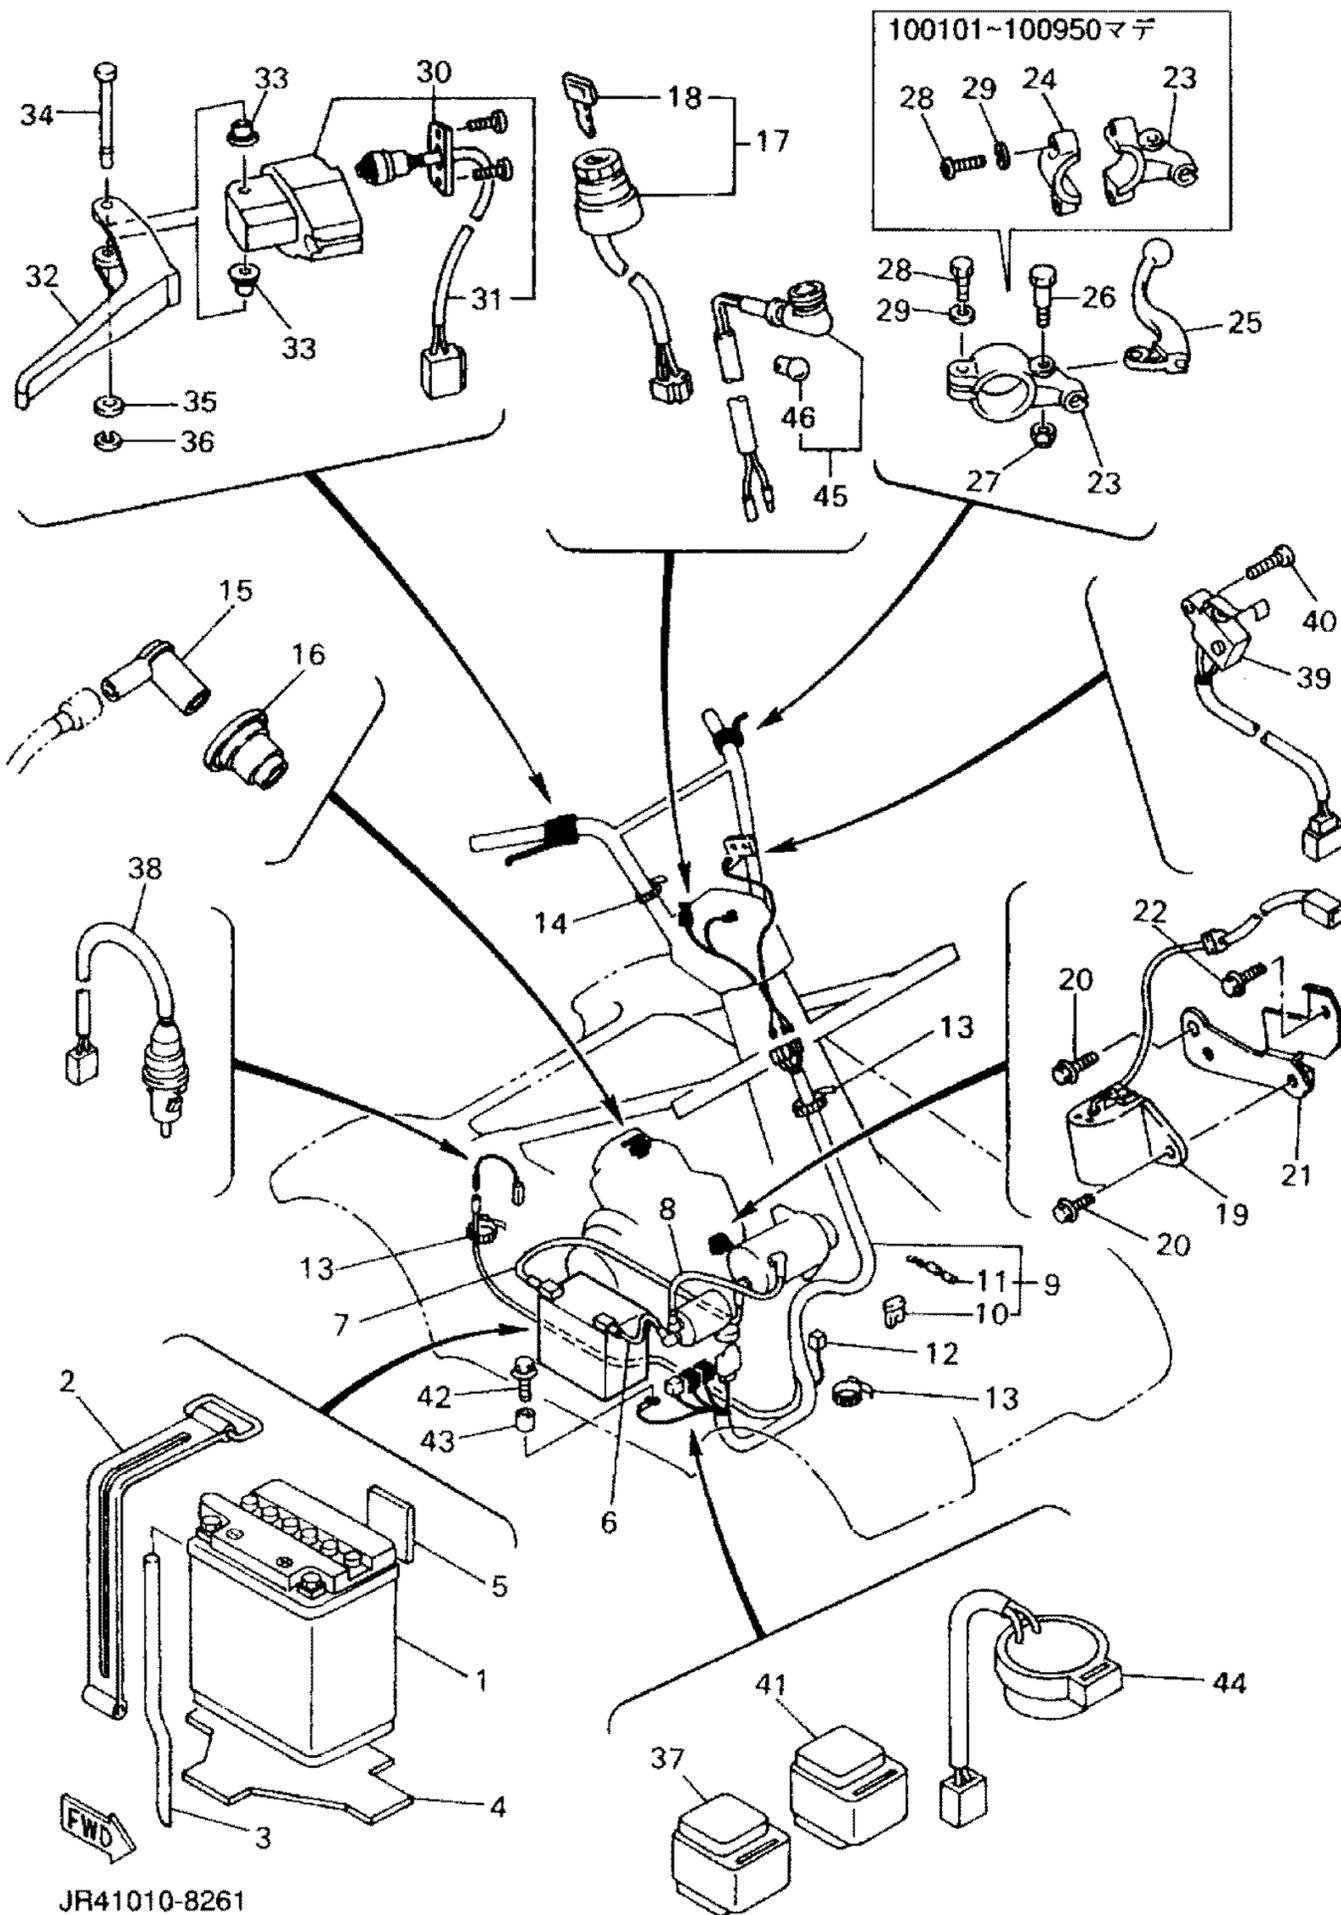


Fig. 26

Ref. No.	Part No.	Part Name	Remarks
27	95607-06100	NUT, U	1
28	98507-05018	SCREW, PAN HEAD	2 100950マデ
	97007-06022	BOLT	1 100951ヨリ
29	92907-05100	WASHER, SPRING	2 100950マデ
	92907-06100	WASHER, SPRING	1 100951ヨリ
30	JJ4-83976-04	SWITCH, HANDLE 1	1
31	JJ4-83653-00	WIRE, LEAD	1
32	JN1-42138-00	LEVER, THROTTLE	1 100950マデ
	J45-42138-00	LEVER, THROTTLE	1 100951ヨリ
33	85G-83956-00	CAP 1	2
34	8R6-8399F-00	SHAFT	1
35	92906-05200	WASHER, PLAIN	1
36	99080-04600	CIRCLIP	1
37	27V-81940-02	STARTER RELAY ASSY	1 タテイシ
38	JR4-82617-00	SWITCH	1
39	JR4-82503-00	SWITCH, ALARM	1
40	98580-04016	SCREW, PANHEAD (+)	1
41	2NL-81950-92	RELAY ASSY	1
42	90109-06723	BOLT	1
43	90387-066M3	COLLAR	1
44	JR4-83383-00	BUZZER	1
45	JR4-83530-00	PILOT LIGHT ASSY	1
46	123-83516-21	.BULB (12V-3.4W)	1